

6.8 Main battery

Info: The following steps are intended to solve issues with main battery as single part. If the scooter shows an [error code \(chapter 5.2\)](#) or [does not recognize \(chapter 6.3\)](#) the main battery, please check the referred chapter first and follow the given instructions.

6.8.1 Main battery LED is not working

1. Press the button on below the main battery for at least 15 seconds to reset the LED
2. When the reset is successful, the battery will start flashing several times
3. Do a final check by putting the battery into the charger and check if the LED is seen.
4. If the LED is not reacting at all, replace the main battery (BAT-14-01-001-01)

6.8.2 Main battery is not charging in one charger

1. Put the main battery in a secondary charger
2. If the main battery is charged replaced the defective charger (CHR-14-02-001-01). In this case the main battery is functional with the scooter.
3. If the main battery is not charging replace the main battery (BAT-14-01-001-01). In this case the main battery is also not functional with the scooter.