

Part #501167-001

Product Manual:

Rescue & Retrieval Tripods
#RT07 & #P054




PELSUE[®]
ISO 9001 Certified

T.A. Pelsue Company

2500 South Tejon Street


Englewood, Colorado, USA 80110

Tel. 800-525-8460 or 303-936-7432

Fax. 303-934-5581

Internet: www.pelsue.com

Email: sales@pelsue.com

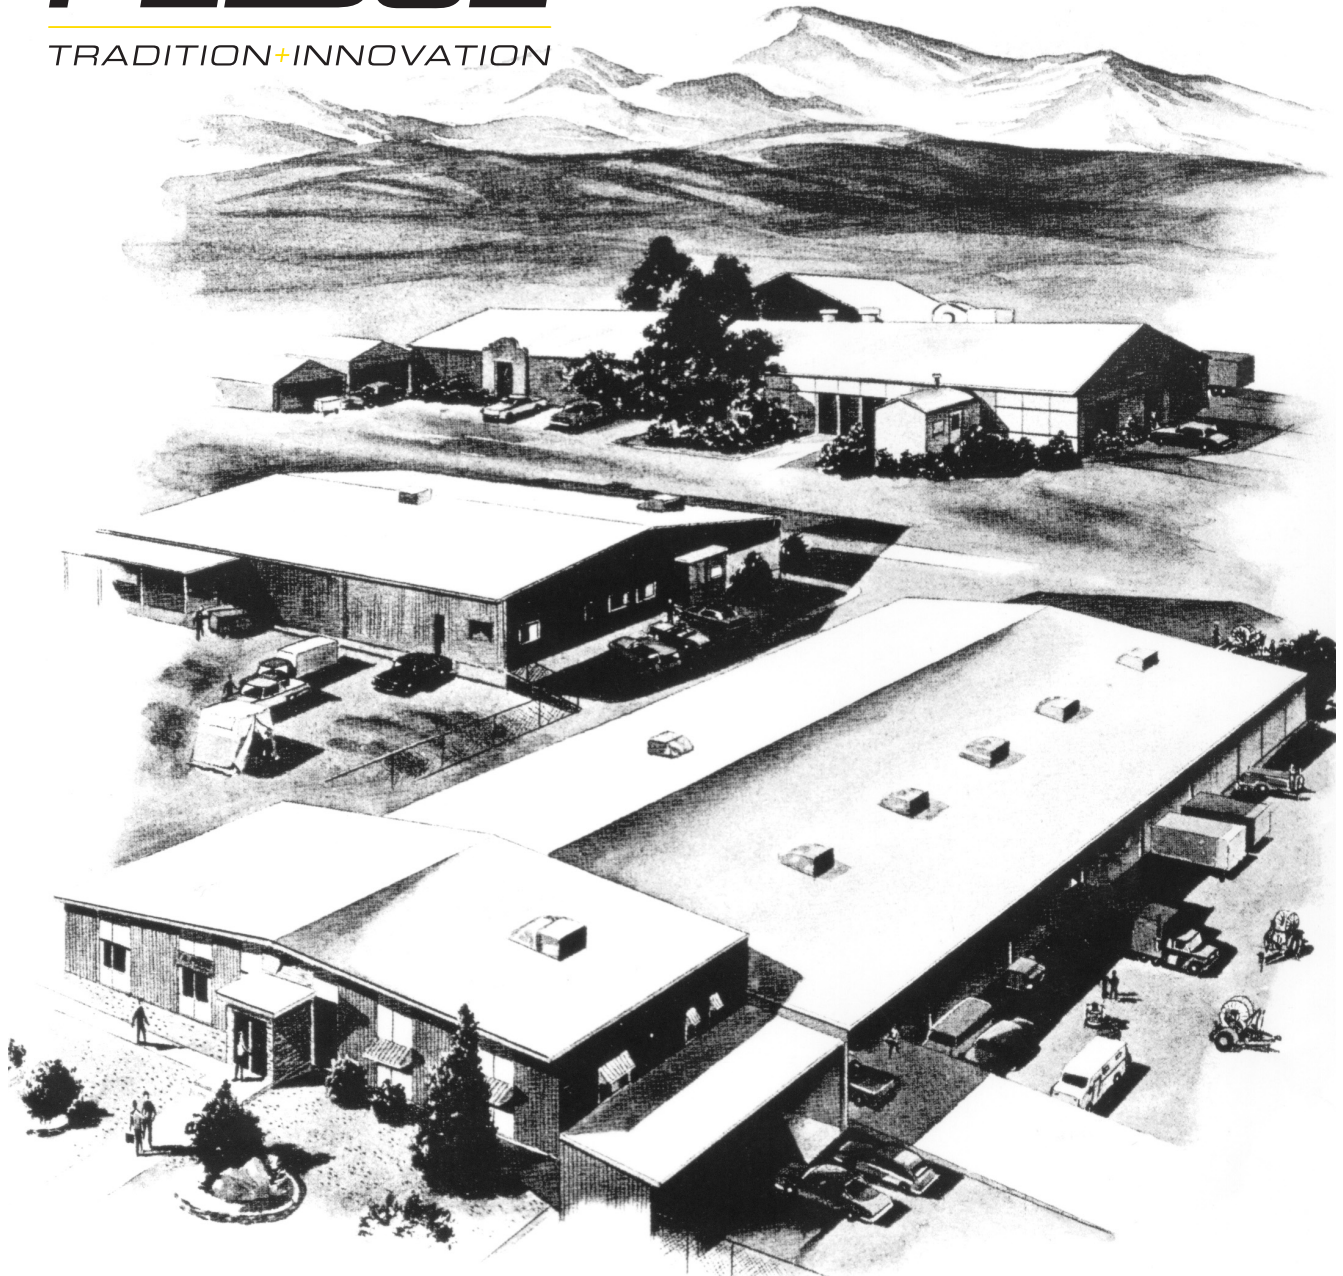

Since our inception in 1963 – the T.A. Pelsue Company has designed and manufactured high quality equipment to improve the personnel efficiency and working conditions in various underground, confined, and outdoor areas.

Founded by T. Allen Pelsue, the company has established a continuing reputation for excellence in the production of fine products for a broad spectrum of industry throughout the world.

Now, in our second generation of family direction, continued commitment to innovation and quality makes Pelsue a leading source of equipment for many types of confined spaces. We specialize in safety, retrieval, fall arrest, ventilation, cable placing, splicing, and maintenance nationally and abroad. With more than 70,000 square feet of facilities available, Pelsue continues the dedication that has made us pre-eminent in this field.

Contents

Section	Description	Page #
1.0	General Information	5
1.1	Quality Policy	
1.2	Warranty	
2.0	Introduction & Product Information	7
2.1	Serial Number	
3.0	Configuration & Assembly	8
4.0	Safety	9
4.1	Warning Statements	
4.2	Safety Alert Symbol	
4.3	General Safety Information	
4.4	Operating Safety	
4.5	Maintenance Safety	
4.6	New Operator Safety Information	
5.0	Product Operation	12
5.1	Product Description & Capabilities	
5.2	Product Installation & Set-Up	
6.0	Compliance & Capacity	18
7.0	Maintenance & Inspection	19
7.1	Maintenance	
7.2	Inspection	
7.3	Inspection Log	
8.0	Storage	22
9.0	Contact Information	22

T.A. Pelsue Company

Quality Policy

OUR GOAL IS THE PURSUIT OF NEVER-ENDING IMPROVEMENT IN PRODUCT QUALITY AND BUSINESS SYSTEMS.

METHODS TO BE EMPLOYED IN ATTAINING THIS GOAL WILL INCLUDE NEW PRODUCT QUALITY PLANNING, EMPLOYEE TRAINING, AND UTILIZATION OF EMPLOYEE INVOLVEMENT GROUPS TO SOLVE PROBLEMS.

IN AN INCREASINGLY COMPETITIVE MARKETPLACE, ENSURING CUSTOMER SATISFACTION IS ONE OF THE DIFFERENTIATORS THAT SETS YOU APART FROM THE PACK AND YIELDS A COMPETITIVE ADVANTAGE.

THEREFORE, WE WILL SUPPORT TOTAL CUSTOMER SATISFACTION BY IMPLEMENTING THE **ISO 9001 QUALITY SYSTEM** AND PROVIDING THE NECESSARY ATMOSPHERE AND TRAINING TO NURTURE THIS CONCEPT THROUGHOUT OUR ORGANIZATION.

WE WILL MAKE EVERY BUSINESS DECISION AS THOUGH THE QUALITY OF THE PART OR SERVICE PROVIDED WAS DESTINED FOR OUR OWN OR OUR FAMILY'S USE. WE WILL ALWAYS THINK **QUALITY FIRST**.

EVERY T.A. PELSUE COMPANY EMPLOYEE IS EXPECTED TO COMMIT TO THIS PHILOSOPHY IN THE PERFORMANCE OF HIS OR HER DAILY TASKS.

QUALITY FIRST!

T.A. PELSUE COMPANY SENIOR MANAGEMENT TEAM

1.2 - Pelsue Product Warranty

PELSUE FALL ARREST/ RETRIEVAL PRODUCT WARRANTY

- Pelsue products are designed and engineered to perform as stated in published specifications. Quality materials and workmanship are used in the manufacture of this product. With regular maintenance and proper care, Pelsue equipment provides many trouble free hours of operation.
- The T.A. Pelsue Company warrants to the buyer that material furnished will conform to specifications and will be free from defects in material and workmanship from the date of shipment to the original buyer, for the period listed by product description at the bottom of this warranty statement.
- In the event of failure of any components of a Pelsue product within the warranty period, service must be pre-approved by the T.A. Pelsue Company and service must be performed by the T.A. Pelsue Company Parts and Service Department in Englewood Colorado, or at the option of T.A. Pelsue Company, service may be performed at any designated service center, which may include any authorized service center for the component manufacture.
- Damage or failure due to misuse, mishandling, or unauthorized modifications will not be covered by this warranty. Unless otherwise agreed, the T.A. Pelsue Company shall repair or replace the defective components within (30) calendar days of notice of failure. T.A. Pelsue Company's obligation hereunder, shall be limited to the repair or replacement of the product or component as set forth above, and shall not include any liability whatsoever for damages caused by such failure, including but not limited to consequential or incidental damages flowing from use or lack of use of product.
- Any replacement, repair, modification, installation or other service performed by the T.A. Pelsue Company shall be warranted by the remainder of the unexpired period of the warranty, or for a period of (90) calendar days, whichever is longer.
- All materials or parts returned for credit or warranty shall be returned only with prior approval, and will be subject to factory inspection before credit is allowed. Parts claimed defective will be replaced upon request and will be invoiced as purchased, subject to credit when the parts claimed to be defective have been received and examined by the factory.
- This warranty is expressly in lieu of all other warranties expressed or implied, including any warranties of merchantability or warranties of fitness for any particular use and all other obligations or liabilities in connection with the sale of this equipment.

<u>Product Description</u>	<u>Warranty Coverage*</u>
• Davits and Bases, Life Guard Systems, Fall Arrest Towers,..... Hitch Mounts, Mounting Sleeves	1 year
• Winches.....	1 year
• Winch Cable and Rope (not including standard wear and..... tear or misuse or improper storage)	3 months
• Rope.....	3 months
• Pelsue Painted or Plated Surfaces.....	1 year

*From date of shipment to original buyer.

T.A. Pelsue Company, 2500 South Tejon Street, Englewood, Colorado 80110, 800-525-8460

2.0 - Introduction & Product Information

Congratulations on your choice of a **Pelsue Rescue & Retrieval Tripod** to compliment your confined space entry/retrieval operation. This equipment has been designed and manufactured to exceed confined space requirements and regulations to meet the needs of the discriminating operator for the efficient and safe entry or retrieval of personnel from a confined space.

Safe, efficient and trouble-free operation and maintenance for your component or system requires that you or anyone else who will be operating, maintaining, or inspecting the equipment, read, understand and follow all the safety, installation, operation, maintenance and inspection instructions contained in this manual. This manual covers Tripod model #P054 and #RT07 as manufactured by Pelsue. Use the Table of Contents or Index as a guide to find specific information.

Keep this manual available for future reference and for usage as a tool in the instruction of new operators. Establish a regular training program for all operators. Establish a regular maintenance and inspection program to keep the equipment in top condition.

⚠ WARNING

This product is a part of a confined space entry/retrieval system for personnel. The user must read, understand and follow the instructions contained in this manual for each component or total system before using this equipment. Establish an appropriate training, maintenance and inspection program for your people and the equipment. Failure to follow these instructions could result in serious injury or death.

2.1 - Serial Number

Product Serial Number

Always give your dealer the serial number of your Pelsue confined space entry/retrieval product when ordering parts or requesting service or other information.

The Serial Number decal is permanently embossed with a serial number. The Serial Number decal will appear as shown below in *Figure 2a* and is located on the sheave equipped leg (see *Figure 2b*). A space has been provided below for recording of the serial number for future reference.

MODEL: **RT07** **P054** (Circle One)

Serial Number: _____

Date of Manufacture (DOM): _____

S/N#	_____
MODEL#	_____
DOM	_____

Figure 2a:
Serial Number Decal

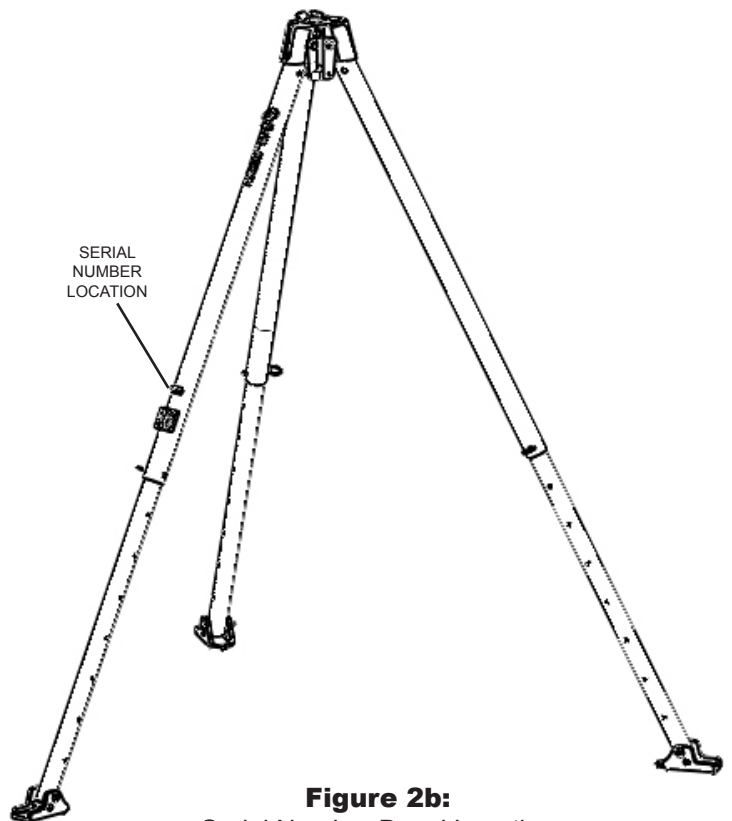


Figure 2b:
Serial Number Decal Location

3.0 - Configuration & Assembly

Upon initial receipt of the Rescue & Retrieval Tripod system, inspect the packaging for any evidence that the product may have been damaged in shipment. While unpacking the product, inspect all of the components for damage. If damage to any of the components is discovered, DO NOT USE THE PRODUCT! Alert the shipping carrier immediately of the damage to the shipment.

Replacement Parts Identification Table (Refer to Figure 3.0a)

Item Number	Part Number	Description
1	500216-003	Foot with Pad, Rescue Tripod
2	500412-350	Pin & Lanyard, Cable Retention
3	500411-002	Pin & Lanyard, Leg Positioning
4	121458-001	O-Ring, Pin Lanyard Retention
5	500238-001	Decal - "Attention - This Structure..."
6	44N-011100	Chain, Restraint, 21' length (Not Shown)
7	121536-002	Quick Link, Chain (Not Shown)

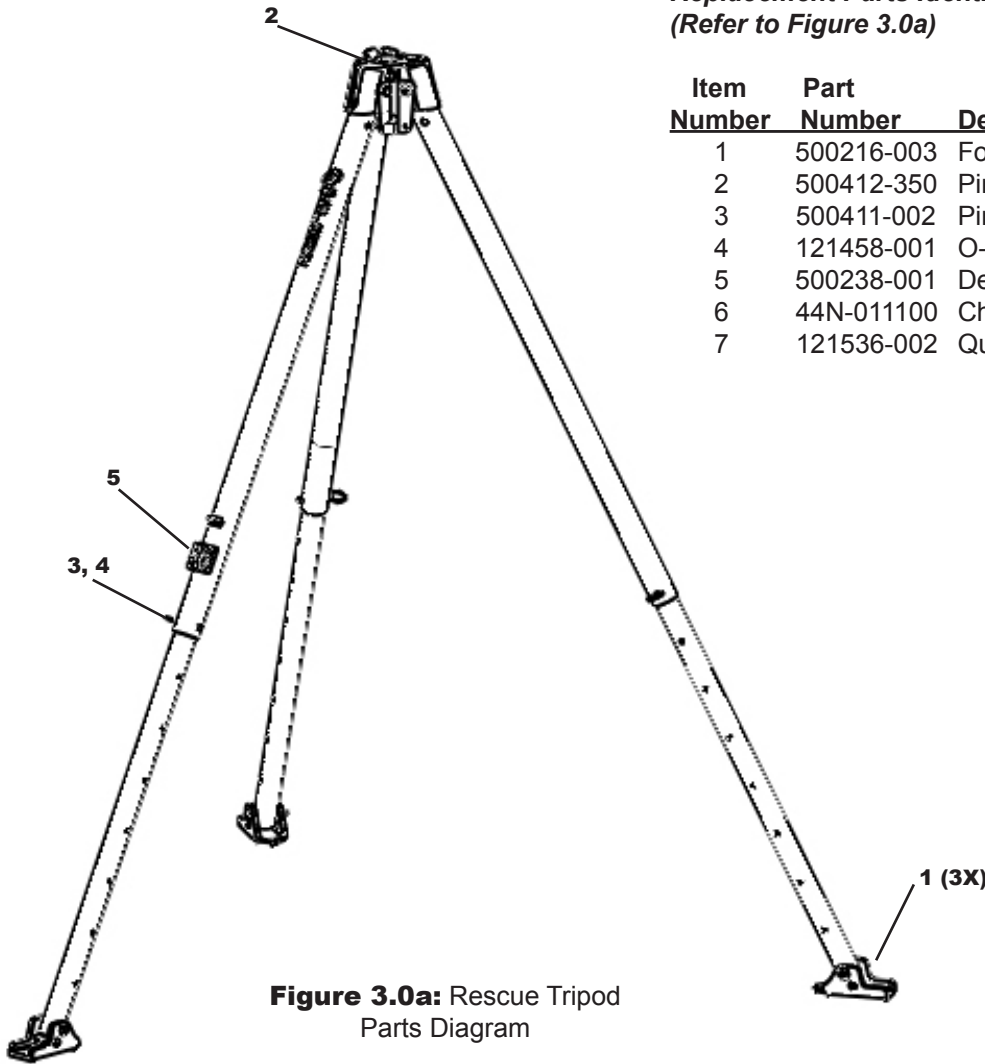


Figure 3.0a: Rescue Tripod Parts Diagram

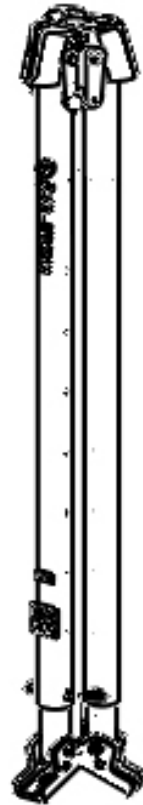


Figure 3.0b: Rescue Tripod Folded Orientation

◆◆◆◆ **ATTENTION** ◆◆◆◆

P/N 500238-001

THIS STRUCTURE IS MAN-RATED WITH A MAXIMUM CAPACITY OF 350 LBS. (159 KG)

ONLY COMPONENTS AND RELATED PARTS SUPPLIED BY PELSUE SHALL BE USED IN CONJUNCTION WITH ITS OPERATION

PRIOR TO EACH USE THE STRUCTURE SHOULD BE SAFETY INSPECTED AND OPERATED IN ACCORDANCE WITH THE WRITTEN INSTRUCTIONS SUPPLIED BY PELSUE

T.A. PELSUE COMPANY
2500 SOUTH TEJON ST.
ENGLEWOOD, CO 80110
www.pelsue.com

DO NOT REMOVE OR DEFACE THIS LABEL

5) #500238-001

Verify that all parts are present before product use.
The Rescue & Retrieval Tripod is shipped fully assembled.

1. Ensure that the product has been shipped with all the necessary components and is in working order

**Refer to parts list above for common replacement parts. If replacement parts are required, they can be ordered from the T.A. Pelsue Company at 800-525-8460.

SIGNAL WORDS:

Note the use of the signal words **DANGER**, **WARNING** and **CAUTION** with the safety messages. The appropriate signal word for each message has been selected using the following guidelines:

- DANGER-** Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations or for hidden or unseen hazards.
- WARNING-** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury and includes obvious and hidden hazards. It may also be used to alert against unsafe practices.
- CAUTION-** Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

You are responsible for the safe operation, maintenance and inspection of your Pelsue Rescue Tripod. You must ensure that anyone who will operate, maintain, inspect or work around the equipment be familiar with the operating and maintenance procedures and related safety information contained in this manual. This manual will take you step-by-step through the workings and capabilities of the Model #P054 & #RT07 Rescue tripods and will alert you to good safety and operating practices while using the system.

Remember, you are the key to safety. Good safety practices not only protect you but also the people around you. Make these practices a working part of your safety program. Be certain that everyone operating this equipment is familiar with the procedures recommended and follows safety precautions. Remember, most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

- System owners must give operating instructions to operators or employees before allowing them to use the equipment and at least annually thereafter.
- The most important safety device on this equipment is a safe operator. It is the operator's responsibility to read and understand all safety and operating instructions in the manual and to follow these. Most accidents can be avoided.
- A person must understand the operation of this equipment and be trained in it's usage before operating the equipment. An untrained operator exposes himself and others to possible serious injury or death.
- Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment.
- Think SAFETY! Work SAFELY!

4.1 - Warning Statement

WARNING!

Products manufactured or sold by T.A. Pelsue Company are intended for use by professionals trained and experienced in the use, inspection and maintenance of these products.

Paraprofessional users such as volunteer rescue workers and sportsmen involved in risk sports such as climbing and caving will be held to the same standard of experience and training as professionals.

Technical rescue, rappelling, climbing and the training involved are hazardous activities. Each situation has its own unique conditions and must be evaluated. Effective risk management comes from experience, proper training and good personal judgement.



4.2 - Safety Alert Symbol

SAFETY ALERT SYMBOL

This Safety Alert symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**

The Safety Alert symbol identifies important safety messages on your Pelsue Retrieval Product and in the manual. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instruction in the safety message.



Why is this symbol important to you?

3 BIG Reasons: **Accidents Disable and Kill.**

Accidents Cost You Money.

Accidents Can Be Avoided.

4.3 - General Safety Info

- 1.** Read, understand and follow the User Manual and all safety signs before using, maintaining or inspecting the equipment.
- 2.** Refer to and follow applicable standards and regulations. Comply with requirements of local regulations for your applications.
- 3.** Establish an equipment-use training program for inexperienced employees. Only trained, competent persons shall use the equipment. An untrained operator is not qualified to operate the system.
- 4.** Have a first-aid kit available for use should the need arise and know how to use it.
- 5.** Provide a fire extinguisher for use in case of an accident. Store in a highly visible place.
- 6.** Install and properly secure all guards and shields before operating.
- 7.** Wear appropriate protective gear. This list includes but is not limited to:
 - A hard hat
 - Protective shoes with slip resistant soles
 - Heavy gloves
 - Protective clothing
 - Face Protection
- 8.** Review and follow the Pre-Operation Checklist before using a component in the system or system itself.
- 9.** Establish a regular maintenance and inspection program with your equipment and maintain detailed records.
- 10.** Review safety related items and operating instructions with all personnel on a regular basis.

4.4 - Operating Safety

- 1.** Read, understand and follow the Product Manual as well as all printed warnings that may be located on the product itself before using, maintaining or inspecting the equipment.
- 2.** Train all operators before allowing them to use the product. An untrained operator exposes themselves, bystanders and workers to possible serious injury or death.
- 3.** Visually inspect the product and all auxiliary components and equipment before using. Correct any problems before using the equipment.
- 4.** Securely anchor the product before using.
- 5.** Use only certified anchor and connector components in your system.
- 6.** Use only an approved full body harness for the workers.

4.4 - Operating Safety (Continued)

- 7.** Always work in teams. When working in and around a confined space or at heights, a rescue may become necessary, personnel must be available and ready for rescue immediately. Working alone with this equipment is inherently dangerous and not advised!
- 8.** Do not exceed the capacity & capabilities of the system at any time (see section 5.1).
- 9.** Establish a regular training program for all operators and potential rescuers.
- 10.** Establish a detailed inspection program for your equipment and document the findings. Return the equipment to the manufacturer for repair if any problems are found.
- 11.** Plan your work program before starting. Have the required people, equipment and procedures readily available in order to safely complete any task prior to commencing.
- 12.** Do not use the equipment around physical or environmental hazards. This list includes but is not limited to:
 - Corrosion that may affect the structural integrity of the lifeline or other components.
 - Chemicals which can degrade components in a manner which can not be visually identified.
 - Toxic gases: Rescuers or workers can be killed in toxic environments.
 - Heat or elevated temperatures.
 - Moving machinery: Workers or auxiliary equipment can be contacted by or pulled into moving components.
 - Sharp edges: Workers or the rescue equipment can be injured by or damaged by sharp edges or components.
 - Electrical hazards: Stay away from power lines or components carrying electrical power.
 - Overload: Do not overload the system at any time during operation (see section 5.1).
 - Follow confined space, elevated work area and fall protection regulations and standards.

4.5 - Maintenance Safety

- 1.** Read, understand and follow the Product Manual as well as any printed warnings that may be present on the product before using, maintaining or inspecting the equipment.
- 2.** ANSI and OSHA require a regular inspection program for all safety & fall arrest equipment as well as properly-documented results of the inspections. Follow the inspection procedures contained in this manual and use the inspection form to document the results (see section 6.0).
- 3.** Keep instructional and safety signs clean and legible at all times. Clean or replace as required.
- 4.** Remove the equipment from service if a problem is found during the inspection. Return to an authorized repair depot or the factory for service.

4.6 - New Operator or Owner

The Pelsue Model # P054 & #RT07 Rescue Tripods are designed to assist a person in the entry and extraction of another person from a confined space. Every new operator must read, understand and follow the instructions in this Product Manual. No person should be permitted to use the equipment without prior proper training. The training should be reviewed with experienced operators on a regular basis. At regular intervals, perform a detailed inspection of the equipment and document the results. Remove the product from service if any deficiencies are found. Alterations or misuse of this equipment or failure to follow instructions may result in serious injury or death.

It is the responsibility of the owner's organization to ensure that the proper training is provided to all operators of any confined space safety equipment before they start working with the equipment. Follow all safety instructions exactly. Safety is everyone's business. By following recommended procedures, a safe working environment is provided for the operator, bystanders and the area around the work site. Untrained operators are not qualified to operate the equipment.

Many features incorporated into this equipment are the result of suggestions made by customers like you. Read this manual carefully to learn how to operate & install the equipment safely and as intended. By following the operating instructions in conjunction with a good maintenance program, your product will provide many years of trouble free service.

5.0 - Product Operation

The following section will address the capabilities and the general operation of the Rescue and Retrieval Tripod. The instructions contained within this section should be adhered to each and every time the product is used. Any person tasked with installing or operating the piece of equipment should be familiar with these procedures.

5.1 - Product Description & Capabilities

The **Rescue & Retrieval Tripod** is built from aircraft grade aluminum, and is specifically designed for rescue and industrial applications. Telescoping anodized-aluminum legs allow for height adjustments in 5" increments per leg. The unique legs also adjust to any angle to meet the most demanding situations. The aluminum head contains three heavy duty rigging plates/anchor points on three sides plus a cable-ready sheave built into it. All specifications, instructions, and procedures provided within this manual or upon Pelsue Specification Documents are based upon and only valid for usage with Pelsue approved accessories. The T.A. Pelsue Company can not verify equipment safety and/or compliance when utilized with anything other than Pelsue products.

Rescue & Retrieval Tripod

	RT07	P054
Minimum Height (@ top of head)	4' - 7"	6'
Maximum Height (@ top of head)	7' - 3"	11'
Diameter of Tripod Feet (@ Max Height)	6'-8"	11' - 3"
Folded Orientation		
Length	5' - 3"	7' - 3"
Width	10-3/4"	10-3/4"
Weight	44 lbs (20 kg)	65 lbs (29 kg)

Load Capacity

- Single user with maximum weight of **350 lbs.**
- Refer to loading diagrams for proof loads (Figure #5.1b & #5.1c)

Features:

- No load supporting welds
- Three separate rigging plates/anchor points
- Feet convert to soft ground anchors and are pre-drilled for anchor bolts or stakes
- Legs adjust in 5" increments
- Can be used as an A-frame
- Base chain included to prevent legs from spreading

Materials & Construction

- Leg Tubes - Anodized or Powder Coated 6061-T6 Aluminum
- Feet - Aluminum & Magnesium Alloy
- Head - Aluminum & Magnesium Alloy
- Anchor Points - Formed Carbon Steel
- Sheave - UHMW Polyethylene

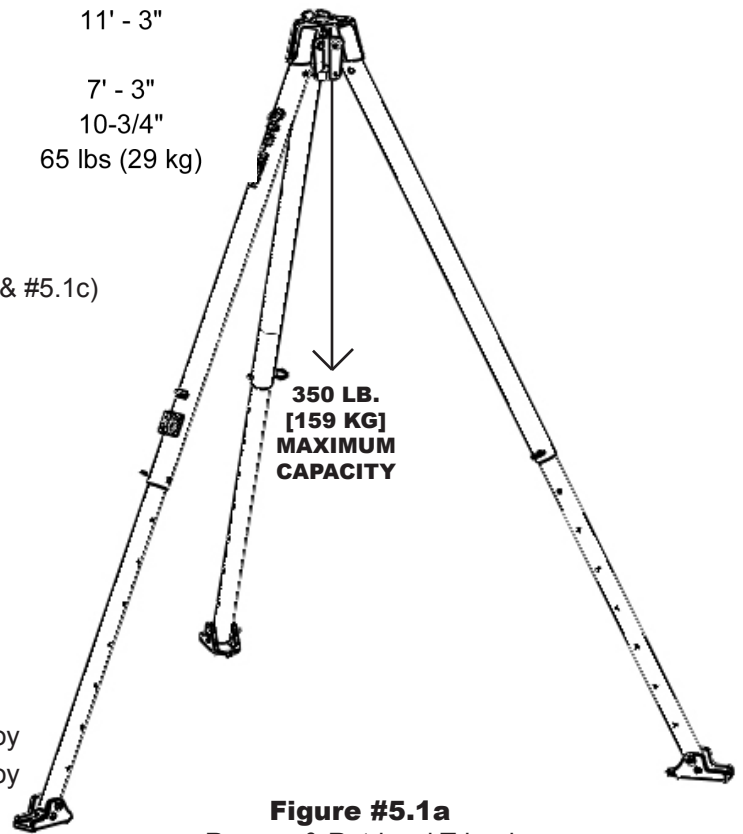


Figure #5.1a
Rescue & Retrieval Tripod



! CAUTION ! - The user must ensure that the ground area or base structure utilized for operation is capable of withstanding the weight of the system combined with the system proof loads in order to retain the stated compliance of the entire system.

! CAUTION ! - The user must ensure that the ground area utilized for operation is relatively level and debris-free in order to retain the stated compliance and stability of the entire system.

! CAUTION ! - The user must ensure that the leg pins are locked in place when the legs are deployed and that all three feet are restrained with the included chain and screw link in order to retain the stated compliance of the entire system.

5.1 - Product Description & Capabilities (Continued)

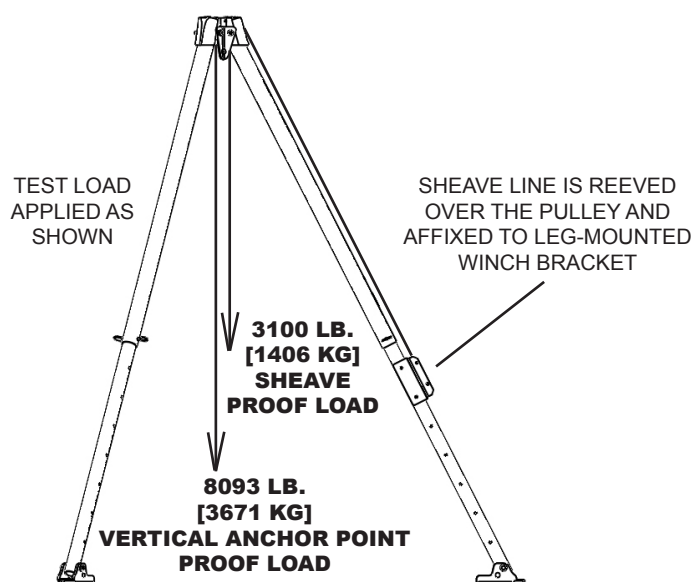


Figure #5.1b #RT07
Loading Diagram @ Maximum Height

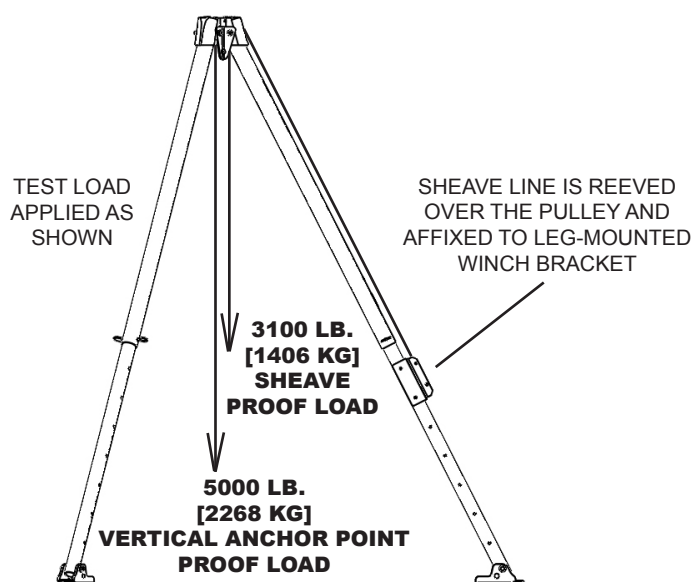


Figure #5.1c #P054
Loading Diagram @ Maximum Height

Additional Requirements & Notes

- Tripod Feet must be secured together with provided chain & snap link when used in tripod configuration.
- Winch Bracket must be attached to leg securely with provided pins for operation with winch.
- Legs must be equally adjusted in height and pinned prior to loading.

System Requirements

The *Pelsue Rescue & Retrieval Tripod* is a component in a confined space entry/retrieval system. The product and all auxiliary components must be compatible to prevent creating unexpected hazards. A list of system compatibility requirements includes but is not limited to:

1. Anchorage

The *Rescue & Retrieval Tripod* is designed to stand alone and function as a portable anchor device. When using another system or anchorage method, anchorage points must meet ANSI and OSHA standards or local regulations. Qualified people are required to approve non-standard anchorage systems before they are used.

2. Connectors

Use only approved connectors with sufficient capacity that have an anti-rollout device designed into the snap. Non-approved connectors can open during use and create unexpected hazards. Do not use them. Pelsue recommends using a twist-lock or tri-lock carabiner for connection devices.

3. Personnel Harness

Use only an approved full body harness. Do not use a single belt or strap system. Only a full body harness can provide the required support for the body to prevent injury.

5.1 - Product Description & Capabilities (Continued)

Applications

1. General

The Pelsue Tripod is designed to be used in confined space entry and/or rescue applications.

2. Scope

The Pelsue tripod is intended to be utilized in vertical applications. Other configurations and applications can be considered, but must be approved by a Qualified Person. The user has the responsibility of reading and following the instructions for any other systems and ensuring their compatibility with the Pelsue Tripod. Misuse or abuse of any component can create hazards for personnel.

3. Emergency Rescue

In emergency situations, use the Rescue Tripod in the extraction of personnel from a hazardous or an unsafe environment. In rescue situations, employ a redundant fall arrest system whenever required and/or practical. Be sure to use the proper mounting and anchoring system for all products. Use only an approved harness for personnel. Always be aware of the system limitations and follow the instructions.

4. Limitations

Operators must be aware of several limitations on the use of the product whenever it is used and plan their work accordingly. Limitations include but are not limited to:

a. Corrosion

Do not keep the product in an area that has a corrosive atmosphere. Corrosive vapors can be released by sewage plants or in fertilizer plants. Sea water or spray can also cause corrosion to the case, lifeline or other components. Long term exposure to these types of environments will require more frequent inspections to ensure that the function of the unit has not been affected.

b. Chemical or Toxic Environments

Work environments that contain strong acids, bases or other corrosive chemicals in solutions, sprays or vapors may damage the product or auxiliary components. Inspect the unit frequently to detect any damage or change in functionality of the unit. Chemical damage may be difficult to detect visually and periodic lifeline replacement is recommended to insure safety.

c. Electrical Hazards

Avoid all power lines or other components carrying electrical power. Metallic structures and lifelines can conduct electricity if it gets close to or contacts a power line or electrified component. Remember, electricity can jump across an air gap and electrocute personnel using the product. Contact your local utility to remove or disconnect the power before working around these components. Contact Pelsue for synthetic rope options to reduce conductivity.

d. Load Capacity

Do not exceed the product capacity of the Tripod in any configuration (includes people, harness, tools, etc.). Overloading the product can exceed the design safety factors and could create hazards.

e. Training

Do not allow anyone to use this product unless they are trained in its limitations and use. Untrained operators can expose themselves and others to hazards. Train new operators before using the unit. Review operating procedures on a regular basis with experienced personnel.

5.2 - Product Installation & Set-Up

Prior to Operation, the Tripod should be configured and prepared according to the following guidelines.

1. Pre-Operation Inspection:

It is necessary to perform a visual inspection prior to each time using the product. If deficiencies are found, remove the product from service and contact the T.A. Pelsue Co. regarding repair. The following checklist coupled with *Figure #5.2a* should be used as a guide to determine whether the equipment is in good operating condition prior to usage. Equipment that is not in good condition can endanger the safety of the entrant and attendant during use.

The Pre-Operation Visual Inspection is not limited to, but must include the following items;

- a. Check that the product has no structural defects, such as dents, bends, cracks, or fractures.
- b. Ensure that all product rating & warning labels are clear and legible.
- c. Functional check:
 - Make sure legs adjust properly
 - Make sure built-in pulley is free of defects & spins freely
- d. Check that the feet pivot freely.
- e. Check that all hardware (Pins, Levelling Screws, Bolts) have not been damaged and are in working condition.

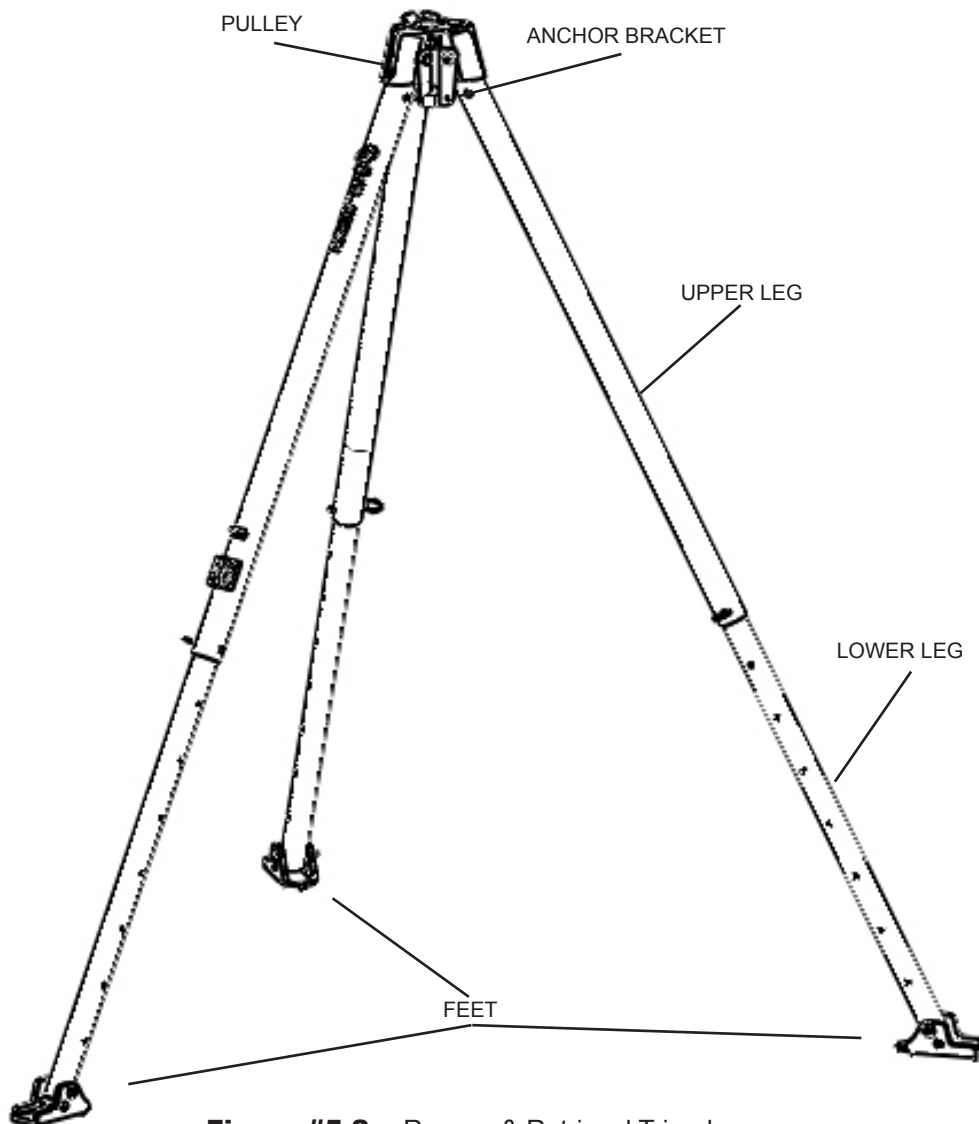


Figure #5.2a: Rescue & Retrieval Tripod
Pre-Operation Inspection Points

5.2 - Product Installation & Set-Up (Continued)

2. Setup of the Pelsue Rescue & Retrieval Tripod:

Choose a location where installation will provide suitable proximity to the work area yet minimize obstructions during use and in the event a rescue is necessary. Once a location is chosen;

- a. With the tripod in its folded position, lay the tripod down on its side (Figure 5.2b). Attach any connections, haul systems, or carabiners to the anchor points located on the head assembly. Ensure all equipment connected to the head assembly are in their locked positions.
- b. The tripod legs can now be locked in their deployed position. To do this, move a leg out towards the outer end of the head casting. The pin will then go behind the leg and threaded into the plate on the other side holding the leg in the deployed position. (Figure #5.2c) Repeat for the other two legs.

***** If the leg retaining pins are securing the legs in the folded position, the pins must first be unthreaded and pulled out to be able to deploy the legs of the tripod. (Figure #5.2f) *****

- c. After hauling equipment is connected and is in working order, the tripod can now be lifted to its upright position and raised to the desired height. To extend the legs of the tripod, the safety lock pins must first be pulled out. (Figure #5.2d) Then extend each leg to the desired length for the appropriate height. Ensure that all three legs are at equal lengths. Re-insert the safety lock pins into each leg.
- d. Once the desired height is achieved and safety pins are in place, spread each leg out to the largest possible base width. (Figure #5.2d) Then move each leg approximately 2" inwards to ensure there is no outward pressure on the head of the tripod. (On expanded metal decks, you may use "T" or "J" bolts to further secure the base of the tripod)
- e. Install the chain around the entire base of the tripod in order to prevent the legs from spreading under extreme loads. To do this, one must open the oval link which connects the two ends of the chain. Pass one end of the chain through the openings in each of the three feet and reconnect the end of the chain to the oval link (remove any slack in the chain at this time). (Figure #5.2e)
- f. For storage, remove the chain around the base of the tripod. Then remove the safety lock pins and insert the lower legs back into the upper legs and reinsert the safety lock pins when lower legs are inserted as much as possible. Lay the tripod down on its side and remove all equipment connected to the head assembly. The leg retaining pins on the head assembly must first be removed prior to folding each leg. To do this, unthread the leg retaining pin and pull out from beneath the leg. The leg can now be folded towards the center of the head casting. The leg retaining pins can now be used to keep the tripod legs in its' folded position by re-inserting through the legs and re-threaded into the plate on the other side of each leg. (Figure #5.2f)

 


Figure #5.2b
Folded

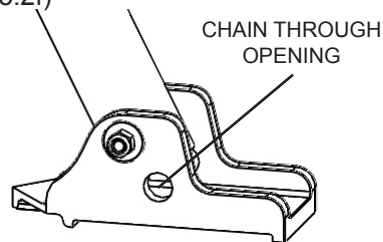


Figure #5.2e
Foot

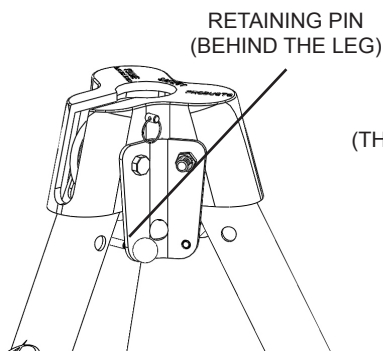


Figure #5.2c
Head Assembly - Deployed

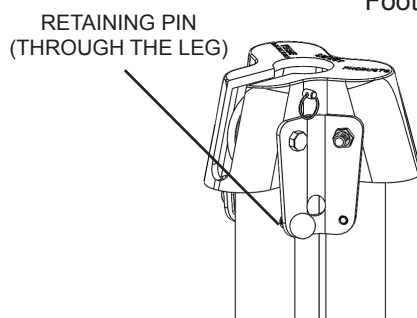


Figure #5.2f
Head Assembly - Folded

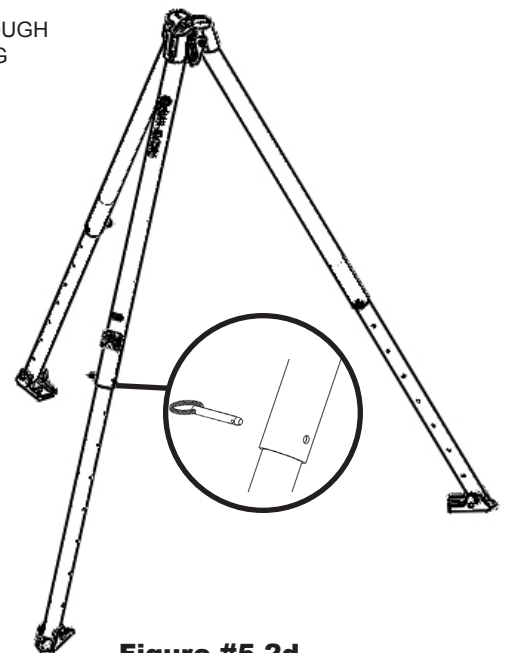


Figure #5.2d
Legs Spread

5.2 - Product Installation & Set-Up (Continued)

2. Setup of cable using built-in pulley:

- a. If using a Pelsue Personnel Winch or Hoist, attach the device to the tripod leg equipped with the built-in pulley at its upper end. A device adapter bracket can be purchased from Pelsue as a Model #MB-TL1. Figure #5.2g shows the winch bracket on the leg of the tripod. A Pelsue winch/hoist can also be purchased already outfitted with the proper adapter/bracket resulting in a simpler installation (consult Pelsue Sales).
- b. Once the winch is attached to the leg, pay out the cable or rope, remove the cable retention pin located over the head sheave and pass the snap hook through the center hole of the head and down through the center of the tripod. ***** The tripod must be in its folded position in order to pass the snap hook through the hole of the tripod head (Figure #5.2i) *****
- c. Ensure that the cable or rope lays within the groove of the pulley and then re-insert the cable retention pin to keep the cable or rope from coming off of the pulley. (Figure #5.2j)
- d. The tripod can now be raised to the desired height following the steps on the previous page.

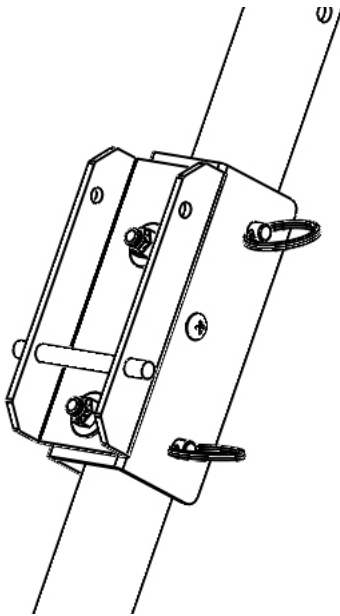


Figure #5.2g
#MB-TL1 Winch Bracket

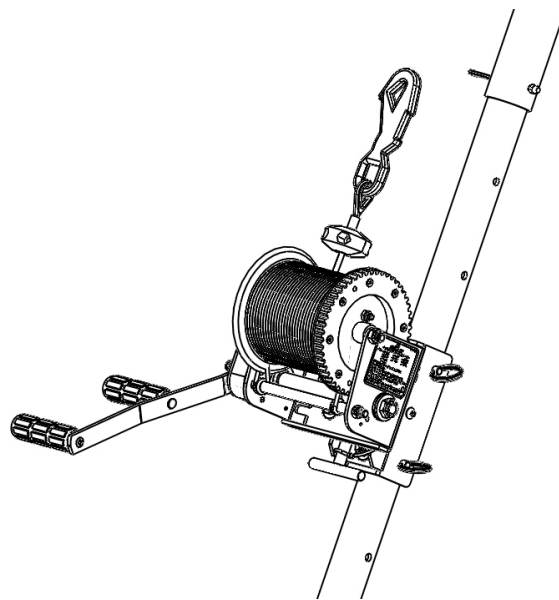


Figure #5.2h
Pelsue Model #PW10C

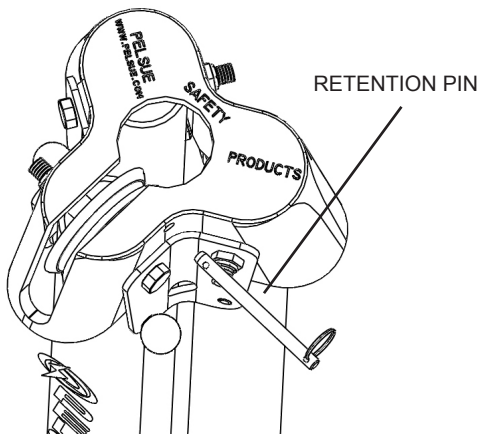


Figure #5.2i
Head Assembly

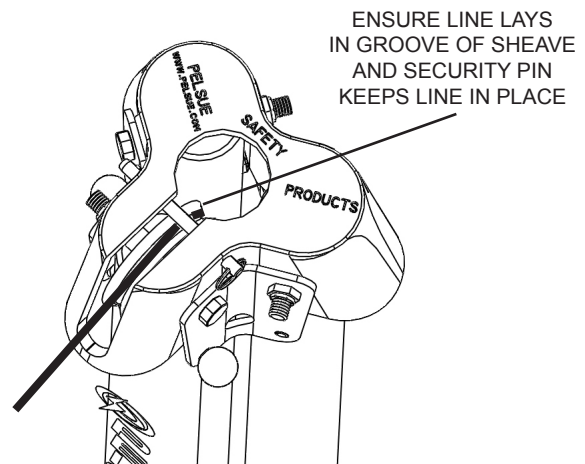


Figure #5.2j
Head Assembly

6.0 - Compliance & Capacity

Compliance:

• **Fall Arrest**

When utilizing the fixed anchor points on the head assembly, The Pelsue Models **#RT07 & #P054** Rescue Tripods are compliant as a fall arrest anchorage for;

1. A Single Person as per **ANSI Z359.1**
OR,
2. Two People as per **ANSI A10.14 & OSHA 1926**

When utilizing the tripod's built-in pulley system in conjunction with an SRL (Self-Retracting Lifeline) device, the Pelsue Models **#RT07 & #P054** Rescue Tripods are compliant as a fall arrest anchorage for;

1. A Single Person as per **ANSI A10.14 & OSHA 1926**

When utilizing the tripod as a Portable Anchor System, The Pelsue Model **#RT07** Rescue Tripod is compliant as a portable anchorage for;

1. A Light-Use Portable Anchor Device as per **NFPA 5.5.4.1 & 5.5.4.2**
2. A General-Use Portable Anchor Device as per **NFPA 5.5.4.3 & 5.5.4.4**

All above stated compliance contingent upon the following conditions

- a. Users are connected utilizing an approved 900 LB. MAF (maximum arrest force) device.
- b. The system is installed and utilized by a qualified individual, as defined by applicable ANSI & OSHA Standards.
- c. Tripod is properly erected following the procedure in this manual, including the adjustment and installation of the included leg restraining chain.

• **Man-Rated Rescue, Retrieval, and Positioning**

When utilizing the tripod's built-in pulley system in conjunction with a personnel winch device, the Pelsue Rescue tripod is rated as a personnel lifting & lowering structure for;

1. A Single Person of 310 LBS. (141 Kg.) maximum weight (inclusive of all tools and equipment) with a 10:1 Factor of Safety
OR,
2. A Single Person of 350 LBS. (159 Kg.) maximum weight (inclusive of all tools and equipment) with better than an 8:1 Factor of Safety

When utilizing the fixed anchor points on the head assembly as an attachment point for rigging and hauling devices it is the user's responsibility to infer the rating of the tripod based upon the proof loads reported in this section, the capabilities of the rigging/hauling device, and the required Factor of Safety for the task at hand.



MAINTENANCE & INSPECTION

1. Read, understand and follow the User Manual and signs on the product before using, maintaining or inspecting the equipment.
2. ANSI and OSHA require a regular inspection program for all confined space entry/retrieval equipment and to maintain documented results of these inspections. Follow the inspection procedure contained in this manual and use the inspection form to document the results.
3. Keep instructional and safety signs clean and legible at all times. Clean or replace as required.
4. Lubricate product as per instructions in Section 6.
5. Remove the equipment from service if a problem is found during the inspection. Return to an authorized repair depot or the factory for service.

7.1 - Maintenance

7.1 MAINTENANCE INTERVALS

Before Each Use:

1. Visual Inspection

Perform a complete visual inspection. Refer to section 7.2. Remove from service if a defect is found.

Annually:

1. Clean Product:

Use a damp cloth and mild soap to clean the frame and labels of dirt and residue. Be sure that the labels are legible.

2. Complete Inspection:

Perform a complete inspection. Refer to section 7.2. Record results and keep documentation.

3. Factory Service Inspection:

It is recommended that the product be serviced by a factory authorized service center or the manufacturer after a period of three years. Extreme working conditions may indicate the necessity to increase the frequency. Annual servicing shall include but not be limited to an intensive inspection and cleaning of all internal and external components. Failure to provide proper service may shorten product life and could endanger performance or function.

7.2 - Inspection

A complete visual inspection should be performed on the product prior to using. The following items should be checked:

1. Labels:

Check that all of the labels are clean and legible. Clean the labels if any are dirty using mild soap and a damp cloth. Replace if any are illegible.

2. Fasteners:

Check that all screws and other fasteners are tight. Tighten if any are loose. Replace if any are missing.

3. Frame:

Check the frame and housing for cracks, dents, bends or breaks. If there are major dents or any other structural damage, the unit should be removed from service and returned to the factory for inspection.

**A thorough inspection inclusive of the items listed above should be performed at least annually (more frequently when the product is used consistently) by a qualified person, the results should be recorded in a log like the one provided in Section 7.3.

7.3 - Inspection Log

Model Number : _____

Serial Number : _____

Date Purchased : _____

Place a check (✓) in the box if item is acceptable, place an x (X) in the box if item requires maintenance or repair

Date	Tripod Head	Upper Legs	Lower Legs	Pulley System	Pins & Fasteners	Notes
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						
Inspector (print & sign) : _____						

7.3 - Inspection Log (Continued)

Date	Tripod Head	Upper Legs	Lower Legs	Pulley System	Pins & Fasteners	Notes
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						
Inspector (print & sign) :						

8.0 - Storage

Prior to storage, the product should be thoroughly inspected and maintained. Repair or replace any worn or damaged components to prevent any unnecessary down time at the next use.

Follow this procedure:

1. Thoroughly clean the entire unit using a mild soap on the frame and labels.
2. Perform a complete inspection of the unit and document the results.
3. To dismantle & store the Tripod, first remove the chain from the base of the Tripod.
4. Carefully lower the Tripod to the ground, and inspect each leg before adjusting to it's storage size.
5. Remove all haul system connections / components at this time.
6. Release the safety pins and shorten the legs to the minimum length. Replace the safety pins and place the Tripod into it's carry case. Store in a cool, dry place.

9.0 - Contact Information

For More Information...



T.A. Pelsue Company
2500 S. Tejon St.
Englewood, CO 80110

Toll Free: 1-800-525-8460
Telephone: 1-303-936-7432
Fax: 1-303-934-5581

Website: www.pelsue.com

Email: sales@pelsue.com

NOTES:



T.A. Pelsue Company

2500 South Tejon Street, Englewood, Colorado, USA 80110
Toll free 800-525-8460 or 303-936-7432 Fax. 303-934-5581
Internet: www.pelsue.com Email: sales@pelsue.com