



motorola

 
MODEL: MBP16

QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

 
1. Setting up your Digital Audio Baby Monitor with LCD Display

A. Baby unit power supply

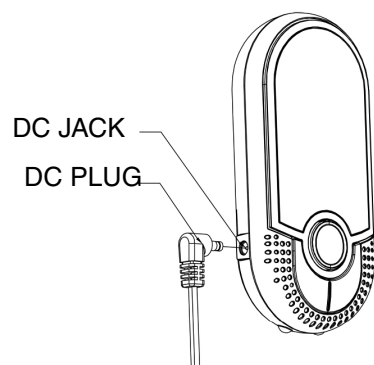

Insert the small plug of the power adapter into the side of the baby unit, as shown. Connect the other end of the power adapter to the mains socket / power outlet.

B. Parent unit battery installation

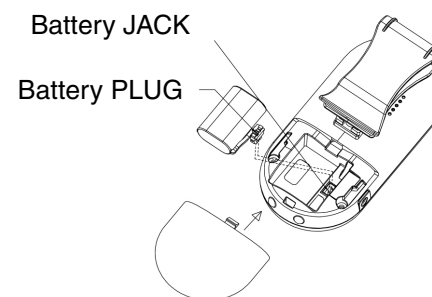

Turn the belt clip so that it is in the hanging position.

Slide off the battery compartment cover.

 
Insert the supplied rechargeable batteries, and fit the battery pack into the compartment, as shown.

Reattach the battery compartment cover.

Insert the small plug of the power adapter into the side of the parent unit. Connect the other end of the power adapter to the mains socket / power outlet.

The Charging Indicator comes on.

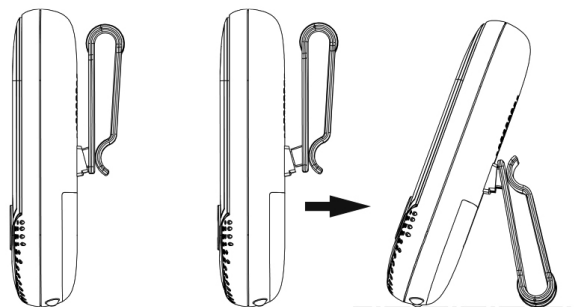 



 







C. Belt clip on parent unit and baby unit



The parent and baby units come with belt clip mode.

You can convert into support stand mode by lifting up the belt clip and rotating by half turn.

2. Basic operation of the keys

Parent Unit	
	In idle mode: Press to access the main menu. In menu mode: Press to access the sub-menu, or confirm the settings.
	In menu mode: Press to cancel settings and back to the previous level.
	In idle mode: Press to increase the speaker volume. In menu mode: Press to view the previous menu item.
	In idle mode: Press to decrease the speaker volume. In menu mode: Press to view the next menu item.
	In idle or menu mode: Press and hold to power on/off the parent unit.
	In idle or menu mode: Press and hold to talk back with baby unit. Release to quit the talk mode.
Baby Unit	
	Press to increase the speaker volume.
	Press to decrease the speaker volume. Press and hold to reset settings to default.
	Press to turn on/off the nightlight.
	Press to select the lullaby and start playing the selected lullaby. During lullaby playing, press to select and play the other lullabies.
	Press and hold to power on/off the baby unit.
	Press to play the lullaby. Press again to stop playing.

3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:
+49 (0) 1805 938 802 in Europe
Email: motorola-mbp@tdm.de



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.



Printed in China
Version 3.0