

# Installation and Operation Instructions




## 16 Series CC Lightbars

**IMPORTANT!** Read all instructions before installing and using. Installer: This manual must be delivered to the end user.



**WARNING!**

Failure to install or use this product according to manufacturer's recommendations may result in property damage, serious injury, and/or death to those you are seeking to protect!

 **Do not install and/or operate this safety product unless you have read and understood the safety information contained in this manual.**

1. Proper installation combined with operator training in the use, care, and maintenance of emergency warning devices are essential to ensure the safety of emergency personnel and the public.
2. Emergency warning devices often require high electrical voltages and/or currents. Exercise caution when working with live electrical connections.
3. This product must be properly grounded. Inadequate grounding and/or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or severe vehicle damage, including fire.
4. Proper placement and installation is vital to the performance of this warning device. Install this product so that output performance of the system is maximized and the controls are placed within convenient reach of the operator so that they can operate the system without losing eye contact with the roadway.
5. Do not install this product or route any wires in the deployment area of an air bag. Equipment mounted or located in an air bag deployment area may reduce the effectiveness of the air bag or become a projectile that could cause serious personal injury or death. Refer to the vehicle owner's manual for the air bag deployment area. It is the responsibility of the user/operator to determine a suitable mounting location ensuring the safety of all passengers inside the vehicle particularly avoiding areas of potential head impact.
6. It is the responsibility of the vehicle operator to ensure daily that all features of this product work correctly. In use, the vehicle operator should ensure the projection of the warning signal is not blocked by vehicle components (i.e., open trunks or compartment doors), people, vehicles or other obstructions.
7. The use of this or any other warning device does not ensure all drivers can or will observe or react to an emergency warning signal. Never take the right-of-way for granted. It is the vehicle operator's responsibility to be sure they can proceed safely before entering an intersection, drive against traffic, respond at a high rate of speed, or walk on or around traffic lanes.
8. This equipment is intended for use by authorized personnel only. The user is responsible for understanding and obeying all laws regarding emergency warning devices. Therefore, the user should check all applicable city, state, and federal laws and regulations. The manufacturer assumes no liability for any loss resulting from the use of this warning device.

### Specifications

<b>Size:</b>	12.3" length x 2.3" height	<b>Peak Current   Power:</b>	Single Color Modules
			TD/AL 0.60 A, 8.2 W
<b>Input Voltage:</b>	12 VDC		3 LED 0.70 A, 9.2 W
			4 LED 1.20 A, 15.4 W
<b>Temp. Range:</b>	-40°C to 65°C		6 LED 1.24 A, 15.9 W
	-40°F to 149°F		9 LED 2.06 A, 26.4 W
			Dual Color Modules
			18 LED 1.6 A, 20.0 W

# Installation and Mounting

## Unpacking and Pre-Installation

Carefully remove the lightbar and place it on a flat surface. Examine the unit for transit damage and locate all parts. If damage is found or parts are missing, contact the transit company or ECCO. Do not use damaged or broken parts.

Ensure the lightbar voltage is compatible with the planned installation.

## Mounting

Before proceeding with installation, plan all wiring and cable routing. Select the mounting location for the lightbar on a flat, smooth surface and center the unit across the width of the vehicle. The mounting location for the lightbar should be chosen such that the lightbar is level and visibility to approaching traffic is optimized.

**CAUTION!** When drilling into any vehicle surface, make sure that the area is free from any electrical wires, fuel lines, vehicle upholstery, etc. that could be damaged.


## Permanent Mounting with Adjustable Mounting Feet

**Step 1.** Loosen the 5/16" nuts to allow the mounting feet to slide along the base. Place the lightbar over the center of the vehicle and slide the mounting feet into position near the curved edges of the roof when possible.


**Step 2.** Secure the feet in location on the lightbar by tightening the four nuts on each foot.

**Step 3.** With the feet positioned, remove the adjustable foot cover and mark the location of the mounting hole centers on the roof of the vehicle. Remove the lightbar and drill the mounting holes as marked. Note: The center distance between the mounting holes in an adjustable mounting foot is 11.1" or 281.94 mm.

**Step 4.** Attach the appropriate foot pad for the curvature of the roof surface per FIGURE 2. Secure the lightbar feet to the vehicle using the supplied 1/4"-20 hardware and reattach the adjustable foot cover as shown in FIGURE 1. See the Wiring section of this manual for further wiring instructions.

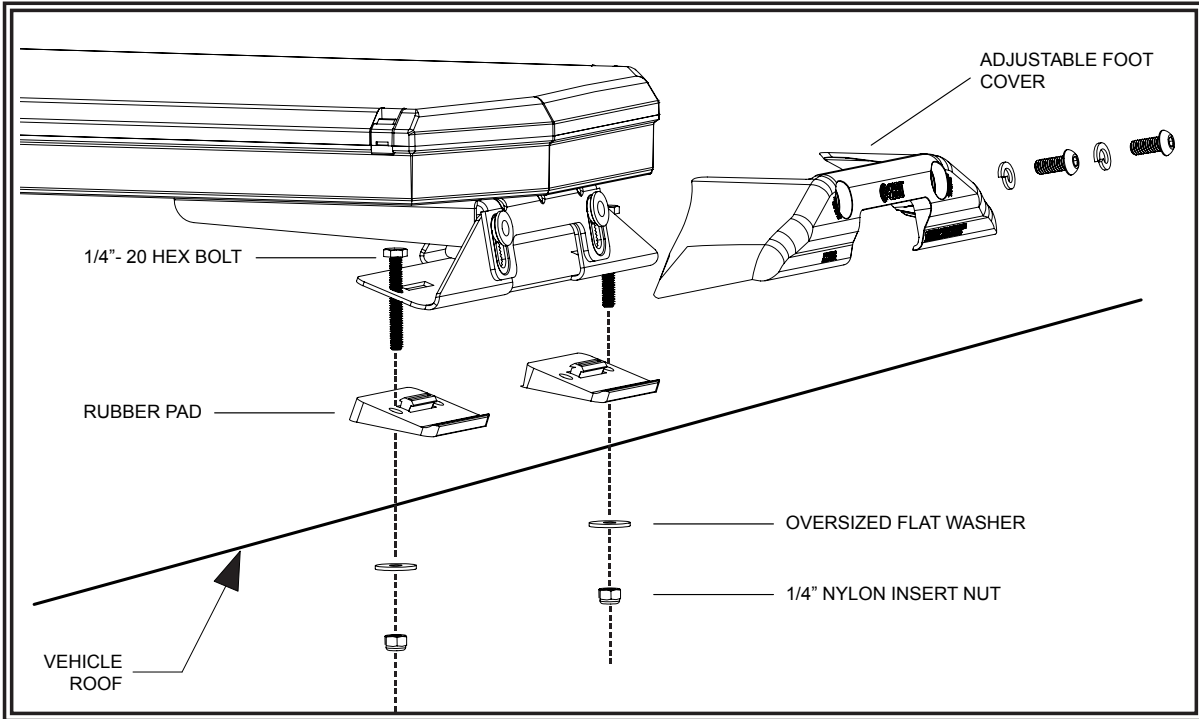

**Figure 1**

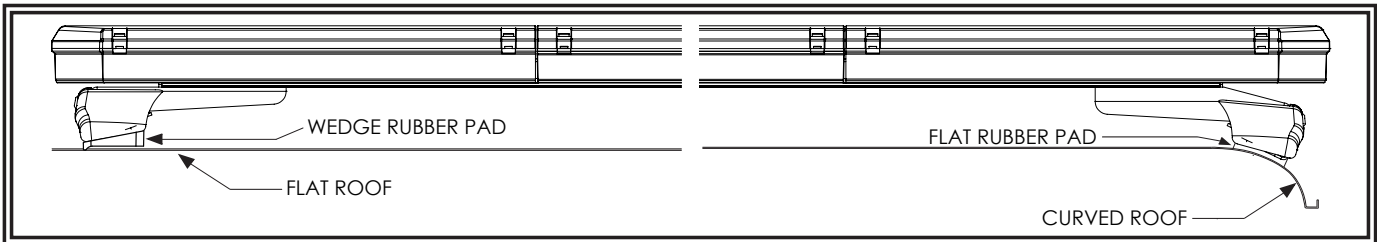

**Figure 2**


## Permanent Mounting without Adjustable Mounting Feet

**Step 1.** Insert the four 5/16"-18 carriage bolts in the channels on the under side of the lightbar.


**Step 2.** Place the lightbar over the center of the vehicle and slide the mounting hardware into position near the curved edge when possible as shown in FIGURE 4.

**Step 3.** With the mounting hardware positioned, mark the location of the mounting hole centers on the roof of the vehicle. Remove the lightbar and drill the mounting holes as marked.

**Step 4.** Mount the lightbar as shown in FIGURE 3 and secure the unit. See the Wiring section of this manual for further wiring instructions.

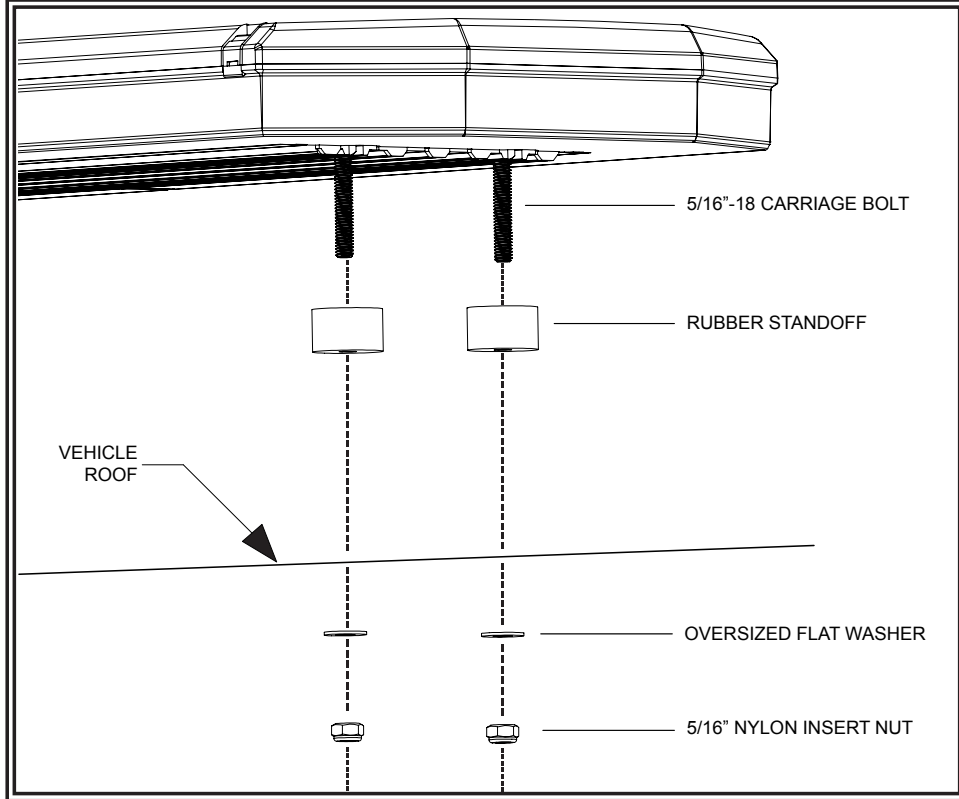

**Figure 3**

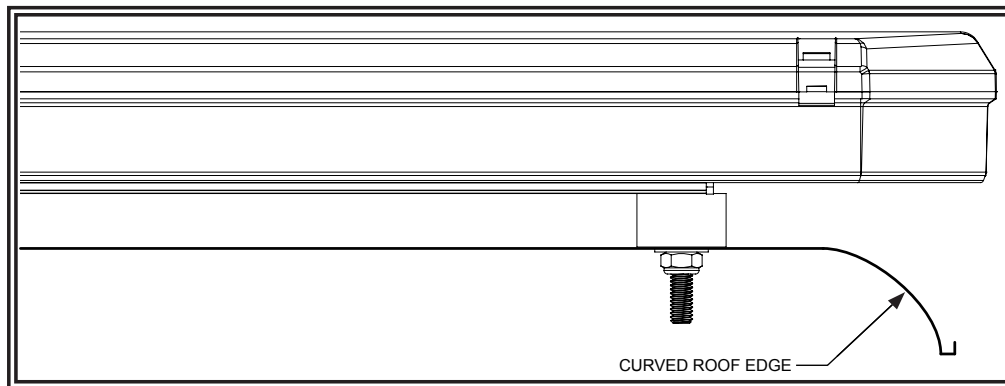

**Figure 4**

## Pylon/Headache Rack Mounting


**Step 1.** Insert the four (4) 5/16"-18 carriage bolts in the channels on the under side of the lightbar and loosely attach the mounting brackets.

**Step 2.** Place the lightbar on the vehicle and slide the mounting brackets into position.

**Step 3.** Secure the brackets to the lightbar with the supplied washers and nuts as shown in FIGURE 5.

**Step 4.** With the mounting brackets positioned, mark the locations of the mounting hole centers on the roof of the vehicle. Remove the bar and drill the mounting holes as marked.

**Step 5.** Secure the mounting brackets to the vehicle with customer supplied hardware. See the Wiring section of this manual for further wiring instructions.

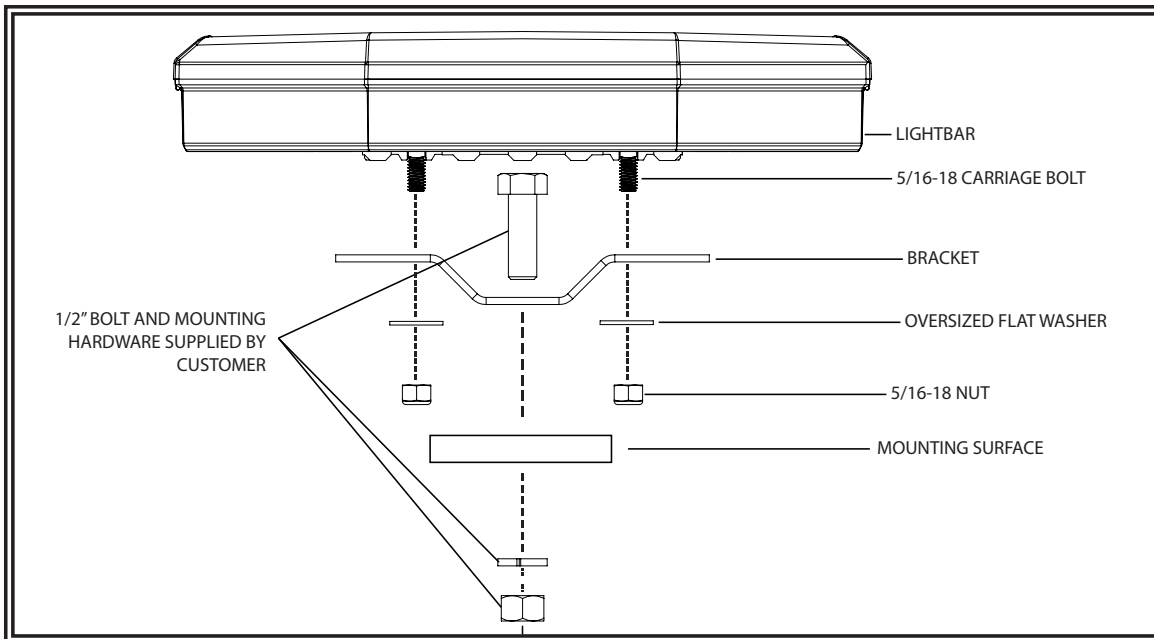

**Figure 5**

## Strap Kit Mounting


**Step 1.** Loosen the 5/16" nuts to allow the mounting feet to slide along the base of the lightbar. Loosely attach the mounting strap to each foot using the supplied pan head phillips screws and lock washers.

**IMPORTANT!** Mounting brackets are specific to the vehicle model. Please make sure the brackets are suitable for the vehicle before installation.

**Step 2.** Center the lightbar across the vehicle and align the strap mount brackets to hook into the gutter of the vehicles door frame as shown in FIGURE 6.

**Step 3.** Secure the feet to the lightbar in location by tightening the four nuts on each foot.

**Step 4.** Slowly tighten the pan head screws to secure the strap mount brackets to the lightbar feet and around the door gutters, keeping the lightbar centered and level. Ensure the doors close completely and secure each strap mount bracket to the door frame. Mounting geometry and parts will vary for different vehicles. See the Wiring section of this manual for further wiring instructions.

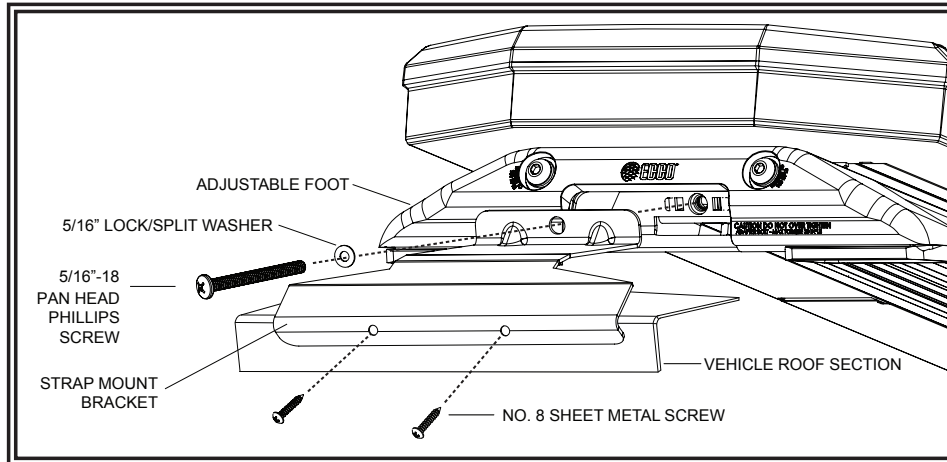

**Figure 6**

## Wiring Instructions

### Notes:

1. Larger wires and tight connections will provide longer service life for components. For high current wires it is highly recommended that terminal blocks or soldered connections be used with shrink tubing to protect the connections. Do not use insulation displacement connectors (e.g., 3M Scotchlock type connectors).
2. Route wiring using grommets and sealant when passing through compartment walls. Minimize the number of splices to reduce voltage drop. All wiring should conform to the minimum wire size and other recommendations of the manufacturer and be protected from moving parts and hot surfaces. Looms, grommets, cable ties, and similar installation hardware should be used to anchor and protect all wiring.
3. Fuses or circuit breakers should be located as close to the power takeoff points as possible and properly sized to protect the wiring and devices.
4. Particular attention should be paid to the location and method of making electrical connections and splices to protect these points from corrosion and loss of conductivity.
5. Ground termination should only be made to substantial chassis components, preferably directly to the vehicle battery.
6. Circuit breakers are very sensitive to high temperatures and will "false trip" when mounted in hot environments or operated close to their capacity.

**IMPORTANT!** This unit is a safety device and it must be connected to its own separate, fused power point to assure its continued operation should any other electrical accessory fail.



Disconnect the battery before wiring up the lightbar, to prevent accidental shorting, arcing and/or electrical shock.

## CC Series Wiring

A CC series lightbar has a 2-wire power cable and a 16-wire control cable. The entire power load of the bar goes through the power cable. The black ground wire should be connected directly to the battery. The 10 AWG red power wire requires a constant 10 to 16V power source with a customer supplied in line fuse. To select an appropriately rated ATO (regular) or Maxi Fuse, add the amp ratings, found in the specifications section, of the modules in your configuration specific lightbar and based on that sum, insert a fuse of the next larger size (to be no larger than a 30 A fuse). The 16 control cable wires carry only low power (30 mA average) input signals to control the lightbar functions and must be routed to the output of a control switch (or directly to multiple switches).

Before attempting to connect the lightbar wiring harness, refer to the configuration specific wiring key included with the lightbar for the configuration specific functions of each wire. Use an appropriate high-temperature wiring if it passes through the engine compartment. Use cable ties and grommets to secure and protect all cables and wires.

Standard CC Function Wire Definitions			
Function Wire Color	Function	Description	Notes
GRN/BLK	L1	Level 1 Emergency Mode	
WHT/BLK	L2	Level 2 Emergency Mode	
RED/BLK	L3	Level 3 Emergency Mode	
RED	Arrowstik Left	Left Arrowstick	Overrides L1, L2, & L3 for rear of lightbar
ORG	Arrowstick Right	Right Arrowstick	Overrides L1, L2, & L3 for rear of lightbar
WHT	Drivers Side Cut	Cut Driver Side Directional and Alley Lights	Designed to interface with the driver's door switch
BLK/RED	Pattern Select	Pattern Select	
BLK	Take Down Flash	Take Down/Work Light Wig/Wag Flash	
ORG/BLK	Take Down Lights	Take Down/Work Light Steady Burn	Overrides Take Down Flash
BLU/WHT	Alley Light Flash	Enables Alley Light Wig/Wag Flash	
BLK/WHT	Left Alley Light	Left Alley Steady Burn	Overrides Alley Light Flash
RED/WHT	Right Alley Light	Right Alley Steady Burn	Overrides Alley Light Flash
GRN/WHT	Front Cut-Off	Blacks-Out Front Facing LEDs	
BLU/BLK	Rear Cut-Off	Blacks-Out Rear Facing LEDs	
GRN	Cruise Lights	End LEDs only	Overridden by all other functions except for Dim
BLU	Lightbar DIM	Sets LEDs to DIM mode	

**Table 1**

Note:

- When the Arrowstik Left and Arrowstik Right wires are both connected to +power, the Center-Out Arrowstik function is activated.
- The Front Cut and Rear Cut functions must be used with the greatest care to ensure that the use of these functions do not diminish the effectiveness of the Emergency Warning signal.
- When the Pattern Select wire is connected to +power alone, test mode is enabled to exercise all outputs in sequence.
- The Dim Function lowers the brightness of the LEDs in both the ArrowStik mode and Emergency Warning Flash modes.
- The WHT Drivers Side Cut wire may be changed to Arrowstik Flash. Please see the Arrowstik flash pattern selection section below for details.
- Lightbars equipped with a DOT strip assembly are wired in conjunction with the STT tail light function. All STT functions are powered independent of the central driver PCA.

## Flash Patterns

### Emergency Mode Flash Pattern Selection

There are seven customizable emergency flash pattern modes available based on the wire combinations shown in TABLE 2. When using individual switches, make sure to configure all possible switch combinations. The default setting is unsynchronized which allows each light head module group to be configured separately and the lightbar to flash in an unsynchronized pattern. Steps to synchronize the light head module groups together are detailed in later sections.

Level Mode Combinations	
Function Wire Color	Flash Pattern Modes
GRN/BLK	L1
WHT/BLK	L2
GRN/BLK & WHT/BLK	L1 + L2
RED/BLK	L3
GRN/BLK & RED/BLK	L1 + L3
WHT/BLK & RED/BLK	L2 + L3
GRN/BLK, WHT/BLK & RED/BLK	L1 + L2 + L3

**Table 2**

The module groups in each mode come with the default flash patterns shown in TABLE 3.

<b>Level Mode Default Flash Patterns by Group - Unsynchronized</b>				
<b>Light Head Module Group</b>	<b>L1</b>	<b>L2</b>	<b>L3</b>	
Front Outboard	Off	Quad 75 FPM	Cycle Flash	
Front Inboard	Off	Quad 75 FPM	Cycle Flash	
Front Center	Off	Quad 75 FPM	Cycle Flash	
Front Corner	Off	Quad 75 FPM	Cycle Flash	
Rear Outboard	Quad 75 FPM	Off	Cycle Flash	
Rear Inboard	Quad 75 FPM	Off	Cycle Flash	
Rear Center	Quad 75 FPM	Off	Cycle Flash	
Rear Corner	Quad 75 FPM	Off	Cycle Flash	
Rear End	Quad 75 FPM	Off	Cycle Flash	
	<b>L1 + L2</b>	<b>L1 + L3</b>	<b>L2 + L3</b>	<b>L1 + L2 + L3</b>
Front Outboard	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Front Inboard	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Front Center	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Front Corner	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Rear Outboard	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Rear Inboard	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Rear Center	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Rear Corner	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash
Rear End	Quad 75 FPM	Cycle Flash	Cycle Flash	Cycle Flash

**Table 3**

To change a light head group flash pattern selection:

**Step 1.** Power-up the Lightbar and apply +power to the level mode wire you wish to change (see TABLE 3). The lightbar will flash the default pattern shown in TABLE 3.

**Step 2.** Twist together the BLK/RED Pattern select wire in the 16 conductor cable and the wire of the light head group you want to change shown in TABLE 4.

**Step 3.** Momentarily touch the BLK/RED and group wire from step 2 to power to cycle through the patterns in TABLE 5. The pattern for the set of light heads configured will only be set in the level mode selected.

<b>Light Head Group Wires - Unsynchronized</b>	
<b>Function Wire Color</b>	<b>Light Head Group</b>
GRN/WHT	Front Outboard
BLU/BLK	Front Inboard
ORG/BLK	Front Center
GRN	Front Corner
BLK/WHT	Rear Outboard
RED/WHT	Rear Inboard
BLU/WHT	Rear Center
BLU	Rear Corner
BLK	Rear End

**Table 4**

<b>Light Head Group Flash Patterns - Unsynchronized</b>	
<b>Order</b>	<b>Group Flash Rate</b>
1	Quad 75 FPM
2	Single 150 FPM
3	Double 75 FPM
4	Triple Pop 75 FPM
5	Variable Rate - Single
6	NFPA Quad 77 FPM
7	Cycle Flash
8	Off

**Table 5**

To restore the Factory Default Flash Rate to a module group, apply +power to the level you wish to change (see TABLE 1), then hold the appropriate rate selection wire and the BLK/RED wire to +power for more than four seconds. The four corner light heads will flash once, and then stay on to indicate that the Factory Default setting has been restored.

For instructions related to the California Title 13 steady burning red warning lamp requirement during level mode operation, please contact

## Emergency Mode Flash Pattern Selection – Synchronized

The seven customizable emergency flash pattern modes in Table 3 each have the option to be synchronized. This condenses the module groups from TABLE 4 to front and rear.

To synchronize a set of module groups:

**Step 1.** Power-up the Lightbar and apply +power to the appropriate level mode wires (see TABLE 2) and the BLK/RED Pattern select wire in the 16 conductor cable.

**Step 2.** Momentarily touch the RED wire to +power set the level mode to synchronized. The four corner modules will turn on each time the lightbar is toggled between unsynchronized and synchronized.

Once synchronized, the module group in each mode flash sequence defaults to OFF. To change a light head group flash sequence selection:

**Step 1.** Power-up the Lightbar and apply +power to the appropriate level mode wires (see TABLE 2) and the BLK/RED Pattern select wire in the 16 conductor cable.

**Step 2.** Momentarily touch the appropriate light head group wire, shown in TABLE 6, to +power to cycle through the sequences shown in shown in TABLE 6.

Light Head Group Wires - Synchronized	
Function Wire Color	Light Head Sequence Group
GRN/WHT	Front
BLU/BLK	Rear

**Table 6**

Light Head Group Flash Sequence - Synchronized	
Order	Sequence
1	Off
2	Left/Right
3	Even/Odd

**Table 7**

After the module groups have a sequence selected, a flash pattern rate can be chosen. The default rates are as shown in TABLE 7.

Level Mode Default Patterns by Group - Synchronized				
Light Head Group Flash Rate	L1	L2	L3	
Front	Quad 75 FPM	Quad 75 FPM	Cycle	
Rear	Quad 75 FPM	Quad 75 FPM	Cycle	
	L1 + L2	L1 + L3	L2 + L3	L1 + L2 + L3
Front	Quad 75 FPM	Cycle	Cycle	Cycle
Rear	Quad 75 FPM	Cycle	Cycle	Cycle

**Table 8**

To change a light head group flash pattern rate selection:

**Step 1.** Power-up the Lightbar and apply +power to the appropriate level mode wires (see TABLE 2) and the BLK/RED Pattern select wire in the 16 conductor cable.

**Step 2.** Momentarily touch the appropriate light head group wire, shown in Table 10, to +power to cycle through the flash pattern rates shown in shown in TABLE 10.

Light Head Group Flash Rate Wires - Synchronized	
Function Wire Color	Light Head Group
BLK	Front
BLU/WHT	Rear

**Table 9**



"Light Head Group Flash Rates - Synchronized"						
No.	Description	FPM	SAE J845 (180°)*		SAE J595	CA T13
			A, B, W, R	G	A, B, W, R	A, B, R
1	Double	75	Class 1	Class 3	Class 1	Class B
2	Triple	75	Class 1	Class 3	Class 1	-
3	Quad	75	Class 1	Class 3	Class 1	Class B
4	Quint	75	Class 1	Class 3	Class 1	-
5	Triple Pop	75	Class 1	Class 3	Class 1	Class B
6	Quad Pop	75	Class 1	Class 3	Class 1	Class B
7	Single	150	Class 1	Class 3	Class 1	-
8	Double	150	Class 1	Class 3	Class 1	-
9	Triple	150	Class 1	Class 3	Class 1	-
10	Quad	150	Class 1	Class 3	Class 1	-
11	Quint	150	Class 1	Class 3	Class 1	-
12	Triple Pop	150	Class 1	Class 3	Class 1	-
13	Quad Pop	150	Class 1	Class 3	Class 1	-
14	Single	375	-	-	-	-
15	NFPA Quad	77	Class 1	Class 3	Class 1	-
16	Cycle Flash	-	-	-	-	-

\* Applies to lightbars with a minimum of the indicated colors in two corners.

**Table 10**

To restore the Factory Default Emergency Warning Flash Rate to module group in a level mode, hold the appropriate rate selection wire and the BLK/RED wire to +power for more than four seconds. The four corner light heads will flash once, and then stay on to indicate that the Factory Default Emergency Warning Flash Rate has been restored.

**Arrowstik Flash Pattern Selection**

The CC Series Lightbar is designed to offer user selectable traffic directing and traffic warning flash patterns. Each of the ArrowStik® functions (LEFT, CENTER-OUT, RIGHT and FLASH) can be programmed individually for unique patterns and flash rates. This allows the greatest flexibility when controlling the various Lightbar configurations available. A Lightbar may be wired as a 5, 6, 7 or 8 light head configuration. The Lightbar will come from the factory with the Building Fast flash pattern as the default for LEFT, CENTER-OUT and RIGHT. The default pattern for FLASH is Drivers Side Cut – Front, corner & alley.

When selecting a flash pattern for one of the four Arrowstik functions, apply power to the lightbar and the desired function wire (listed in Table 2). Briefly touch the Pattern Select wire (RED/BLK) to +power to cycle through the flash patterns shown in the table below. Ensure power isn't applied to any other function wire during flash pattern selection.

Flash patterns marked with an asterisk (\*) can be selected in Fast, Medium or Slow flash rate.

Arrowstik Left, Center-Out & Right Flash Patterns	
Order	Flash Pattern
1	Building*
2	Building, 3-Flash*
3	Traveling Ball, 3-Flash*
4	Build/Collapse*

**Table 11**

Arrowstik Flash Patterns	
Order	Flash Pattern
1	Drivers Side Cut - Front corner & alley
2	Drivers Side Cut - Rear corner & alley
3	Drivers Side Cut - Front outboard, corner alley
4	Standard Flash*
5	Quad Flash Standard
6	Simultaneous Flash*
7	Quad Flash Simultaneous
8	Even/Odd Flash*
9	Quad Flash Even/Odd
10	Left/Right Flash*
11	Quad Flash Left/Right
12	Travelling Ball Flash*

**Table 12**

To restore the Factory Default ArrowStik Flash Patterns, hold the BLK/RED and desired function wire to +power for ~four seconds.

## Takedown, Work and Alley Light Flash Pattern Selection

When selecting a flash pattern for one of the Takedown/Work Light or Alley Light Modes, power-up the light bar and apply power to the Takedown Flash Mode (BLK) or the Alley Flash Mode (BLU/WHT). Programming will not work if more than one function is selected. Touch the Pattern Select wire (RED/BLK) to +power to cycle through the flash patterns shown in the table below.

Takedown, Work & Alley Light Flash Patterns	
Order	Flash Pattern
1	Medium Single 115 FPM
2	Slow Single 60 FPM
3	Fast Double 115 FPM
4	Slow Double 60 FPM
5	Fast Six 80 FPM
6	Slow Six 60 FPM
7	Variable Rate - Single
8	NFPA Quad 75 FPM
9	Cycle Flash
10	Fast Quad 80 FPM
11	Slow Quad 60 FPM
12	Fast Single 375 FPM

**Table 13**

## Lightbar Dim Operation

Lightbar LED modules are equipped with a low power "Dimming" mode. Dimming is controlled by applying +power to the blue wire of the control cable. Dimming can also be controlled by an optional photo cell. Please contact the factory for more information or upgrade options.

## Options and Maintenance

### Lens Cleaning

Occasional cleaning of the lenses will ensure optimum light output. Take care when cleaning lenses - although tough, polycarbonate scratches easily. Clean the lens and base with soap and water or a lens polish using a soft cloth. Do not use solvents as they may damage the polycarbonate.

### Lens Removal and Installation

**Step 1.** Uninstall the lens clips (4 per lens), as shown in FIGURE 7, using a flat blade screwdriver.

**Step 2.** Insert the screwdriver into the gap along the lens edge, and twist the screwdriver to lift the lens.

**Step 3.** When finished, reinstall making sure the lens gasket is not damaged or folded. Replace the clips by hooking into the bottom lens slot and pressing the upper portion into the clip pocket.


### LED Module Removal and/or Replacement

**Step 1.** Remove screw(s) securing the light head assembly to the mounting plate. See FIGURE 7.


**Step 2.** Lift the light head assembly and disconnect wiring at the connectors.

**Step 3.** During re-assembly, repeat the prior steps in reverse order. Torque screw(s) securing the light head assembly to the mounting plate using 10 in-lbs or 1.13 Nm.

**NOTE:** Operating the vehicle without the outer lens installed on the product may result in damage that will NOT be covered under warranty.

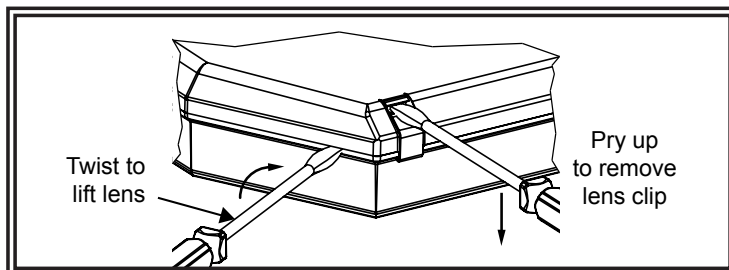

**Figure 7**

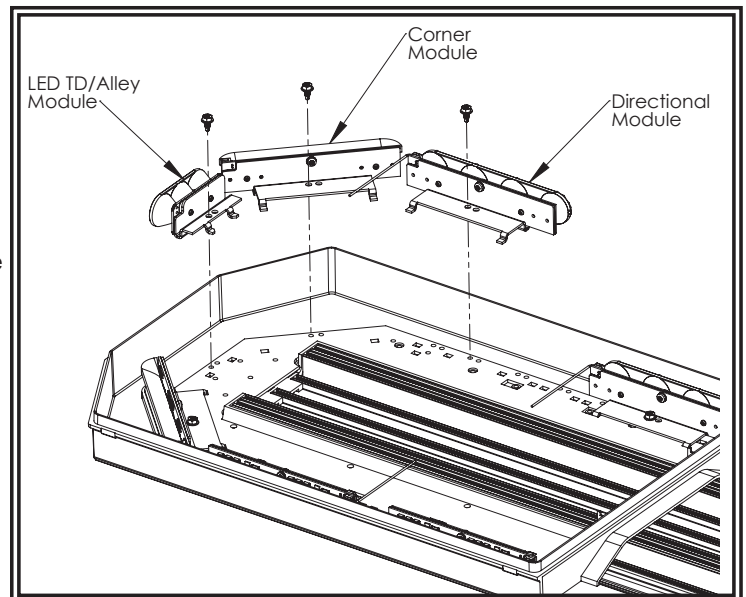

**Figure 8**

## Troubleshooting

All lightbars are thoroughly tested prior to shipment. However, should you encounter a problem during installation or during the life of the product, follow the guide below for troubleshooting and repair information. If the problem cannot be rectified using the solutions given below, additional information may be obtained from the manufacturer – contact details are at the end of this document.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
Does not function	Poor power or ground connection	In CC Lightbars, a green light on the central control board should flash when power is first applied to the bar and during flash pattern selection.
	Blown fuse	Check wiring, replace fuse
Incorrect flash patterns	Wrong flash configuration	Cycle through flash patterns according to the supplied wire key and wiring instructions section of this installation guide.

## Warranty

### Manufacturer Limited Warranty and Limitation of Liability:

Manufacturer warrants that on the date of purchase, this product will conform to Manufacturer's specifications for this product (which are available from the Manufacturer upon request). This Limited Warranty extends for sixty (60) months from the date of purchase.

DAMAGE TO PARTS OR PRODUCTS RESULTING FROM TAMPERING, ACCIDENT, ABUSE, MISUSE, NEGLIGENCE, UNAPPROVED MODIFICATIONS, FIRE OR OTHER HAZARD; IMPROPER INSTALLATION OR OPERATION; OR NOT BEING MAINTAINED IN ACCORDANCE WITH THE MAINTENANCE PROCEDURES SET FORTH IN MANUFACTURER'S INSTALLATION AND OPERATING INSTRUCTIONS VOIDS THIS LIMITED WARRANTY.

### Exclusion of Other Warranties:

MANUFACTURER MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED. THE IMPLIED WARRANTIES FOR MERCHANTABILITY, QUALITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ARISING FROM A COURSE OF DEALING, USAGE OR TRADE PRACTICE ARE HEREBY EXCLUDED AND SHALL NOT APPLY TO THE PRODUCT AND ARE HEREBY DISCLAIMED, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ORAL STATEMENTS OR REPRESENTATIONS ABOUT THE PRODUCT DO NOT CONSTITUTE WARRANTIES.

### Remedies and Limitation of Liability:

MANUFACTURER'S SOLE LIABILITY AND BUYER'S EXCLUSIVE REMEDY IN CONTRACT, TORT (INCLUDING NEGLIGENCE), OR UNDER ANY OTHER THEORY AGAINST MANUFACTURER REGARDING THE PRODUCT AND ITS USE SHALL BE, AT MANUFACTURER'S DISCRETION, THE REPLACEMENT OR REPAIR OF THE PRODUCT, OR THE REFUND OF THE PURCHASE PRICE PAID BY BUYER FOR NON-CONFORMING PRODUCT. IN NO EVENT SHALL MANUFACTURER'S LIABILITY ARISING OUT OF THIS LIMITED WARRANTY OR ANY OTHER CLAIM RELATED TO THE MANUFACTURER'S PRODUCTS EXCEED THE AMOUNT PAID FOR THE PRODUCT BY BUYER AT THE TIME OF THE ORIGINAL PURCHASE. IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR LOST PROFITS, THE COST OF SUBSTITUTE EQUIPMENT OR LABOR, PROPERTY DAMAGE, OR OTHER SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES BASED UPON ANY CLAIM FOR BREACH OF CONTRACT, IMPROPER INSTALLATION, NEGLIGENCE, OR OTHER CLAIM, EVEN IF MANUFACTURER OR A MANUFACTURER'S REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MANUFACTURER SHALL HAVE NO FURTHER OBLIGATION OR LIABILITY WITH RESPECT TO THE PRODUCT OR ITS SALE, OPERATION AND USE, AND MANUFACTURER NEITHER ASSUMES NOR AUTHORIZES THE ASSUMPTION OF ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SUCH PRODUCT.

This Limited Warranty defines specific legal rights. You may have other legal rights which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages.



10986 North Warson Road, St. Louis, MO 63114 USA  
**Technical Service** USA (314) 996-2800  
c3\_tech\_support@code3esg.com  
**CODE3ESG.com**

An ECCO SAFETY GROUP™ Brand  
**ECCOSAFETYGROUP.com**