

4-BUTTON KEYFOB REMOTE

INSTALLATION INSTRUCTIONS

The 2GIG 4-Button Keyfob Remote (2GIG-KEY2-345) communicates with the 2GIG Control Panel on the 345 MHz frequency. It gives users the ability to turn the security system ON and OFF before entering the home or after exiting. If there is an emergency, you can turn on the siren and automatically call the central monitoring station. Keyfobs can be programmed to operate the programmable output in the Control Panel. Use with the *2GIG Universal Garage Door Receiver* (2GIG-GDR1-345) to open a garage door. The keyfob is a lithium coin battery-powered, wireless keyfob designed to fit on a key chain, in a pocket, or in a purse. It provides a convenient option for the following system operations:


- Arm the system (doors, windows, and motion sensors)
- Arm the system with no entry delay (if programmed)
- Disarm the system
- Trigger panic alarms
- Turn system-controlled lights on or off (via the open collector output)
- Other open collector output functions (if applicable)
- Use with the 2GIG-GDR1-345 to open a garage door. See the *2GIG-GDR1-345 Installation Instructions*.

Contents

Verify that the package includes the following:

- 1—4-Button Keyfob Remote
- 1—Key Ring
- 1—Lithium Coin Battery (included)

 Figure 1 4-Button Keyfob Remote

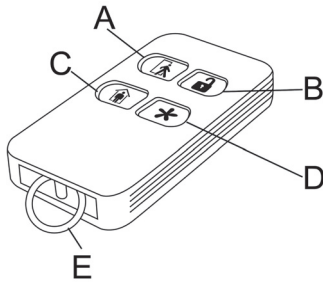

- A Away button
- B Disarm button
- C Stay button
- D Auxiliary button
- E Key ring

Programming

Use the following guidelines to add keyfobs to the system. For detailed instructions, refer to “*Wireless (RF) Keyfob Programming*” in the Control Panel’s *Installation & Programming Guide*:

- Program (learn) the keyfobs into the control panel as non-supervised sensors.
- Each learned keyfob uses one of the available sensor numbers.

For more details, refer to the *2GIG-GDR1-345 Installation Instructions*. Use the following guidelines to add keyfobs to the 2GIG-GDR1-345:

- Press and release the learn button.
- The learn indicator will light if there’s room in memory

- Activate the * (Auxiliary) button on the transmitter while the indicator is lit (within 15 seconds)
- Receiver indicator flashes
- Repeat steps for additional transmitters (up to 10)

Testing

Refer to the Control Panel’s *Installation & Programming Guide* to learn how to initiate panel test mode.

Test the keyfob by pressing each one of the keyfob buttons:

- **Disarm button.** Hold for two (2) seconds to disarm the Control Panel. Doors, windows, and motion sensors are disarmed.
- **Away button.** Hold for two (2) seconds to arm the Control Panel in Away mode. Doors, windows, and motion sensors are armed.
- **Stay button.** Hold for two (2) seconds to arm the Control Panel in Stay mode. Doors and windows are armed.
- **Auxiliary button.** If programmed, can trigger a pre-selected output. See the Control Panel’s *Installation & Programming Guide* for details.
- **Away & Disarm buttons.** If programmed, pressing BOTH the Away and Disarm buttons at the same time for five (5) seconds, will send one of four types of emergency signals: (1) silent panic; (2) audible alarm; (3) silent panic; or (4) fire.

NOTE: It is recommended that a system test be performed per the Control Panel’s *Installation & Programming Guide* at least once a year.

Inserting and Replacing the Battery

The key fob arrives ready to use (batteries already installed).


To replace the battery:

- 1 Remove the screw from the back of the keyfob.
- 2 Separate the keyfob’s faceplate from its backplate.
- 3 Slide the existing battery out from under the metal battery clip on the printed circuit board.

IMPORTANT: Always dispose and/or recycle used batteries in accordance with the hazardous waste recovery and recycling regulations for your location. Your city, state, or country may also require you to comply with additional handling, recycling, and disposal requirements.

- 4 Insert the replacement battery into the metal battery clip on the printed circuit board. The plus (+) sign on the battery should be facing up and the minus (-) side facing down as illustrated below.

 Figure 2 4-Button Keyfob Remote—Battery Compartment

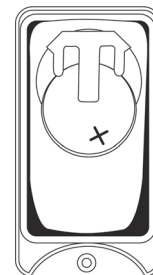

- 5 Replace the printed circuit board into the faceplate of the keyfob.

- 6 Replace the key ring in the space provided bottom of the fob. Then snap the keyfob faceplate and backplate closed.
- 7 Secure the screw into the back of the keyfob.


WARNING: Failure to follow these warnings and instructions can lead to heat generation, rupture, leakage, explosion, fire, or other injury, or damage. Do not insert the battery into the compartment in the wrong direction. Always replace the battery with the same or equivalent type (see *Specifications*). Never recharge or disassemble the battery. Never place the battery in fire or water. Always keep batteries away from small children. If batteries are swallowed, promptly see a doctor.

California Only: This perchlorate warning applies only to Manganese Dioxide Lithium cells sold or distributed ONLY in California, USA. Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

SPECIFICATIONS

Wireless Signal Range	350 ft (106.7 m), open air, with Wireless Control Panel
Code Outputs	Arm; Disarm; Panic; Relay Control
Transmitter Frequency	345.00 MHz (crystal controlled)
Unique ID Codes	Over one (1) million different code combinations
Supervisory Interval	70 minutes
Dimensions (L x W x H)	1.23 x 2.26 x 0.45 in. (3.12 x 5.74 x 1.14 cm) typical
Weight (including battery)	0.65 oz. (18.4 g)
Housing Material	ABS Plastic
Color	Black
Operating Temperature	32°-120° F (0°-49° C)
Relative Humidity	5-90% Non-Condensing
Battery (installed)	One (1) CR 2025 3V or equivalent Lithium coin battery
Certification	Anatel, ETL, FCC, IC, IFETEL, and NOM

 REGULATORY INFORMATION

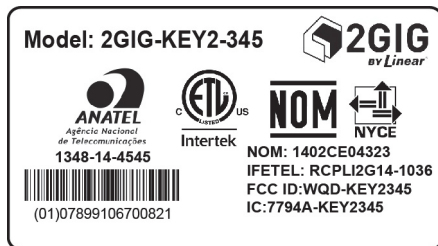

FCC Notice

This device complies with Part 15 of the FCC's Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with FCC radiation exposure limits for an uncontrolled environment. Avoid operating this product at a distance less than 20 cm from the user.

NOTE: Any changed or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada (IC) Compliance

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

LIMITED WARRANTY

This Nortek Security & Control product is warranted against defects in material and workmanship for two (2) years. This warranty extends only to wholesale customers who buy direct from Nortek Security & Control or through Nortek Security & Control's normal distribution channels. Nortek Security & Control does not warrant this product to consumers. Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any.

There are no obligations or liabilities on the part of Nortek Security & Control for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation. All implied warranties for functionality, are valid only until the warranty expires. This Nortek Security & Control Warranty is in lieu of all other warranties expressed or implied.

2GIG

1950 Camino Vida Roble, Suite 150
Carlsbad, CA 92008-6517 USA



For technical support in the USA and Canada:

855-2GIG-TECH (855-244-4832)
Email: 2gigtechsupport@nortek.com
Visit dealer.2gig.com for technical support hours of operation

For technical support outside of the USA and Canada:

Contact your regional distributor
Visit www.nortekcontrol.com for a list of distributors in your region

10004962 Rev. A

NORTEK
SECURITY & CONTROL A Nortek Company