

Nokia Noise Cancelling Earbuds (BH-805)

Quick Start Guide

 
 
 
NOKIA

What's in the box

- Charging Case
- Earbuds (L/R)
- Ear Tips (S/M/L)
- USB Type-C cable
- Quick Start Guide

Product overview

| | |
|---|-----------------------|
| 1 | Charging contacts (L) |
| 2 | Charging contacts (R) |
| 3 | Battery status LEDs |
| 4 | Reset button |
| 5 | USB Type-C port |
| 6 | LED indicator light |
| 7 | Microphone |
| 8 | Touch control area |
| 9 | Ear tip |

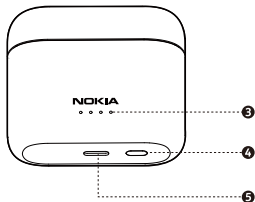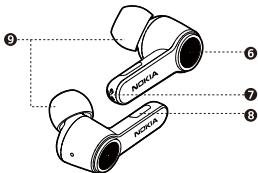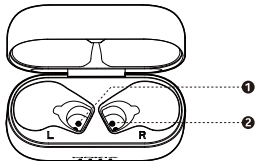


Power on

When you open the charging case, the earbuds will turn on and pair with each other automatically. During the pairing process, the LED indicator lights will flash orange and white alternately. When they have successfully paired, the LED indicator light of the right earbud will flash white rapidly and the earbuds are ready to connect with your Bluetooth® device.



 Pairing

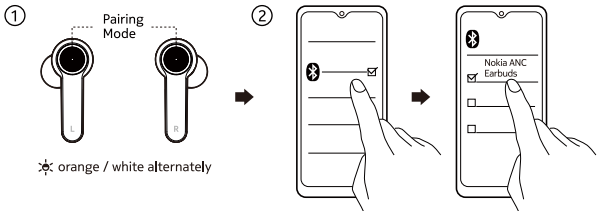


- The LED indicator lights of the earbuds will flash white when they are successfully connected with your Bluetooth device.

| | |
|---|---------------|
| R | ⦿ x2 / 5 secs |
| L | ⦿ x1 / 5 secs |


- After the initial pairing, the earbuds will automatically connect with your Bluetooth device whenever the charging case is opened.

 - Connect with another device:
Turn off Bluetooth in the device which the earbuds connected with (now the earbuds can be searched by other devices) > repeat the step ② to connect with another device.
- The earbuds will automatically power off if there is no Bluetooth connection within 5 minutes. (Exception: if the ANC mode is active, the earbuds will not turn off automatically.)
- Reset (facing operation abnormal or to delete pairing records):
Place the earbuds back in the charging case (keep the case open) > press and hold the reset button for 5 seconds, the Battery status LEDs on the charging case flash white (enter the reset process) > the LED indicator lights of the earbuds flash orange and white alternately (the reset is successful and the earbuds enter the pairing process).

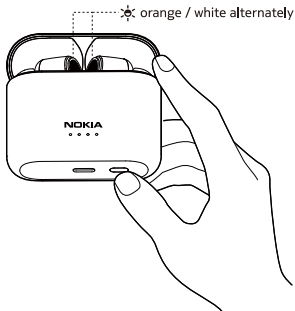


Charging

 
- ① Charge the charging case:
Connect the USB Type-C cable to a power source to begin charging. The battery status LEDs show the current battery status while opening the charging case.

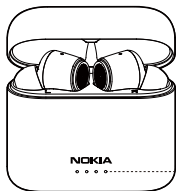

| | |
|---------------|-----------|
| Fully charged | ● ● ● ● ● |
| < 75% | ● ● ● ○ |
| < 50% | ● ● ○ ○ |
| < 25% | ● ○ ○ ○ |
| < 10% | ⚡ ○ ○ ○ |
| < 5% | ○ ○ ○ ○ |

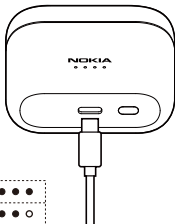 


 - ② Charge the earbuds:
Earbuds' LED indicator lights turn orange when charging, and turn off when fully charged. If the earbud is low in battery power, the LED indicator light will flash orange every 5 seconds.



| | |
|---------------|-------------------|
| Charging | ● orange |
| Fully charged | ○ off |
| Low battery | ⚡ orange / 5 secs |

 Touch Controls

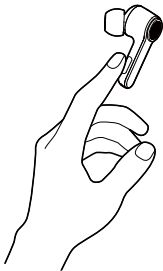

| | | |
|---------------------|--|----------|
| Music | | x 2 |
| | | x 1 |
| | | x 1 |
| | | x 3 |
| | | x 3 |
| Call | | x 2 |
| | | x 2 |
| | | ⌚ 2 secs |
| Manually Power on | | ⌚ 2 secs |
| Voice Assistant | | x 2 |
| ANC / Ambient mode* | | ⌚ 2 secs |

* You can switch the modes by holding the touch control area for 2 seconds as below:
ANC mode (Active Noise Cancelling) > Ambient mode > off

Troubleshooting

| Problem | Reason | Solutions |
|---|---|--|
| Unable to turn on earbuds | Battery is low | Charge the earbuds for 1.5-2 hours and restart the earbuds |
| No sound after paired | Not pairing properly | Pair the earbuds again |
| Turn off automatically | Battery is low | Charge the earbuds for 1.5-2 hours |
| No light on the case during charging | Error with power supply | Check whether the charging cable is plugged in. Ensure the switch button is turned on. |
| Hearing echoes | Volume is too loud or the environment is too noisy | Adjust the volume or go to a quieter place |
| Having noise during a call / Sound skips frequently | Environment interference caused or distance between earbuds and mobile is too far | Change locations or reduce the distance between the earbuds and devices |
| Sound is too soft | Low volume | Increase the volume |
| Cannot turn on the earbuds after taken out from the charging case | Charging case is low in battery | Charge the earbuds and the charging case for 1.5-2 hours |

You can use a single earbud. If the earbuds have been paired with your Bluetooth device before, it will automatically connect with your device when taken a single one out of the charging case.

Product and safety information


Remote control functions may vary depending on the model of your device and application. Sound track instructions do not respond to iOS devices. Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. Bluetooth devices must, however, be within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

- Frequency Band: 2402 MHz - 2483 MHz
- Maximum Radio Frequency Power: < 10 dbm/MHz

For your safety

Important: Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.


Switch off in restricted areas

-  Switch the device off when a Bluetooth headset use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

Interference

-  All wireless devices may be susceptible to interference, which could affect performance.


Batteries, chargers, and other accessories

-  Use only batteries, chargers, and other accessories approved by HMD Global Oy for use with this device. Do not connect incompatible products.


Protect your hearing

-  To prevent possible hearing damage, do not listen at high volume levels for long periods.

Hearing

-  Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

 
Small children

-  Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Take care of your device

Handle your device with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- The earbuds are featured with water protection level IPX5. Water protection level is not a permanent condition and can decrease over time.
- The charging case is not water resistant.



Water Protection



No Water Protection

Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminium, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy.

Crossed-out wheelee bin symbol



The crossed-out wheeled bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life.

Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.

Battery info

Your device has an internal, non-removable, rechargeable battery. Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Charging time can vary depending on device capability.

Battery safety

If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device may temporarily stop working if its battery is too hot or too cold.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste. Use the battery for its intended purpose only. Improper use of, or use of unapproved or incompatible, batteries may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery is damaged, take it to a service centre or your local shop before continuing to use it. Never use a damaged battery. Do not charge your device during a lightning storm.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a

minimum separation of 15.3 centimetres (6 inches) between a wireless device and the implanted medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

FCC statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Copyrights and other notices

The availability of products, features, apps, and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Manufacturer and importer in EU: HMD Global Oy, Bertel Jungin aukio 9, 02600 Espoo, Finland. HMD Global Privacy Policy, available at <http://www.nokia.com/phones/privacy>, applies to your use of the device.

In the unlikely event that this product is faulty, please return it to the store where you purchased it with your proof of purchase. For more information on this or other products please visit <http://www.nokia.com/phones/support>.

© 2021 HMD Global. All rights reserved. HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

Declaration of Conformity



Hereby, HMD Global Oy declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of Conformity can be found at : www.nokia.com/mobile-declaration-of-conformity.