 


WDH-210HA-12R

DEHUMIDIFIER

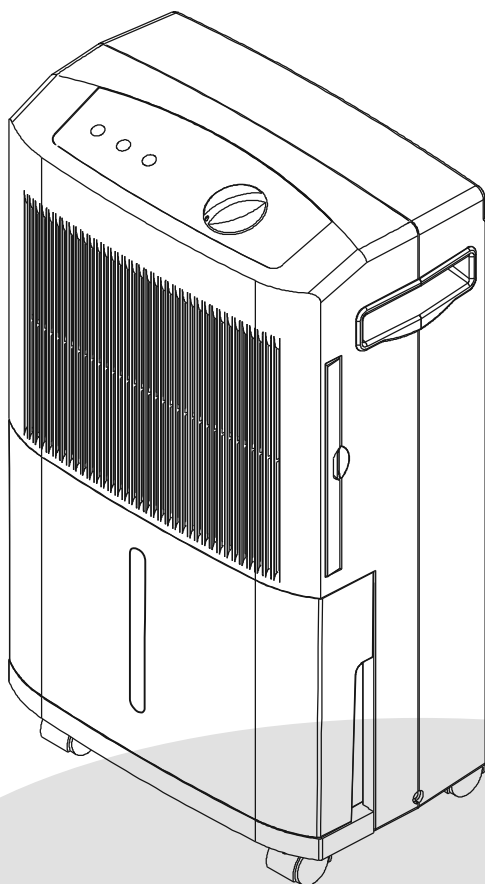

CONTENTS

WARNING / CAUTION	1
DESCRIPTION OF COMPONENTS	
FUNCTION EXPLANATION	2
OPERATING INSTRUCTIONS	3
CONTINUOUS DRAINAGE	4
CAUTIONS	5
MAINTENANCE / EMERGENCY	6
SPECIFICATION	LAST PAGE

 
USER'S MANUAL

VOLTAGE: 220-240V~50Hz


**THANK YOU FOR CHOOSING A NEW WIDETECH DEHUMIDIFIER.
BEFORE USE, PLEASE READ THE INSTRUCTION MANUAL CAREFULLY.
PROUDLY DISTRIBUTED BY AUSCLIMATE PTY LTD.**

WARNING


- Do not fold the power cord as shown below.

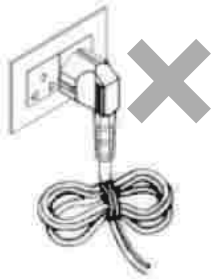

 - Make sure the plug is firmly plugged in properly.

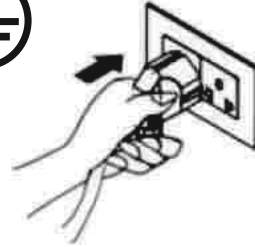

 
- Do not use multiple socket as shown below.

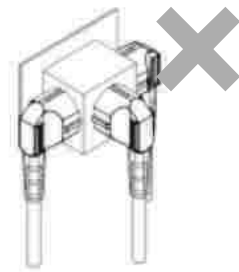


- Make sure the plug is clean.



 - After turning the unit off, please take plug out of the socket.

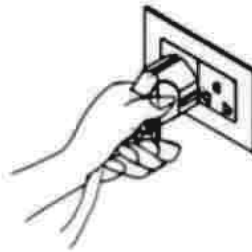


 - Do not have wet hands when connecting the power plug.

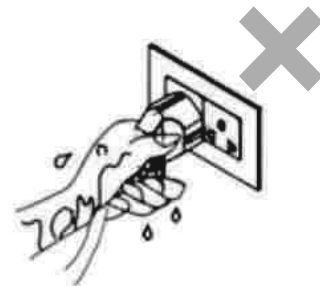


CAUTION

 
- Do not place anything on top of the control panel.

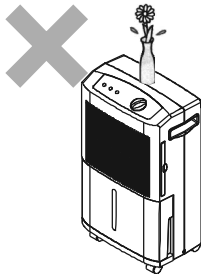

 
- Do not cover all the air outlets of the machine.

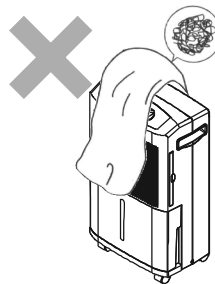

 - Do not allow children to climb on or play with the machine.

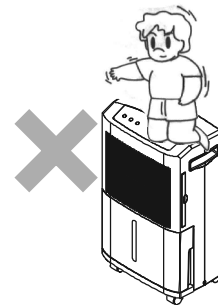

 
- Do not wet the machine or the control panel.

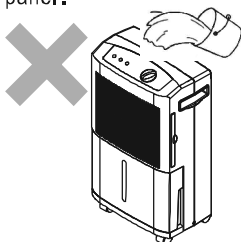


- Keep the flammable gas/oil away from the machine.



 
- Contact a professional for service repair.

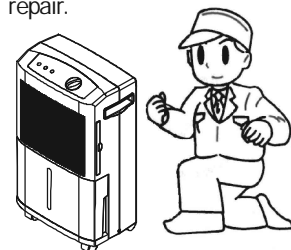

DESCRIPTION OF COMPONENTS

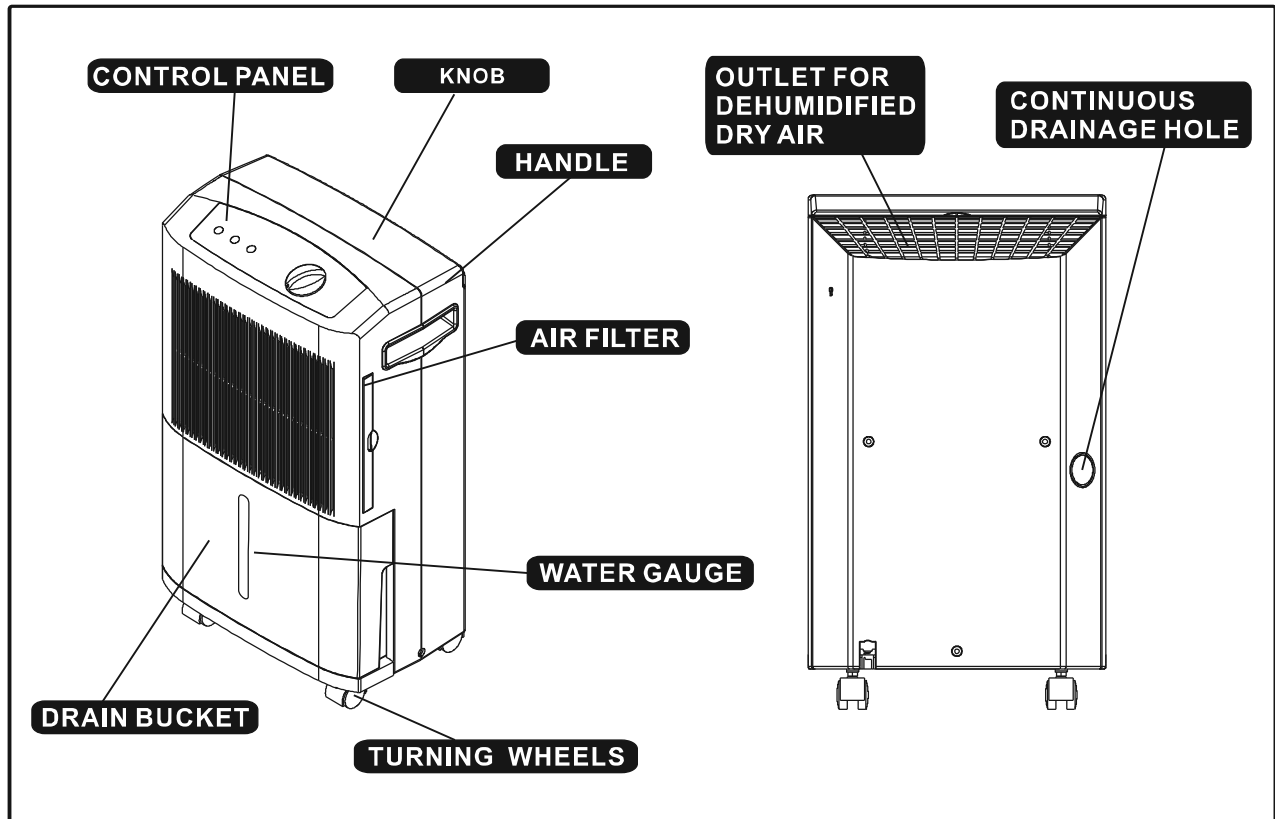 


FUNCTION EXPLANATION

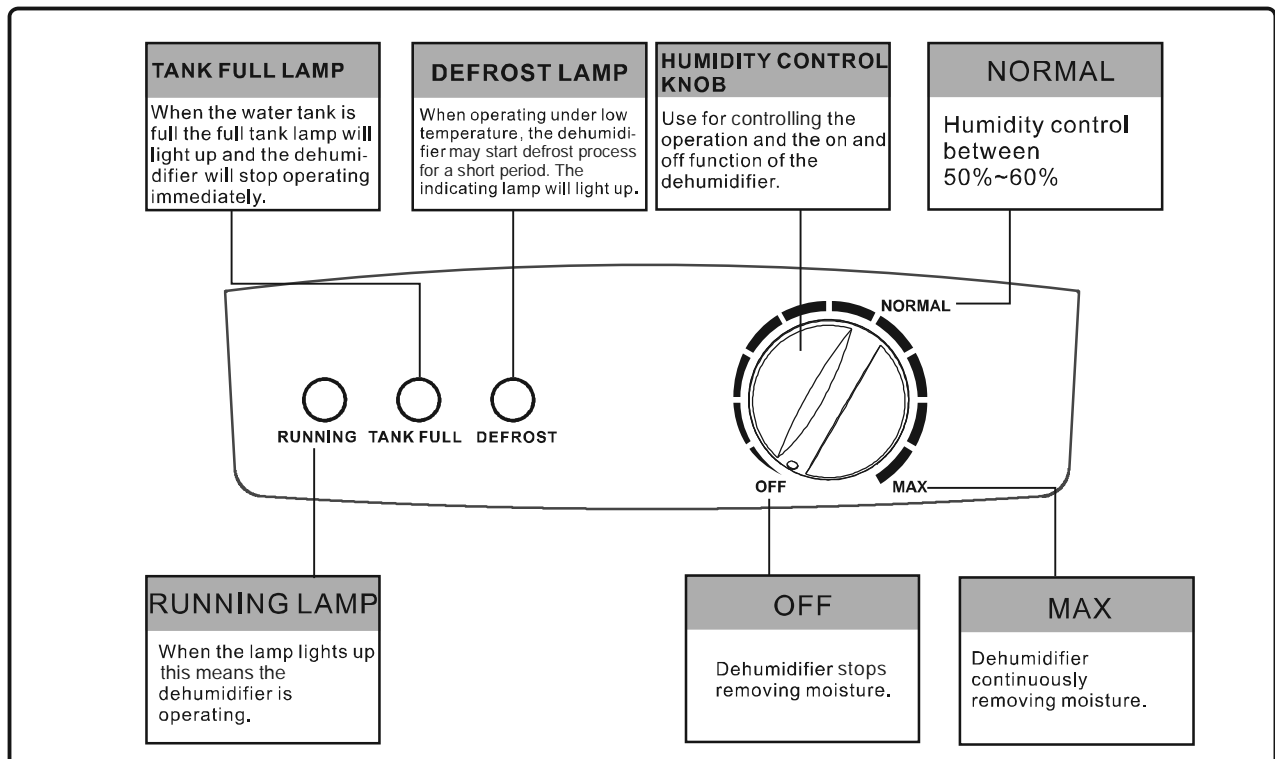 



OPERATING INSTRUCTIONS

• Start Operation

 
- 1) Make sure the water tank is placed in proper position. (When plugged in for the first time the full tank lamp may light up. If so, just pull out the water tank then push it back to the proper position.)

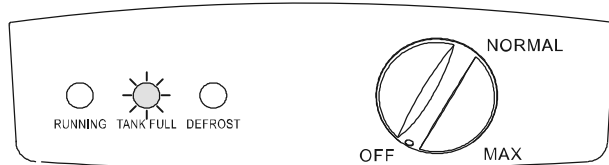

  - 2) Make sure the plug is firmly plugged on in the socket.

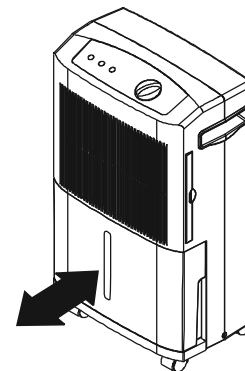

 
- 3) Turn the control knob to the suitable humidity position. If the indoor humidity is over the set humidity, then the machine will start removing moisture.

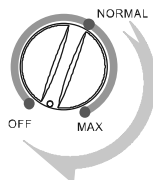

- 4) When the humidity in the room reaches the set humidity the machine will stop operating.
- 5) When the humidity in the room is over the set humidity the machine will start removing moisture again.
- 6) The circulation between point 3). 4). 5) is controlled by the set humidity.

• When Full Tank Lamp Is On

 When the water tank is full, the indication lamp will light up, and the dehumidifier will stop operating. Remove the water in the tank, then place the water tank back to its proper position and the machine will start operating again.

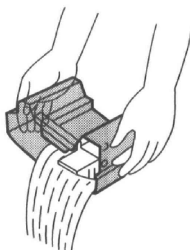

Remove the water in the water tank with two hands

• DEFROST

 
When operating in low temperatures the surface of the dehumidifier's coil may accumulate ice and effect the efficiency of the dehumidifier. When this happens the machine will go into periodic defrost mode automatically. This is quite normal. Defrost lamp will come on and the machine will stop operating until the ice has thawed. As soon as the ice has melted, the machine will restart and continue the dehumidifying process. Defrost time may vary depending on room temperature and humidity.

The dehumidifier will operate in temperatures down to 5°C, however it is not recommended to use the dehumidifier in temperatures below 5°C. If the dehumidifier freezes up, turn the machine off for a few hours and then restart.


CONTINUOUS DRAINAGE

- Continuous Drainage (hose not included)

- 1) Prepare to drain out the water using PVC hose (inside dia.13mm).
- 2) Take out the water tank and use tool to open the closed hole at the back of the machine to put in the hose.

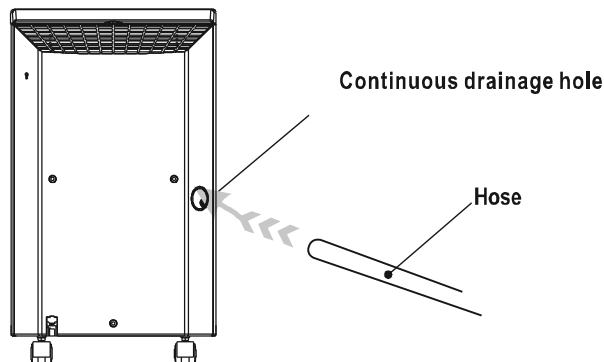

 
- 3) Put in the PVC hose through the hole, then connect the PVC hose to the internal drain pipe.

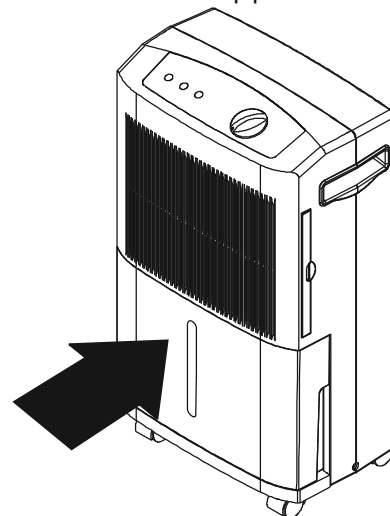

- 4) Put the water tank back.


- The Proper Way To Place The Water Drainage PVC Hose

 When using continuous drainage, the PVC hose must be placed horizontally below the level of the drainage hole. Avoid uneven ground and kinking hose.

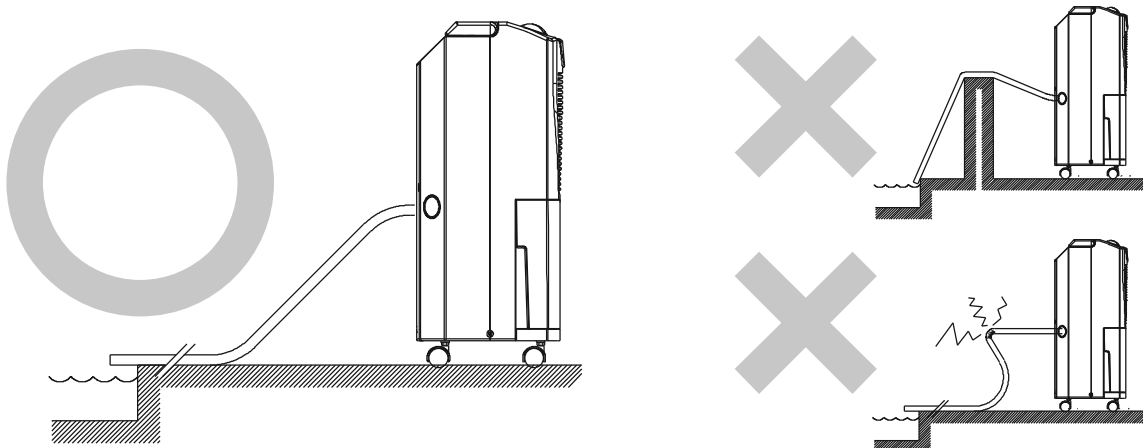


CAUTIONS

 
- Do not pull the power cord to avoid breaking the cord, which may lead to danger.

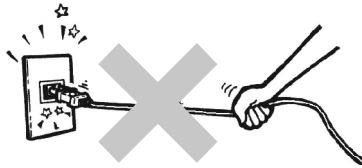

 
- Do not use insect, oil or paint spray around the machine, it might cause damage to the plastic parts or start a fire.

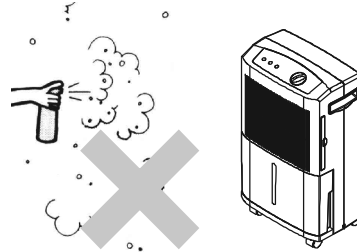

 
- Do not place the machine on an uneven surface, to avoid shaking, noise and leakage of water.

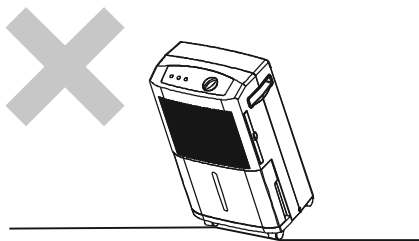

 
- This model can be placed close to the wall and you may hang the clothing at least 50 cm above the machine.

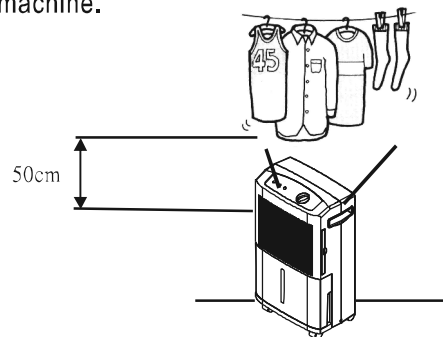

 
- It is dangerous to put anything into the machine.

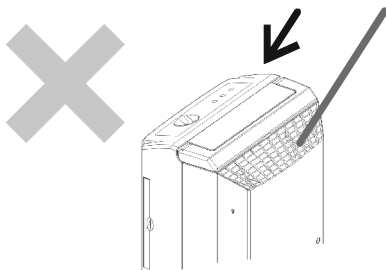

 
- Close all windows to reach maximum possible efficiency.

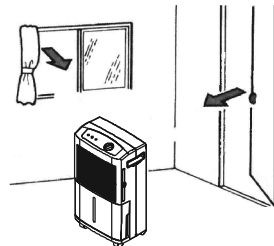

 - Keep the machine away from all sources of heat.

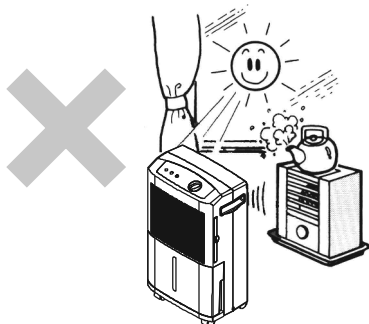


 - When moving or storing the dehumidifier, do not place it sideways or upside down. Avoid violent shaking.

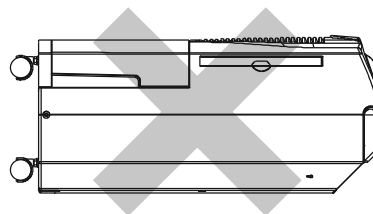

MAINTENANCE

 Please make sure the dehumidifier is unplugged before servicing or cleaning the machine.

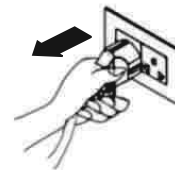

1) Clean the Shell :

- A. Wipe the shell using soft clean cloth.
- B. If the dehumidifier is very dirty, please use mild detergent then wipe off the detergent using a semi-dried cloth.
- C. Do not wash the machine with a hose or immerse it in water.

2) Clean the Air Filter :

 
 
The air filter filtrates the dust and impurities in the air. For optimum dehumidifying efficiency clean the air filter every 2 weeks or as required.

● Cleaning Steps :

- A. Pull out the filter gently.

- B. Clean the filter by vacuum cleaner or washing with clean water then dry the filter using dry cloth.

- C. Place the filter back to it's position.

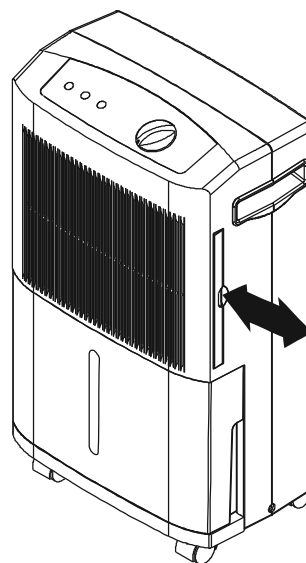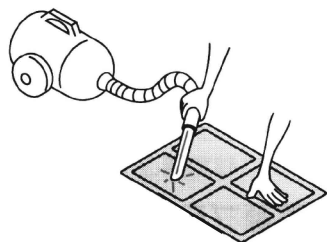

EMERGENCY

If a problem occurs, switch off and unplug the unit immediately. For all troubleshooting please contact Ausclimate (www.ausclimate.com.au) and for you own safety do not disassemble the dehumidifier.

SPECIFICATION

MODEL	WDH-210HA-12R
POWER	220-240V~50Hz
MOISTURE REMOVAL	6 L/D (27°C 60%RH) 12 L/D (30°C 80%RH)
POWER INPUT	210W
SIZE OF SHELL (H × W × D)	540*310*220 mm
WEIGHT	11 kg
OPERATING TEMPERATURE	5°C ~ 32°C

F-GAS REGULATION (EU) No.517/2014:

Do not vent R-134a into atmosphere: R-134a is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 1430.

- If the power cord on this unit is damaged it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Proudly distributed by Ausclimate Pty Ltd

For all enquiries and contact details please visit our website:

 **ausclimate**
healthy indoor climate solutions
www.ausclimate.com.au