

# Intosite Connector

## Product Sheet



Intosite Connector enables you to connect between the Platform and the cloud-based application 'Intosite' which enhances the transparency of factory events in the visual context of the factory. This enables focused factory operation control and problem resolution through factory events transparency. Intosite application also enables information connectivity to other sources of information like engineering and manufacturing execution.

### Prerequisites

Subscription to MindSphere Capability Package	A valid MindSphere Capability Package (Basic/Standard/Premium) subscription is required.
Subscription to Intosite	Intosite is not part of this Offering. It is your responsibility to procure and maintain a valid subscription to Intosite in order to create or update the connection between the Platform and Intosite. Once the connection is established, Intosite Connector will continuously update Intosite with status and event information.
Web browser	An HTML5 capable Internet browser with latest version is required (Google Chrome or Microsoft Edge). The recommended screen resolution is 1024x768 or higher.
Data access	To access and use the application, data stored in your existing Account (e.g. Base Environment or MindSphere Capability Package Account) may be accessed by the application.

### Description

General	Intosite Connector enables you to connect between the Platform and the cloud-based application Intosite hosted outside the wide area network of the Platform. It easily maps MindSphere assets and rules to Intosite status placemarks. This allows Intosite Connector to capture standard events triggered by the Platform and update corresponding Intosite status and event information. The status of the events is shown in Intosite in the visual context of the factory. A bi-directional link is established that allows the Intosite user to go back to the exact time series slot when the event happened. This allows the users to investigate what happened before or after the time of the event. The Intosite application serves as information hub connecting IT and MindSphere IIoT information all shown in the visual context of the facility.
---------	--

Main features	<p>Intosite Connector's main features:</p> <ul style="list-style-type: none"> <li>• Updates asset status and event information in Intosite.</li> <li>• Configuration and management of Connectors and asset Connections.</li> <li>• Maps assets, rules and event severity to Intosite status placemark and event information.</li> <li>• Enables bi-directional connectivity between the Platform and Intosite.</li> <li>• Timeseries Data Generation Simulator to simplify configuration and validation of the Connections.</li> </ul>
---------------	---

## Pricing Model

Fee for	Application subscription	Extensions (usage-based)		
		Additional Sites	Additional Connectors	Additional Connections
	Includes 5 Sites, 5 Connectors and 75 Connections	per 1 additional Site	per 1 additional Connector	per 1 additional Connection
Price	See Order <sup>1</sup>	See usage-based list <sup>2</sup>	See usage-based list <sup>2</sup>	See usage-based list <sup>2</sup>
Billing cycle	Full amount in advance	Monthly in arrears		

<sup>1)</sup> Subscription-based pricing is set forth in the Order; <sup>2)</sup> Usage-based fees are set forth in the Price List for Offerings with Usage-based Fees available at <https://siemens.mindsphere.io/en/docs/Product-Descriptions-Overview/usage-based>.

Application subscription	The application subscription allows access and use of the application with up to 5 Sites, 5 Connectors and 75 Connections.
Extensions (usage-based)	<p>Additional usage-based fees will be applied (monthly in arrears) for each additional Sites, Connectors and Connections exceeding the number of Sites, Connectors and Connections included in the application subscription. You may cancel Sites, Connectors and Connections in the application by deleting them at any time.</p> <p>For further details about calculation of usage-based fees please refer to Usage-based Calculation Methods for MindSphere Applications available at <a href="https://siemens.mindsphere.io/en/docs/Product-Descriptions-Overview/app-usage-based">https://siemens.mindsphere.io/en/docs/Product-Descriptions-Overview/app-usage-based</a>.</p>
Subscription Term	The standard Subscription Term for the application is 12 or 36 months. The Subscription Term shall automatically renew if stated in the Order.
Co-term (renewal and termination)	<p>The Subscription Term for this application will be co-termed with the Subscription Term of your existing MindSphere Capability Package, and therefore can be shorter than the standard Subscription Term.</p> <p>If an application subscription is terminated, the associated extensions will be terminated at the same time.</p>
Payment Terms	Fees for Intosite Connector application subscription are fully charged in advance for the entire Subscription Term unless otherwise expressly provided in an Order. Fees for usage-based extensions are charged monthly in arrears.

## General

Service Level Agreement	The Monthly Availability for this application is 95 %. Monthly Availability is defined in the Cloud Services Support and Service Level Framework available at <a href="https://www.siemens.com/sw-terms/sla">https://www.siemens.com/sw-terms/sla</a> .
Application use rights	This application can be used as part of OEM Services as described in the MindSphere Supplemental Terms available on <a href="http://www.siemens.com/sw-terms/supplements">www.siemens.com/sw-terms/supplements</a> .

Third-Party Terms	The Third-Party Terms for Intosite Connector are made available via the following web link: <a href="https://siemens.mindsphere.io/en/docs/Product-Descriptions-Overview/Third-Party-Terms">https://siemens.mindsphere.io/en/docs/Product-Descriptions-Overview/Third-Party-Terms</a> .
Support	Support is defined in the Cloud Services Support & Service Level Framework available at <a href="https://www.siemens.com/sw-terms/sla">https://www.siemens.com/sw-terms/sla</a> .

## Export Control Regulations

AL	N
ECCN	N

## Security Information

General	In order to protect plants, systems, machines and networks against cyber threats, it is necessary that you implement and continuously maintain a holistic, state-of-the-art industrial security concept.
Secure communication	Data transmission will be done via HTTPS protocol from Asset to your Account.

## Definitions

Connections	A connection that maps between MindSphere assets and rules to Intosite status placemarks and enables communication between the Platform and Intosite for a specified asset.
Connector	It represents a collection of connections.
Site	Your plant or facility that is represented in Intosite as a Site object.
General	Unless otherwise indicated, capitalized terms used in this document shall have the meaning given to them in this Product Sheet or elsewhere in the Agreement. You may also want to check our <a href="#">Glossary</a> .