


# Installation Top-Fixation **without** sound insulation

Item 190153







## Assembly instructions for flow reducer

The flush flow reducer should only be used if the flush pressure is too high and over-splashing occurs during flushing. The throttle is simply inserted into the inlet pipe to the WC. Depending on the position, this results in a reduction of 30-40%.

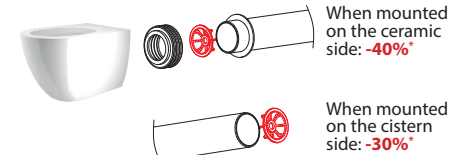


\* Figures are approx. values

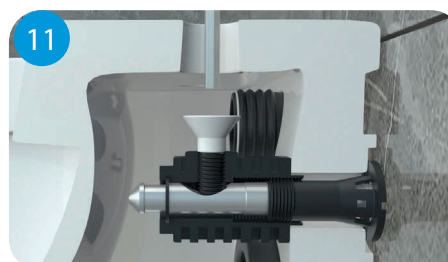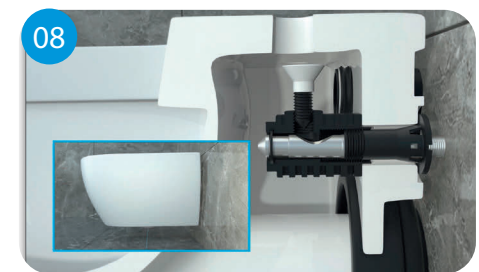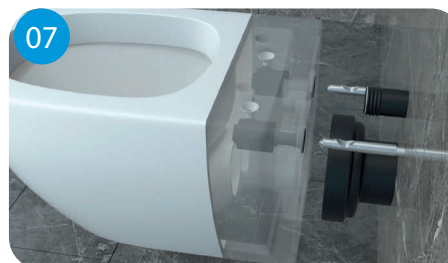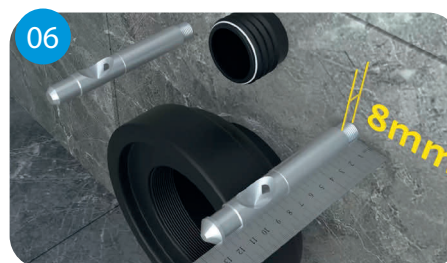


# Installation Top-Fixation **with** sound insulation

Item 190153

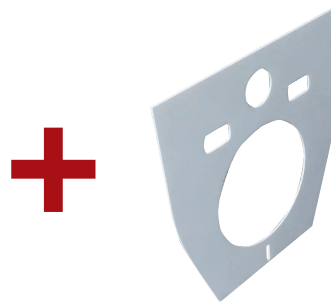

## Assembly instructions for flow reducer

The flush flow reducer should only be used if the flush pressure is too high and over-splashing occurs during flushing. The throttle is simply inserted into the inlet pipe to the WC. Depending on the position, this results in a reduction of 30-40%.

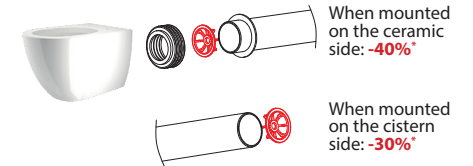

\* Figures are approx. values

