

# Breville®

Turn **on** your creativity®



**Breville Edge**  
Still Hot stainless steel kettle

## PRODUCT SAFETY

### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children aged less than 8 years.**

**Never use a power base other than the one supplied with the appliance.**


**Never fill the kettle above the MAX marking. If the kettle is overfilled, boiling water may be ejected.**

**If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

⚠ This appliance generates heat during use. Adequate precaution must be taken to prevent the risk of burns, scalds, fires or other damage to persons or property

caused by touching the exterior whilst in use or during cooling.

- ⚠ This appliance generates heat during use. Adequate precaution must be taken to prevent the risk of burns, scalds, fires or other damage to persons or property caused by touching the exterior whilst in use or during cooling.
- ⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.
- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Always use the appliance on a stable, secure, dry and level surface.
- ⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- ⚠ Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.
- ⚠ Ensure the appliance is switched off and unplugged from the supply socket after use and before cleaning.
- ⚠ Always allow the appliance to cool before cleaning or storing.
- ⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- ⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.
- ⚠ Never leave the appliance unattended when in use.
- ⚠ Beware of steam coming from the spout or lid especially during refilling. Never open the lid during the boiling cycle.
- ⚠ Never fill the appliance when it is positioned on the power base.
- ⚠ Never use the kettle without sufficient water in the kettle for it to operate correctly.
- ⚠ Never allow the appliance to boil dry.

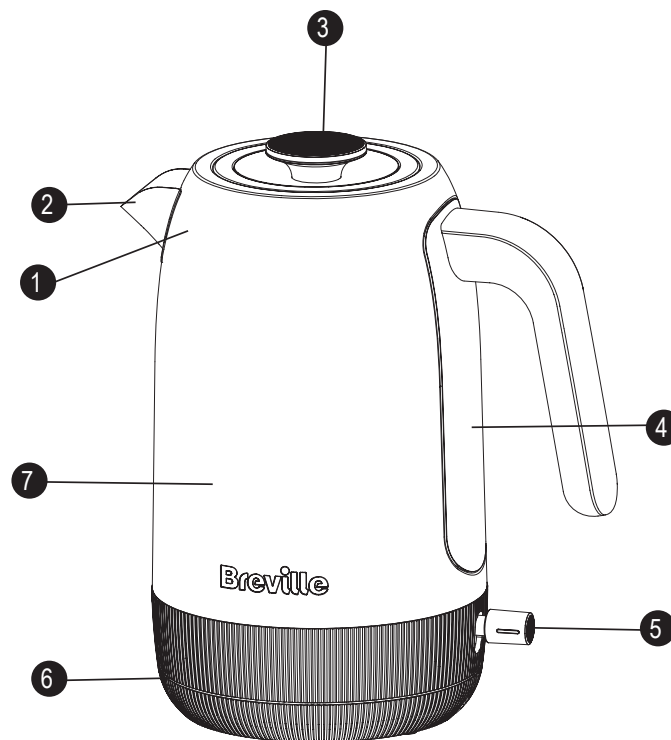

1. Filter behind the spout
2. Spout
3. Pull off lid
4. Water level window
5. On/off switch
6. 360 rotational power base with cord storage
7. Easy clean, fast boil concealed element

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in these instructions.

## BEFORE FIRST USE

Remove any packaging and promotional material from your kettle and position it on a stable, secure, dry and level work surface away from the edge.

Before connecting to a power source, make sure your mains supply voltage is the same as the one indicated on the appliance. Connect the plug to a suitable power outlet and make sure that the power cord does not overhang the work surface. Excess power cord can be stored in the power base.

Remove the kettle from the power base and open the lid. Fill your kettle to the maximum mark and close the lid.

Place your kettle back onto the power base. Switch your kettle on, allow it to boil then discard the water. Repeat twice. This will remove any residue left over from the manufacturing process.

## USING YOUR KETTLE

**▲ If this kettle is filled above the maximum level mark, hot water may be ejected from the spout during boiling. Beware of steam coming from the spout or lid especially during refilling. Never open the lid when the kettle is boiling.**

1. With your kettle switched off, plug the power base into a suitable power outlet.
2. Remove your kettle from the power base before filling it with water.
3. Fill your kettle with water. You can fill it through the spout or by opening the lid. Don't overfill your kettle and always ensure that there is sufficient water in your kettle for it to operate correctly. This is approximately 250ml or 1 teacup full. Always check the water level when your kettle is positioned on its power base.
4. If opened previously, close the lid and then switch your kettle on. Make sure that the lid is correctly closed to ensure safe operation. As the water heats up the water level illumination will change from white to red.
5. When the water reaches boiling point, your kettle will switch off automatically and the water level window illumination will switch to the 'still hot' illumination.

6. You may also switch your kettle off manually at any time by moving the switch to the off position. Always use caution when lifting or carrying your kettle when it is full of boiling water and when pouring it.

## ENERGY SAVING HINTS AND TIPS

A Breville® kettle, if used correctly, is a very energy efficient device. Why not try some of these energy saving tips:

- Only boil the water you need. Overfilling your kettle by one cup is the equivalent to using an energy saving light bulb for one hour!
- It is not always necessary to re-boil your kettle. For example, one litre of water will still be at 90°C after five minutes - the perfect temperature for a cup of coffee.

## IF THE KETTLE BOILS DRY

If the kettle is operated with insufficient water a built in fail-safe device will automatically switch it off.

- Unplug your kettle and allow it to cool. When it has cooled down sufficiently the safety device will reset itself.
- Once the safety device has reset, refill your kettle with cold water and use it as normal.

## LIGHTING SEQUENCE

The lights used to illuminate your kettle are light emitting diodes (LEDs). The amount of energy used by LEDs is very small—a fraction of the energy used by a normal light bulb.

## STILL HOT ILLUMINATION

After boiling, the illumination of your kettle will remain red indicating that the water is still hot enough to make a hot beverage such as tea or instant coffee. The 'still hot' illumination is active when the water temperature is above 80°C. When the temperature of the water falls below 80°C, the illumination will switch off.

Kettle	Illumination
Kettle on/off switch OFF, before boiling.	No illumination unless the temperature of the water is above 80°C
Kettle on/off switch ON	The illumination changes from white to red (assuming that the water is cool) to indicate the progress of the boiling cycle. The redder the illumination, the closer the water is to boiling.
Kettle on/off switch is switched to ON to boil or reheat water that is already hot.	If you switch your kettle on when the water inside is already partially heated, the illumination colour will be appropriate to the temperature of the water. The illumination will continue getting redder as your kettle reheats the water to boiling point.
Kettle on/off switch OFF, after boiling.	The illumination will remain red until the temperature of the water has fallen below 80°C. This saves you from reboiling hot water.

## CLEANING

▲ Always unplug the kettle from the mains supply socket and allow it to completely cool down before cleaning or descaling it. Do not immerse the kettle, power base or power cord and plug in water or any other liquid.

1. Clean the exterior surface of the kettle with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners.
2. Descale your kettle regularly to keep it working efficiently. Use a proprietary descaling product following the manufacturer's instructions carefully.

## CLEANING THE FILTER

▲ Before removing or refitting the filter, switch off the kettle and empty it. Allow it to cool completely, then unplug the power base from the mains supply socket. Never operate the kettle without the filter fitted.

- Open the lid and remove the filter from behind the spout.
- Rinse the filter under a tap whilst brushing it with a soft brush.
- In hard water areas it may be necessary to descale the filter using a descaling product. Use a proprietary descaling product following the manufacturer's instructions carefully.
- The filter may be washed safely in the cutlery rack of a dishwasher.
- Refit the filter back into your kettle.

## AFTER SALES SERVICE & REPLACEMENT PARTS

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at **0800 028 7154** or email: **BrevilleEurope@newellco.com**

## TROUBLESHOOTING

For troubleshooting and FAQs visit:  
[www.breville.co.uk/faqs](http://www.breville.co.uk/faqs)

## ELECTRICAL SAFETY


▲ This appliance must be earthed.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug fuse requires replacement, a fuse of the same rating as that fitted by the manufacturer must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.

If the terminals in the plug are not marked or if you are unsure about the installation of the plug please contact a qualified electrician.

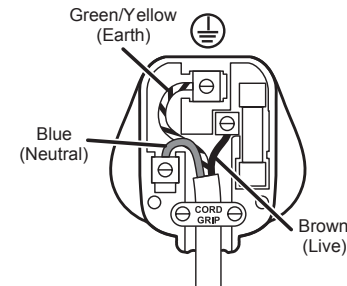

## Waste Disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at [BrevilleEurope@newellco.com](mailto:BrevilleEurope@newellco.com) for further recycling and WEEE information.





# Breville®

Jarden Consumer Solutions (Europe) Limited  
5400 Lakeside, Cheadle Royal Business Park,  
Cheadle, SK8 3GQ, United Kingdom  
Newell Poland Services Sp. z o.o.,  
Plac Andersa 7, Poznan, 61-894, Poland.  
e-mail: [BrevilleEurope@newellco.com](mailto:BrevilleEurope@newellco.com)  
UK Telephone: 0800 028 7154

© 2021 Jarden Consumer Solutions (Europe) Limited. All rights reserved.  
Jarden Consumer Solutions (Europe) Limited, 5400 Lakeside, Cheadle Royal Business  
Park, Cheadle, Cheshire, SK8 3GQ, United Kingdom.  
Newell Poland Services Sp. z o.o., Plac Andersa 7, Poznan, 61-894, Poland.  
Jarden Consumer Solutions (Europe) Limited and Newell Poland Services Sp. z o.o. are  
subsidiaries of Newell Brands Inc.  
The product you buy may differ slightly from the one shown on this carton due to continuing  
product development.  
Made in China.