### bp pulse public charger lite

User Guide





#### Table of content

- 3 Safety requirements
- 3 Limitations
- 4 bp pulse public charger lite status
- 6 Starting a charge on bp pulse public charger lite
- 7 Ending a charge on bp pulse public charger lite
- 8 Randomised delay start
- 9 Scheduling and off-peak charging
- 10 Load management

- 11 Specifications
- 13 Safety instructions
- 15 Connector recommendations
- 16 Resetting your bp pulse public charger lite via the distribution board
- 16 Troubleshooting and further assistance
- 16 Maintenance
- 18 Mounting options
- 18 Decommissioning and disposal
- 19 Warranty
- 19 Service
- 20 Certification

#### Safety requirements


Before operating the bp pulse public charger lite, the user must read and fully understand the safety instructions included in the manual. Failure to follow the safety information and instructions provided in this manual and displayed on the device, may lead to electric shock, fire, severe injury and may damage device or/and vehicle. Damage resulting from negligent actions are excluded from warranty. Installation of the device must be carried out by a qualified electrician in line with the applicable regulations. The information within the installation manual does not allow the user to overlook responsibility in regards to the norms, standards or local regulations that might apply. The bp pulse public charger lite has been designed, developed and manufactured to adhere to requirements, safety dispositions and norms in accordance with the directives provided in the Declaration of Conformity.

Safety instructions are included on page 13 of this manual.

#### Limitations

This charger is designed for use in the UK, specifically with electrical and environmental conditions expected in this country. It is intended for use with Electric passenger vehicles. It is not to be used to provide electrical charge to any other form of battery operated vehicle that does not make use of Mode 3 charging. The certification for this charger allows the charger to be used within residential and industrial environments where there is restricted access.

# bp pulse public charger lite

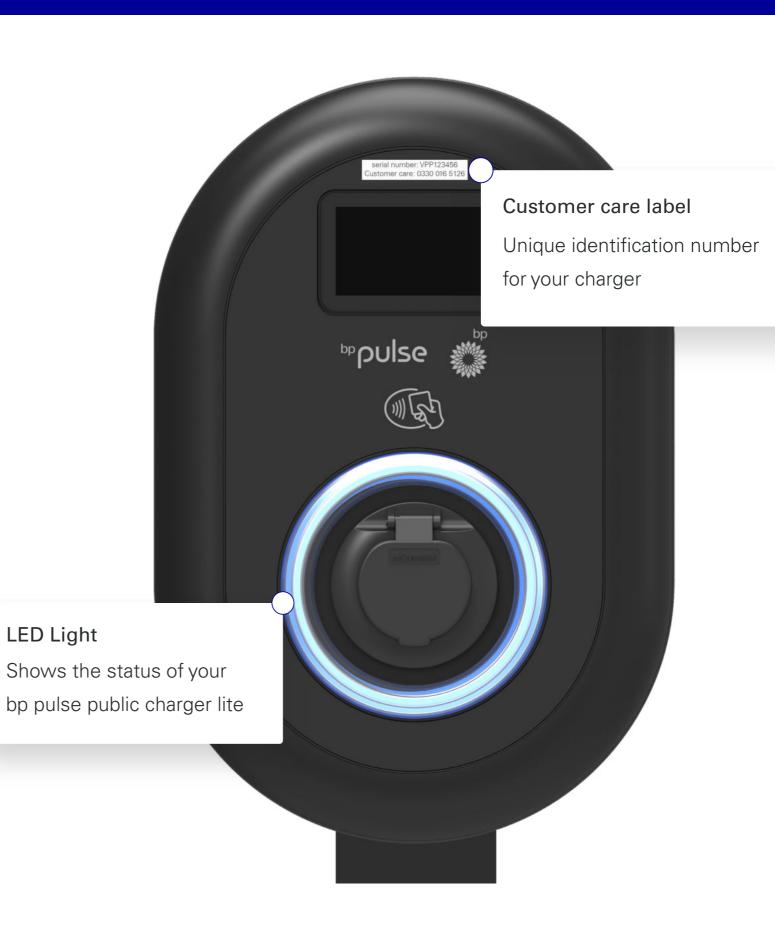

Status of the LED		Status of the Charging Station
	No LED Indication	Charger device is ready to charge
(((())) © 4 sec	Blinks blue for 4 seconds	Electric Vehicle is connected. Charger is waiting for RFID card authorisation
	Green pulsing	Charging is authorised
((()))	Blinks Green until charging starts	Randomised delay in progress
	Blue pulsing	Charging in progress
	Constant Blue	Charging suspended or finished.
	Constant Red	Fault condition do not attempt to start a charge
((●)) ((●))	Blinks blue and red for 5 minutes	Charger has been scheduled to start at a later time


### Starting a charge on bp pulse public charger lite

The screen will clearly display all the steps required by the user to start a charge.


Once the vehicle is charging the screen will show real time progress including percentage, duration, power and energy of the charge. Lift the flap to access the socket.

Insert the charging cable plug into the electric vehicle before connecting to the charging socket. Always make sure the plug is fully inserted into the socket.

3

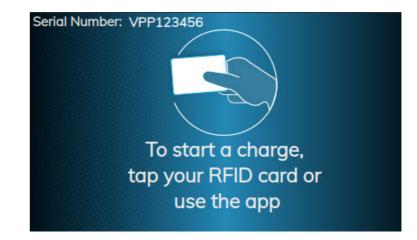

4

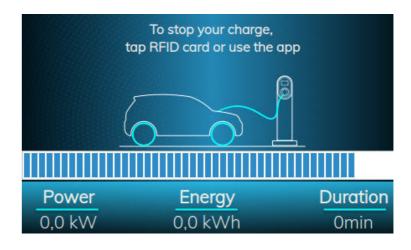


## Ending a charge on bp pulse public charger lite

The screen will clearly display all the steps required by the user to end a charge.

Once the user has ended the charge, the screen will show the outcome of the charging session including the duration and energy received.

To end a charge tap the RFID card on the reader or end via the app.

2

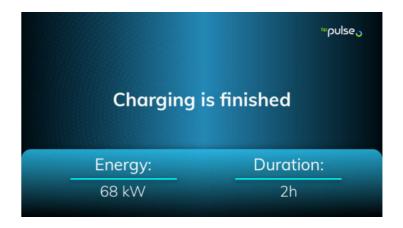

Remove the charging cable plug from the socket.

#### Randomised delay start\*

The randomised delay start is a requirement for all private chargepoints in the UK, which helps to ensure the grid can support the extra demand for electricity as EV adoption accelerates.

Every time a charge session is initiated, a delay of up to 10 minutes will be applied to the start of charge session. The status light will blink green until charging starts.

Where a charge session is scheduled to start at a specified time e.g. during off-peak times, a delay of up to 10 minutes will also be applied to the start of the charge session. The status light will blink green until charging starts.

The randomised delay can be overidden by tapping your RFID card twice on the RFID reader.

The randomised delay can not be permanently disabled. It can only be overridden as described above.



<sup>\*</sup>Only applicable when configured for private use cases such as workplace charging.


### Scheduling and off-peak charging\*

Our chargers are pre-configured with a default off-peak charging schedule. This schedule ensures that EVs are charged only during off-peak hours when there's typically less demand on the grid. The off-peak hours are 10pm-8am and 11am-4pm Monday to Friday and all day Saturday and Sunday.

Upon first use, or at any time afterwards, the schedule can be edited or removed or if no schedule is present, a new schedule can be created via our web portal or by contacting our customer care team on 0330 016 5126 or heretohelp@bp.com

Once a schedule is set and a vehicle is connected, the status indicator will blink blue and red for 5 minutes. Charging will start at the scheduled time and the status indicator will turn a constant blue.

There may be occasions when a driver will need to start a charge immediately in which case the scheduling can be overridden by tapping your RFID card twice on the RFID reader.

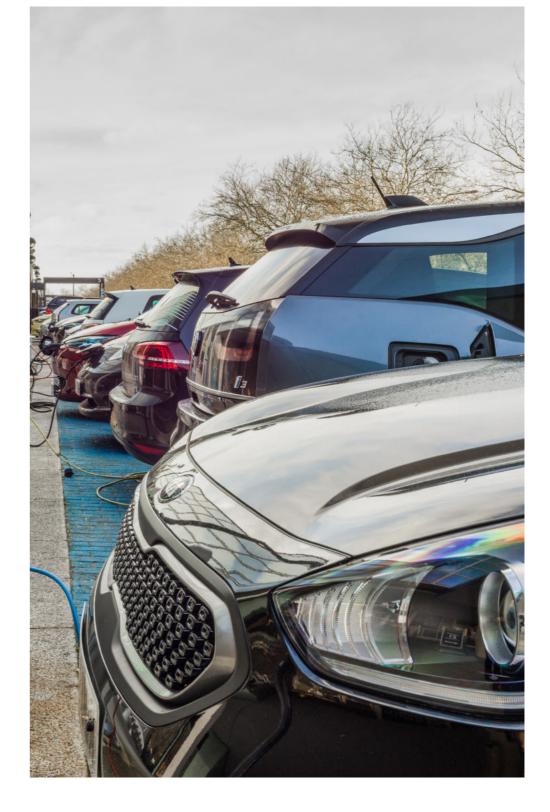


<sup>\*</sup>Only applicable when configured for private use cases such as workplace charging.

#### Load Management

Load Management is managing the charging current to allow the available power to be shared across all connected sockets supplied by the same electrical circuit.

Where a power limit for a group of chargers has been set, the chargers will automatically manage the amount of power available to each vehicle so as not to exceed the maximum safe current rating of the circuit.

Depending on the number of vehicles connected to the same circuit at any given time, users may experience slower charge speeds. Consideration should be given to how much time is allowed for vehicles to charge when load management is deployed.

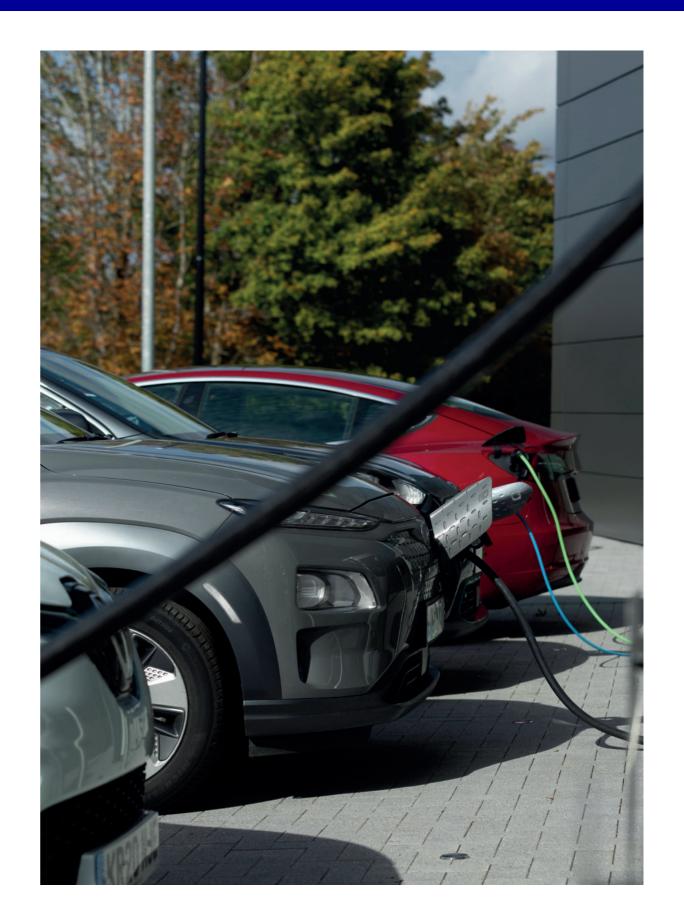

#### **Specifications**

	1 Phase	3 Phase	
Product code	PVG7S2	PVG22S2	
Input	230 VAC 50/60 HZ	400 VAC 50/60Hz	
Rated Current	1P + N + E 32A	3P + N + E 32A	
Connectivity	4G/LTE, Wi-Fi, Ethernet	4G/LTE, Wi-Fi, Ethernet	
Electrical output to vehicle	220-240 VAC 50/60Hz	400 VAC 50/60Hz	
Power level control	10-13-16-20-25-30-32A		

General Specifications				
Socketed output connector Type	Output charging connector Type 2			
Safety and operational ratings	Operating tempreture range-35°C to +55°C, Operating humidity range 5% to 95% non-condensing. Compliance to Standards IEC 61851.			
Operating frequency bands, subject to network connectivity	E-GSM 900, DCS 1800, UMTS Band I, UMTS Band VIII, LTE Band 1, LTE Band 3, LTE Band 7, LTE Band 8, LTE Band 20, GPS L1/GLONASS G1/BDS/Galileo E1			
Mechanical Impact Protection Rating	IK10			
Ingress Protection Rating	IP54			
Wi-Fi Operating frequency bands, subject to network connectivity	Wi-Fi frequency 802.11 a/b/g/n 2.4GHz and 5GHz			
Dimensions and weight	Shipping weight typically 4.5kg – 5kg (4.5kg- 7kW, 5kg – 22kW) Width 315mm Height 460mm Depth 135mm			



#### Safety instructions

- Regularly inspect the unit, wall mounting, cable and plug. Do not operate if any type of damage is observed, this includes cracks, corrosion, breakage and any other type of physical defects.
- Know how to isolate the unit from the electrical supply in case of emergency. Ask the installer how to do so.
- In the event of a power isolation incident, always inspect the unit before attempting to reuse it.
- Unauthorised modifications or conversions are not allowed.
- The bp pulse public charger lite can only be used under the operating parameters specified at an ambient temperature between-35°C to 55°C.
- Installation of the product should only be completed by a trained electrician with the correct installation instructions.
- Only an authorised specialist and qualified personnel may open, disassemble, repair, alter or modify the bp pulse public charger lite device.

#### Safety instructions

- · Unauthorised modification of the bp pulse public charger lite equipment would render the manufacturer warranty void.
- Do not touch or insert any object into the unit's connector pins or the pins on your vehicle's charging socket.
- Keep the bp pulse public charger lite away from any harmful chemical substances.
- Only use recommended cleaning products (see Maintenance section).
- Do not jet wash or pressure wash the unit and take care when using a jet wash or pressure washer near the unit.
- Special precautions must be taken with electronic implants. Please contact your medical device manufacturer to find out the potential effects that the charging process may cause to it.
- Check your vehicle's owner manual before using your charger and follow the manufacturer's instructions.

- Ensure cables are stowed properly to prevent tripping hazards.
- Do not leave the cable plugged into the socket when not in use.
- Only use the unit when the cable is completely unwound - do not use while the cable is coiled.
- · Where necessary or appropriate, disabled people and people with health conditions or impairments that affect their ability to use the product, should only use the product under supervision and instruction by a person responsible for their safety.
- Children must not play with or use the unit.
- · The functionality of the RCD, which protects the unit, should be checked at least every 3 months.
- This device is intended only for charging vehicles not requiring ventilation during charging.

#### Connector recommendations

- Do not use cables if there is any sign of damage or fraying.
- Do not use the charging cable with an extension cable or an adapter.
- Unauthorised modifications or conversions are not allowed.
- Do not use extension leads or adapters.
- Keep the charging cable out of the reach of children.
- The cable should NOT be strained under any circumstances while connected to the vehicle.
- Never use force to disconnect the vehicle connector from the inlet or the equipment plug power outlet.
- Ensure the cable is unplugged and stowed before driving off.
- Ensure that connectors are free from dirt and other foreign matter before use.



#### Resetting your bp pulse public charger lite via the distribution board

If your charger fails to deliver charge to your electric vehicle, the first thing you should try is resetting it:

- 1. Disconnect the charging cable from your vehicle.
- 2. Set the Circuit Protection Device (CPD) of your charger in the distribution board to the 'Off' position and leave in the 'Off' position for at least 10 seconds.
- 3. Set the CPD to the 'On' position and allow two minutes for the unit to complete its start-up sequence.
- 4. Once the charger powers up, the status indicator will flash from blue to green, the screen will read 'initializing please wait' and then return to IDLE within 2-3 minutes.

If there's still an error after the reset, your unit may have developed a fault. Please make a note of your unit's serial number and contact our customer care team.

#### Troubleshooting and further assistance

If you are experiencing any issues with the bp pulse public charger lite or the status indicator is displaying a fault signal, please contact our customer care team on 0330 016 5126. For further information on the bp pulse public charger lite and troubleshooting guidance please refer to our latest user manual version www.bppulse.co.uk/bp-pulse-public-lite-user-manual

or visit the contact page at www.bppulse.co.uk

#### Additional LED indicator troubleshooting information

Status of the LED		Status of the Charging Station
	Constant Red	Fault condition do not attempt to start a charge
((( <u>)</u> )) 4 sec	Blinks red in 4 seconds	Ventilation required mode
((( <u>)</u> ))	Blinks purple in 4 seconds	Charging with current limited to 16A due to over temperature
	Constant Purple	Charging not possible due to over temperature or the charger is disabled

#### Maintenance

- Ensure only a damp cloth is used for cleaning the bp pulse public charger lite.
- Ensure the charger is kept clean.
- Do not keep the cable plugged into the socket.
- Do not jet wash the charger.

#### Mounting options

During the site survey our engineers will work with you in deciding the best mounting solution for your workplace or fleet. If you require a different mounting solution in the future please get in touch with our customer care team to arrange a visit from one of our certified installers.

When considering post mounted installations we recommend our certified post, designed specifically for bp pulse public charger lite.


#### Decommissioning and disposal

The unit should only be removed by bp pulse certified engineers please contact customer services.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.

We are part of the Valpak waste disposal scheme, contact number **0345 068 2572**.

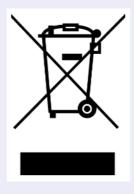

This symbol on the product(s) and / or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.

#### Warranty

This unit has a warranty for a period of 3 years from the date of installation, provided that the unit has not been tampered with and has been maintained correctly.

The unit warranty does not cover against incorrect use. This warranty does not affect the statutory rights of the consumer. The warranty provided by bp pulse is subject to the terms and conditions found below.

www.bppulse.co.uk/terms-and-conditions-commercial-sales

#### Service

If you need any extra support, not to worry, our customer care team are here to help!

Contact our customer care team on 0330 016 5126, visit the contact page at www.bppulse.co.uk or email us at heretohelp@bp.com

Further instructions can be found on our website

www.bppulse.co.uk

#### Certification

This unit is certified to meet the requirements of The United Kingdom and European Union with the following product marks:



This product meets EU and UK regulatory safety requirements. A Declaration of conformity can be made available by request. Please contact our customer care team via the contact page at www.bppulse.co.uk or email us at heretohelp@bp.com.

