

for
Croozer Kid Plus
Croozer Kid
from 2014

Baby Seat

Owner's Manual ENGLISH



CROOZER®

IMPRINT

Publisher: Croozer GmbH
Oskar-Jäger-Str. 125
D-50825 Cologne
Germany

Copyright © 2017 Croozer GmbH. All rights reserved.
No part of this manual may be reproduced or transmitted in any form for any purpose other than the purchaser's personal use.

Additional manuals and instructions on the use of this product and its accessories can be ordered from Croozer GmbH or downloaded from the website www.croozer.com. Every effort has been made to ensure the accuracy of this manual. However, if you do find an error, we would appreciate hearing about it so that we can correct it.

Planning, text, graphic design and editing:
W. Piontek, www.technik-transparent.de

Photos: W. Piontek and Croozer GmbH


Table of Contents

Description2
What's what?	2
Who can use the Baby Seat?	2
How should the Baby Seat be used?	2
In what cases is the use of the Baby Seat strictly prohibited?	2
Safety Guidelines3
Symbols and warnings	3
Orientation and wording	3
Read and observe this manual.	3
Legal requirements for transporting infants	3
Correct installation	3
Buckle up!	3
Adult supervision	3
Riding speed	3
Suitable accessories	3
Folding the Croozer	3
Installing the Baby Seat to the Croozer4
Unpacking the Baby Seat	4
Installing the Baby Seat	4
Transporting Your Infant Safely8
Fastening and unfastening the safety harness.	8
Adjusting the safety harness	9
Tips: Transporting Your Infant	10
Cleaning, Storage and Disposal	10
Technical Data	10
Warranty Conditions	10
Warranty Claims	10
Additional Accessories for Transporting Infants	11

Description

Description

What's what?

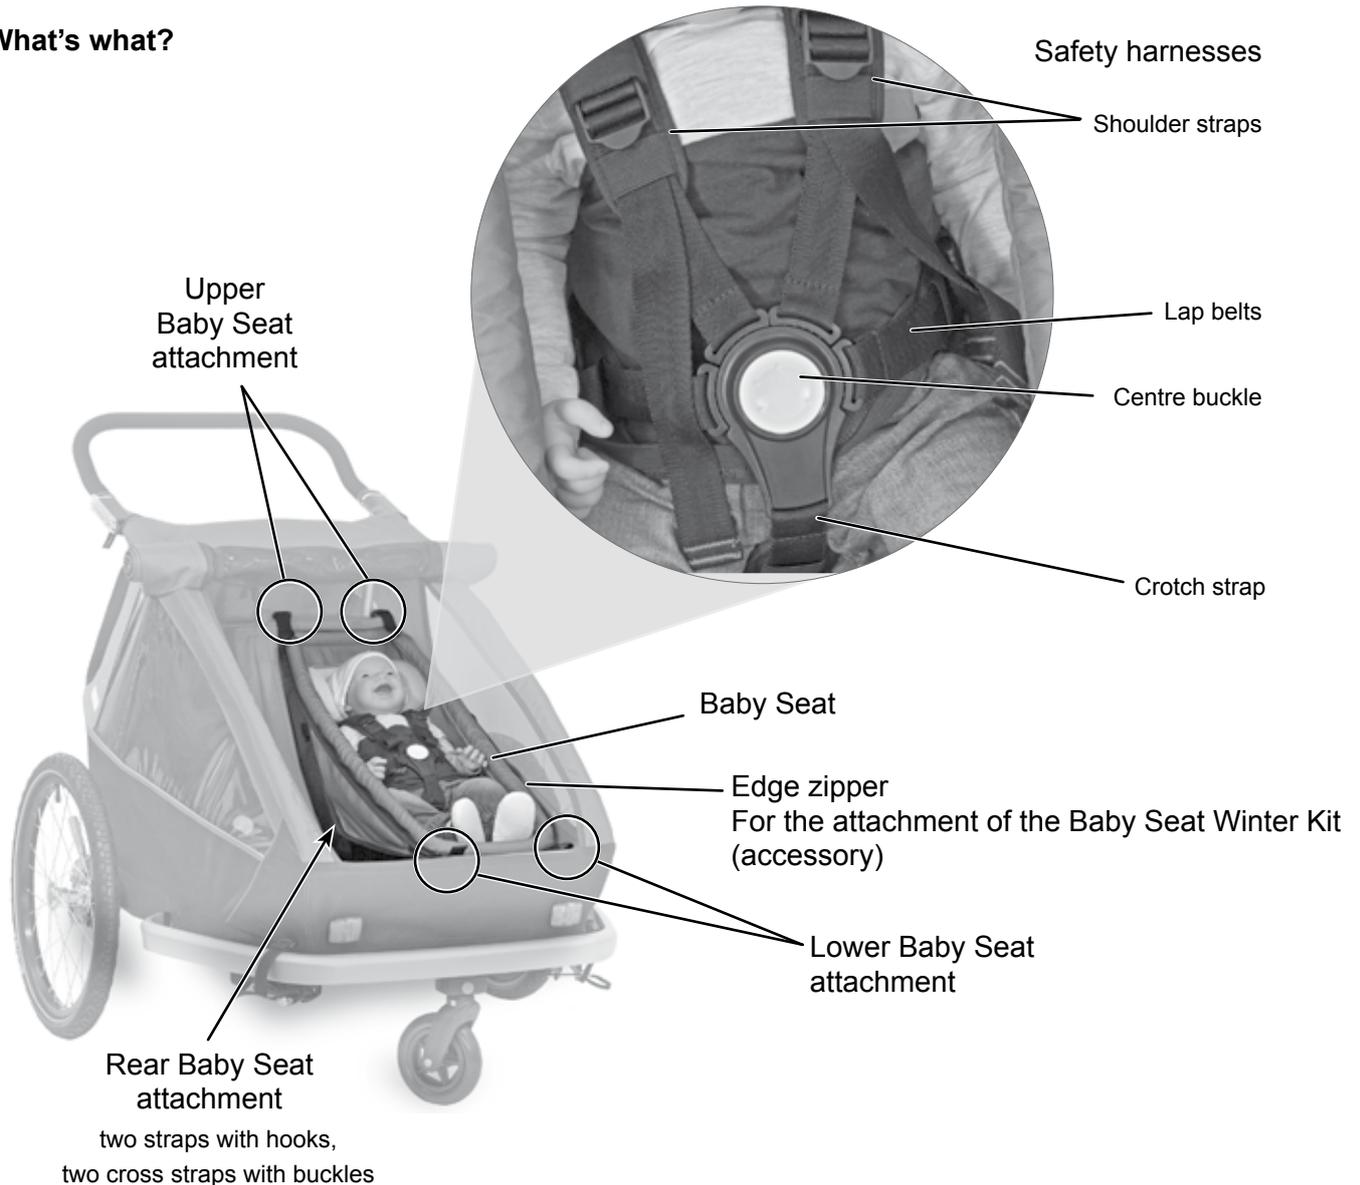

Who can use the Baby Seat?

The Baby Seat is intended for use with infants between approx. four weeks and 10 months of age who are unable to sit upright unassisted.

The Baby Seat cannot be used for infants with a height of more than 75 cm (29½ inches) or a weight of more than 10 kg (22 lb).

How should the Baby Seat be used?

This Baby Seat is intended for private use for carrying infants and can only be used with the child trailers Croozer Kid Plus for 1, Croozer Kid for 1, Croozer Kid Plus for 2 and Croozer Kid for 2, model years 2014 and newer. The instructions and safety guidelines provided in this manual must be followed at all times. The Baby Seat must be properly installed to professional standards.

The one-seater trailer can only be used with one Baby Seat. The two-seater trailer can be used with two Baby Seats. It is also possible to use the two-seater trailer with one Baby Seat and a second child who is able to sit upright unassisted. The Baby Seat can only be used with the Croozer Kid Plus and Croozer Kid on smooth, well-surfaced roads and paths.

In what cases is the use of the Baby Seat strictly prohibited?

The Baby Seat may not be used in other Croozer models or in child trailers from other manufacturers because these other trailers lack the required attachment sites.

Never transport animals or cargo together with children. The Baby Seat may not be used with Croozer models manufactured prior to 2014. The use of the Baby Seat in the following situations is strictly prohibited: riding on unsurfaced roads or paths, commercial use, overloading or exceeding the maximum weight and height of the infant, the use of an improperly installed or damaged/defective Baby Seat or use in a child trailer that has been involved in an accident. Furthermore, certain children may not be permitted to use the Baby Seat for medical reasons. Croozer GmbH will not be liable for any damages resulting from non-compliance with these requirements.

Safety Guidelines

Symbols and warnings



DANGER!

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING!

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION!

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation which, if not avoided, could result in damage to the Baby Seat or the environment.

Tip: *In this manual, "Tip" indicates helpful advice about the use or maintenance of the Baby Seat.*

Orientation and wording

The terms right and left in this manual always refer to the viewer's perspective (when facing the trailer's passenger seats from the front). The descriptions apply to both the Croozer Kid Plus and Croozer Kid. Some of the photos and graphics used in this manual only show the Croozer Kid Plus for 2. However, the respective descriptions also apply to the Croozer Kid Plus for 1, Croozer Kid for 1 and Croozer Kid for 2.

Read and observe this manual

This manual contains information that is extremely important for the safe transport of your infant. Therefore, it is essential that you read the entire manual carefully and follow the instructions closely. If you should experience difficulties understanding any of the information or instructions, please contact a specialist dealer. Keep this manual handy at all times for future reference. If you loan or sell your Baby Seat, pass on this manual to the new user. It is also vitally important that you read and observe the instructions provided in the manual of the child trailer.

Legal requirements for transporting infants

Be sure to observe all laws that apply to the transport of children in child trailers. Some countries prohibit the transport of children in child trailers or prescribe certain age limits. In case of doubt, be sure to familiarise yourself with the legal requirements of the country in which you plan to use the Baby Seat with the Croozer.

Correct installation

The Baby Seat must be properly installed to professional standards. Follow the instructions on correct attachment in the section "Installing the Baby Seat to the Croozer" on page 4. If you should experience difficulties with the installation, please contact a specialist dealer. An improperly installed Baby Seat could become loose or fall off while riding, resulting in accidents with serious injury or death.

Buckle up!

Infants riding in the Baby Seat in the Croozer must be strapped into the safety harnesses at all times. Follow the instructions provided in this manual for fastening the safety harnesses correctly. Infants who are not properly secured in a safety harness could sustain life-threatening injuries in the case of accidents or sudden braking.

Adult supervision

Never leave your child in the Baby Seat unattended, not even briefly! In your absence, hazardous, unforeseen situations could arise, including accidents with serious injury or death. It is the adult's responsibility to ensure that the ventilation and temperature conditions in the trailer are safe and comfortable for the child at all times. Check on your infant frequently to make sure he or she is safe and comfortable in the Baby Seat.

Riding speed

For the transport of your infant in the Croozer, we recommend a riding speed of no more than 15 km/h (9 mph).

Suitable accessories

Use only accessories that have been recommended and approved by Croozer GmbH. These are the only accessories that can be used safely with the Baby Seat and the Croozer. When in doubt, consult a Croozer dealer. Croozer GmbH cannot be held responsible for any damage resulting from the use of non-approved accessories.

Folding the Croozer

For transport, the Croozer can be folded to a compact size with the Baby Seat installed. After unfolding, check all attachment sites of the Baby Seat and all locking mechanisms of the Croozer. An improperly installed Baby Seat could become loose or fall off while riding, resulting in accidents with serious injury or death. Never, under any circumstances, should the Croozer be folded with an infant in the Baby Seat. The infant could suffer serious injuries.

Installing the Baby Seat to the Croozer

Installing the Baby Seat to the Croozer

Unpacking the Baby Seat

1. The plastic packaging contains the Baby Seat with a head pad and this manual.
2. Remove all plastic packaging from the Baby Seat. Recycle all packaging materials if possible.



WARNING!

Plastic bags and packaging materials can be dangerous! To avoid danger of suffocation, keep plastic bags and packaging away from babies and children. Babies and children could pull plastic bags or packaging over their heads and suffocate.

Installing the Baby Seat



WARNING!

The Baby Seat must be properly installed to professional standards. An improperly installed Baby Seat could cause accidents with serious injury or death. If you should experience difficulties understanding or performing the installation, please contact a specialist dealer.

Before using the Baby Seat to transport an infant between one and ten months of age in the Croozer, the Baby Seat must be properly installed. The Baby Seat was designed for use with any Croozer Kid Plus for 1, Croozer Kid for 1, Croozer Kid Plus for 2 or Croozer Kid for 2 manufactured in or after 2014.

The Baby Seat has six attachment points.

Rear attachment

- **Step 1.**
two straps with hooks that are attached to the seat of the Croozer
- **Step 2.**
two cross straps with buckles that are attached to the harness system of the Croozer.

Upper attachment

- **Step 3.**
two straps with hooks that are attached to the upper part of the Croozer seatback.

Lower attachment


- **Step 4.**
two straps with hooks that are attached to the front part of the Croozer frame.



WARNING!

The Baby Seat must be correctly attached at all attachment points. An improperly attached Baby Seat could cause accidents with serious injury or death.


Tip: The step numbers indicating the order of attachment are also printed on the straps of the Baby Seat.

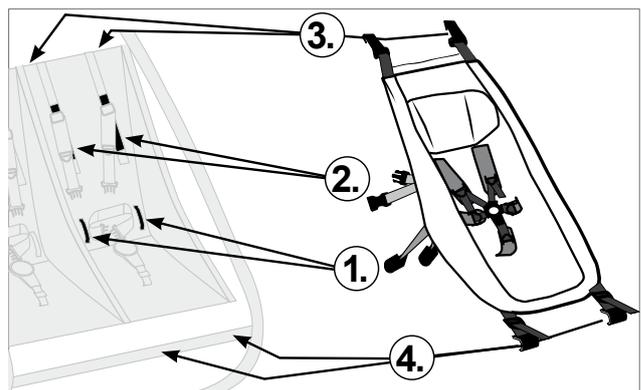

Step 1.

In the centre of the rear surface of the Baby Seat, there are two straps with hooks (1 and 2) that connect to the loops (3 and 4) on the seat of the Croozer.

1. Place the Baby Seat on the seat of the Croozer and fold the upper part of the Baby Seat forward so that it is easier to reach the attachment straps on the back of the Baby Seat.
2. Guide the left hook (1) of the Baby Seat through the left loop (3) that is attached to the seat of the Croozer. The hook must be inserted from the inside to the outside (i.e. from right to left) as shown in the photo.
3. Connect the right hook (2) of the Baby Seat in the same manner (this time, hooking it through the loop (4) from left to right).

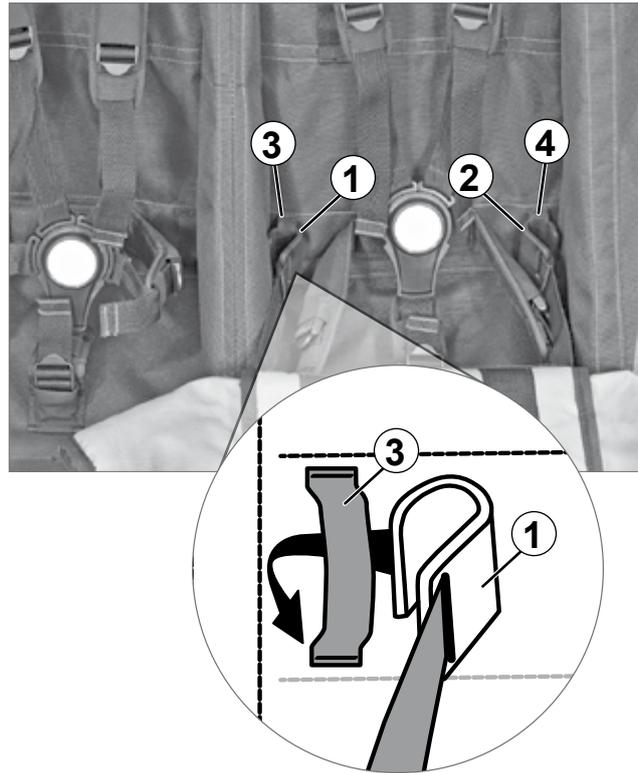



WARNING!

Check both hooks to make sure they are correctly and securely attached. Improper attachment could result in serious injury or death to the occupant in the event of an accident.

Step 2.

In the centre of the rear surface of the Baby Seat, there are also two cross straps with buckles (5 and 6) that must be attached to the slide straps (7 and 8) of the Croozer seat. These are the straps to which the shoulder straps of the Croozer seat are attached.

1. Slide the triglide adjusters (9 and 10) of the shoulder straps on the Croozer seat all the way down so that the slide straps (7 and 8) are more accessible.
2. Slide the two cross straps with buckles (5 and 6) under the slide straps (7 and 8) of the Croozer seat and insert the male end of the buckle (6) into the female end (5). You should hear a click and be able to see that the clip is securely fastened in the buckle.
3. Pull on the ends of the two attachment straps (11 and 12) to tighten them until the back of the Baby Seat is pulled tightly against the Croozer seat.

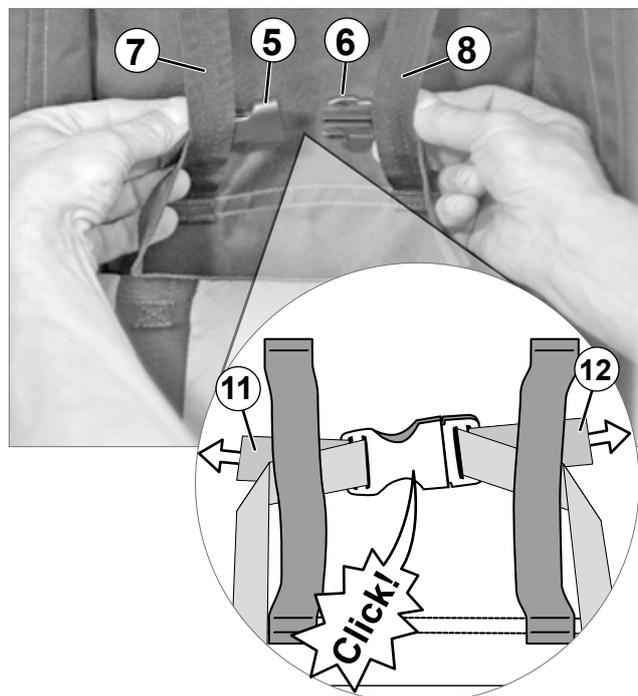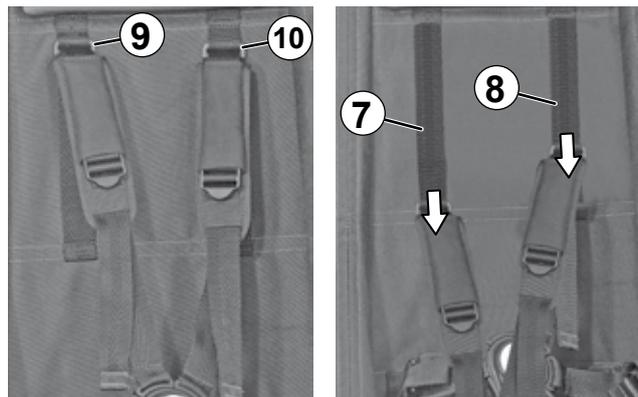

WARNING!

Check to make sure that the buckle is securely fastened and the straps are tightened. Improper attachment could result in serious injury or death to the occupant in the event of an accident.

Installing the Baby Seat to the Croozer

Step 3.

Attachment rings (13) for the installation of the Baby Seat are located at the rear of the Croozer on the upper frame tube to which the seat is attached. The one-seaters have two attachment rings. The two-seaters have four attachment rings because two Baby Seats can be attached. (For clarity, both trailers in the photo on the right is shown without the fabric body.)

1. Pull the two upper attachment straps with the Baby Seat hooks (14) up and over the seatback.
2. Insert the first Baby Seat hook (14) as shown through the attachment ring (15) behind the seatback of the Croozer; then press the hook upwards until you see and hear it snap into place on the ring.
3. Attach the second Baby Seat hook in the same manner.
4. Check both Baby Seat hooks to make sure they are securely fastened.

WARNING!

Check both Baby Seat hooks to make sure they are correctly fastened. Improper attachment could result in serious injury or death to the occupant in the event of an accident.

Step 4.

At the lower (front) edge of the Baby Seat, there are two attachment straps with hooks (16 and 17) that are attached to the front frame tube of the Croozer.

1. Pull the two front attachment straps with the Baby Seat hooks (16 and 17) toward the front of the Croozer.
2. Attach the right Baby Seat hook (16) to the front frame tube (18).
3. Attach the left Baby Seat hook in the same manner.

Pulling the Baby Seat taut



The Baby Seat must be pulled taut for the comfort and safety of the infant.

1. Pull on the ends of the two front attachment straps (19 and 20) to tighten them until the Baby Seat is sufficiently taut.
2. Check that all Baby Seat hooks are correctly inserted and snapped into place by putting gentle pressure on the Baby Seat inside the Croozer or by trying to lift the Baby Seat slightly.

WARNING!

The Baby Seat must be pulled taut. When pressure is applied or when pulled upwards, it should only yield slightly. If the Baby Seat is too loose, the infant could be tossed around in extreme situations, which could lead to serious injury or death.


3. Adjust the length of all safety-harness straps to the size of the infant. See page 9.

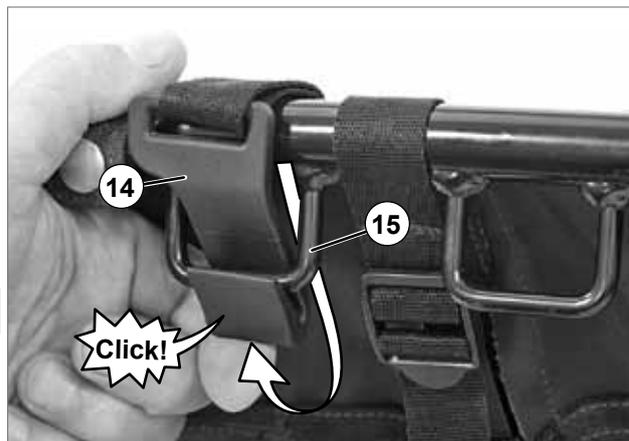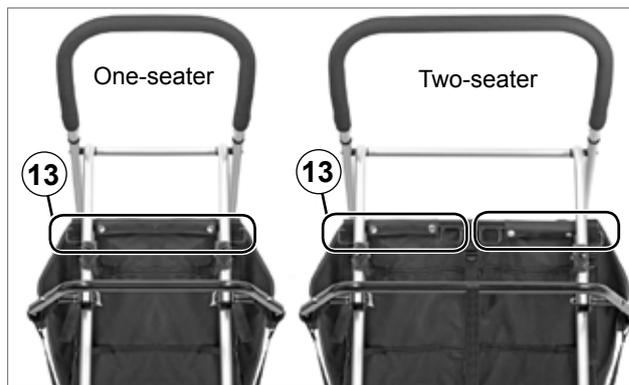

Attaching the head pad

The head pad has two straps with snaps (18 and 19) that are used for attaching the head pad to the harness system of the Baby Seat.

1. Insert the left strap of the head pad (18) through the left side strap (20) and snap the end onto the head pad to secure it.
2. Attach the right strap (19) in the same manner.
3. Then flip the head pad upwards.

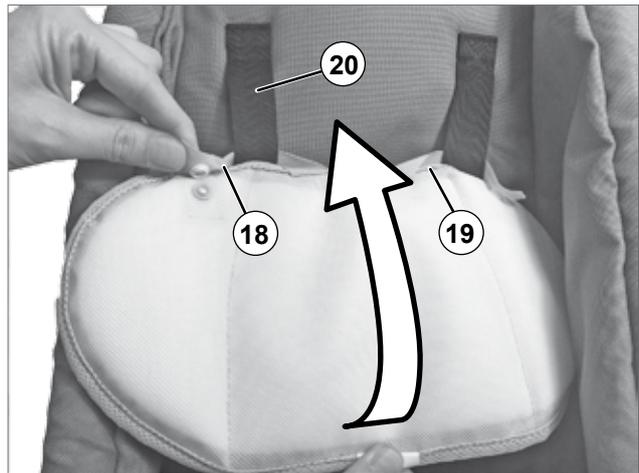

Transporting Your Infant Safely



CAUTION!

For the transport of your infant in the Croozer, we recommend a riding speed of no more than 15 km/h (9 mph). At higher speeds, the infant could suffer injuries.

Fastening and unfastening the safety harness

The 5-point safety harness consists of two shoulder straps (1), two lap belts (2) and a crotch strap (3), which are all individually connected to the centre buckle (4). Padded shoulder straps and lap belts provide additional comfort.



WARNING!

When riding in the Baby Seat, your infant must be strapped securely into the safety harness at all times! Otherwise, your infant could sustain life-threatening injuries in dangerous situations.

Opening the harness

1. Press the button (4) on the centre buckle in order to release the clips attached to the shoulder straps and lap belts.
2. Allow the crotch strap (3) to hang down, and drape both shoulder straps (1) and lap belts (2) over either side of the seat so that the child can be placed comfortably into the Baby Seat.



Fastening the safety harness

1. Make sure that the harnesses are unbuckled; then place the infant in the seat.
2. Place the crotch strap (3) between the child's legs, with the centre buckle (4) resting on the infant's upper body.
3. Pull the shoulder straps (1) over the shoulders and the lap belts (2) around the hips of the infant. Insert all clips into the centre buckle. For each strap, you should hear a click and be able to see that the clip is securely fastened in the buckle.



WARNING!

When riding in the Baby Seat, your infant must be strapped securely into the safety harness at all times! Otherwise, your infant could sustain life-threatening injuries in dangerous situations.




WARNING!

Failure to adjust the straps of the safety harness properly or to fasten the buckles correctly could result in the serious injury or death of the infant in the event of an accident.



Unfastening the safety harness

1. Press the button (4) of the centre buckle. The clips attached to the shoulder straps and lap belts will be released.

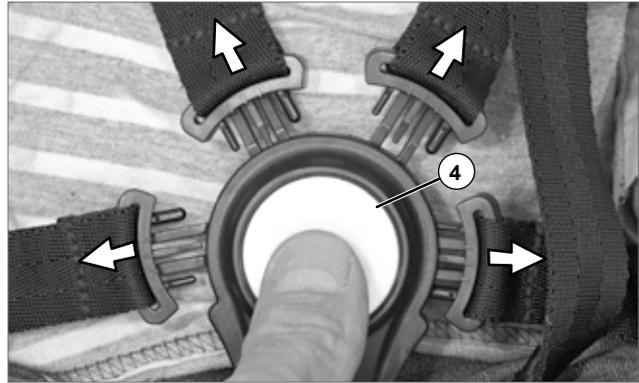

Adjusting the safety harness

1. Make sure that the harnesses are unbuckled; then place the infant in the seat.
2. Slide the triglide adjusters (5) (cannot be seen in the photo because they are beneath the head pad) up or down to adjust the height of the shoulder straps.

Tip: The head pad can be slid up and down together with the shoulder straps.

3. Buckle the infant into the seat if the straps are long enough.
4. All straps can be shortened or lengthened in the same manner. The two bottom photos on the right show the adjustment of the shoulder straps as an example.

Shortening: Shorten any strap by pulling on the end (6).

Lengthening: Lengthen any strap by lifting the respective adjustment buckle (7) and pulling on the strap (8).


5. Adjust the tension of all straps so that the infant is held securely but comfortably in the harness (i.e. ensure that the straps are snug but not so tight that they cause discomfort).

Tip: In general, if your flat hand fits between the straps and the infant, then the harness has been properly adjusted.



WARNING!

The distance between the infant's body and the shoulder straps and lap belts must be as small as possible to ensure that the infant is held securely in the seat. If the distance is too great, the safety harness may not be able to hold the infant securely, which in the event of an accident could result in serious injury or death. If the distance is too small, the straps can press too tightly against the infant's body, causing discomfort.

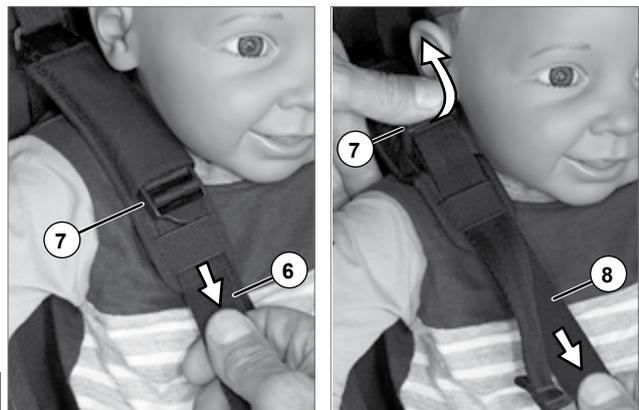

WARNING!

Failure to adjust the straps of the safety harness properly or to fasten the buckles correctly could result in accidents with serious injury or death.

Tips: Transporting Your Infant

Be cautious, patient and attentive when transporting your infant in the Croozer. The first few trips should be short and easy, to give your infant time to get used to riding in the Baby Seat.

For the transport of your infant in the Croozer Bicycle Trailer, we recommend a riding speed of no more than 15 km/h (9 mph).

Dress passengers appropriately, and check on them frequently to make sure they are comfortable in the Croozer, with adequate ventilation. Under the Rain Cover, the passenger compartment can become warm more quickly than otherwise, especially in direct sunlight. However, in colder weather, infants sitting inactively in the trailer will feel colder and need more insulation than the person who is pedalling the towing bicycle or pushing the Croozer as a Jogger or Stroller. Therefore, in colder temperatures, be sure to dress your child in warm clothing or use a blanket. You can also use the Baby Seat Winter Kit that is available as an accessory.

Keep your passengers' needs and well-being in mind: always take along small toys so that your infant does not get bored. And when planning longer trips, keep in mind that your infant will require frequent breaks. Avoid bumpy roads and paths, and if you are pulling the Croozer as a Bicycle Trailer ride slowly and cautiously.

After the infant is able to sit upright unassisted and has outgrown the Baby Seat, you can use the Baby Supporter, which is available as an accessory from specialist dealers.

Cleaning, Storage and Disposal

The Baby Seat is easy to clean and maintain. No special care or maintenance is required. A cloth or sponge can be used with a soap solution or a mild household detergent to remove light soiling. For cases of heavy soiling, remove the Baby Seat and wash it by hand in lukewarm water. Never wash the Baby Seat in a washing machine, and never use solvents or mineral spirits on the Baby Seat.

Store the Baby Seat in a dry and well-ventilated area in order to prevent mildew and mould growth. If you will not be using your Baby Seat for an extended period of time, then store it dry and enclosed in packaging.

The Baby Seat is extremely durable. However, it will eventually reach the end of its service life. If the Baby Seat has been involved in an accident, its further use is prohibited. Be sure to dispose of the Baby Seat properly.

Technical Data

Dimensions W x H x D	22 x 72 x 16 cm (8¾ x 28¼ x 6¼ inch)
Age Range	1 to 10 months
Maximum Height of Infant	75 cm (29½ inch)
Maximum Weight of Infant	10 kg (22 lb)
For Use With	Models from 2014 or later Croozer Kid Plus for 1 Croozer Kid Plus for 2 Croozer Kid for 1 Croozer Kid for 2

Warranty Conditions

The statutory warranty in the country or state of purchase has unlimited application to the above-mentioned products. This warranty only applies to defects inherent to the material supplied and does not cover damage due to improper use, use of force or normal wear and tear. The period of statutory warranty depends on the law of the country in question.

Warranty Claims

If the Baby Seat shows any sign of defects, contact a specialist dealer. The dealer will forward your claim to us. For such cases, be sure to keep your original sales receipt.

Additional Accessories for Transporting Infants

Winter Kit for Baby Seat

Footmuff with teddy-fleece lining, zipper for attachment to Baby Seat, incl. Baby Seat insert with teddy-fleece lining



Baby Supporter

For small children aged approx. 10 to 24 months, height adjustable, 2-piece



Sun Cover

A practical sunshade for your child in the same colour as your Croozer



Rain Cover

For one-seater or two-seater





CONTACT

Croozer GmbH
Oskar-Jäger-Straße 125
D-50825 Cologne
Germany
info@croozer.com
www.croozer.com



www.croozer.com