

Pyramid Technical Consultants, Inc

135 Beaver Street, Suite 102 Waltham, MA 02452, USA Phone: 781.402.1700 Website: <u>www.ptcusa.com</u>

Pyramid Documentation

Large IC - Desiccant Replacement Instructions

Controlled Document ID: 2594406438 Version: Working version Confluence ID: 2594340915

> Author/Attendees: N. Dart. Last modified on: 03/06/2024

Exported by: Harvey Jules Nett Exported on: 09/05/2024



Pyramid Technical Consultants © 2024

Table of Contents

1 Introduction	.4
2 Desiccant Replacement	. 5
3 Document Control	. 8



Pyramid Technical Consultants © 2024

Table of Figures

Figure 1 Location of desiccant panel cover.	5	
Figure 2 Desiccant cover with and without	protective mesh6	



Pyramid Technical Consultants © 2024

1 Introduction

Document ID: 2594406438				
Author	N. Dart.			
Owner	Manufacturing Lead			
Purpose	Describe proper replacement instructions for desiccant packs.			
Scope	Pyramid ion chamber desiccant replacement for existing users.			
Intended Audience	Owners of ion chamber devices with user serviceable desiccant.			



2 **Desiccant Replacement**

1. Disconnect and dismount the ion chamber from the beamline and carefully place it connector-side down on a clean, soft surface. Cover the windows with protective paper or cardboard to prevent unintentionally puncturing them.

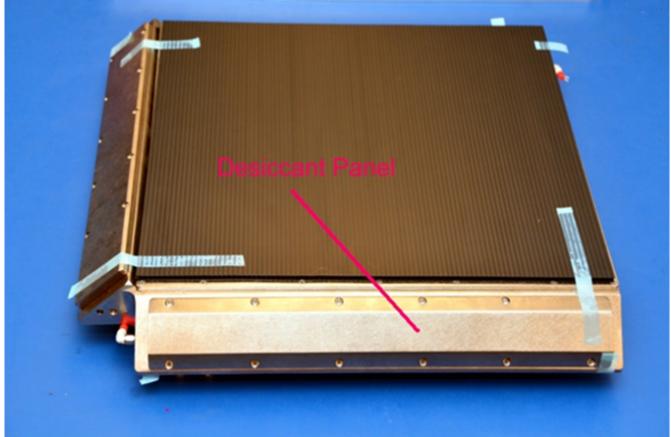


Figure 1 Location of desiccant panel cover.

- 2. Prepare the replacement parts:
 - a. Locate the desiccant replacement package. Ensure the contents have not expired by observing the "use by" date and once the package has been opened, observe the humidity indicator card inside.



Pyramid Technical Consultants © 2024

- b. Locate the Desiccant Port Cover on the Ionization Chamber. In most cases it will be annotated on the decal.
- c. Tools required: 2.5mm Allen Wrench, Phillips head screw driver size PH1
- d. If you have received a pre-assembled desiccant cover, remove the outer packaging. Do not open the inner packaging until step (9).
- 3. The desiccant is in the thicker of the two panels. Remove the panel using a 2.5 mm Allen key. Start by slightly loosening each screw M3x8 screw in a rotary pattern, then keep working around the pattern until the screws are loose. Remove the screws and retain.

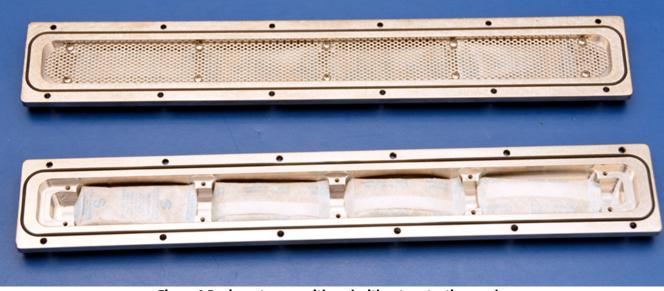


Figure 2 Desiccant cover with and without protective mesh.

4. Carefully remove the panel. Place it on the table with the desiccant facing up.

If you are replacing the entire pre-assembled desiccant cover, remove it from its packaging and skip to step (9)

- 5. Remove the cover mesh, retaining the screws and lock washers.
- 6. Remove the old desiccant packets and discard. Replace with the new packets.



Pyramid Technical Consultants © 2024

- 7. Make sure that the packets are clear of the mounting surface and replace the cover mesh. Replace the screws and lock washers, tightening securely.
- 8. Wipe the "O"-ring and "O"-ring mating surface with a clean lint-less wipe.
- 9. Replace the panel on the IC. The panel does not have a particular orientation.
- 10. Replace the mounting screws, and lightly tighten. In a rotary pattern, gradually tighten the screws until secure.
- 11. Monitor environmental conditions
- 12. Do not run beam or turn on high voltage until internal humidity is below 10%.

OESICCANT REPLACEMENT COMPLETE



Pyramid Technical Consultants © 2024

3 Document Control

This document has been reviewed and approved as follows.

Document Control

Current document version: v.5

No reviewers assigned.

Version	Description	Saved by	Saved on	Status
v3	Updated instructions for Large IC desiccant replacement	Nicolas Dart	Mar 6, 2024 8:09 PM	APPROVED
v2	Minor corrections to the wording of instructions.	Harvey Jules Nett	Dec 15, 2023 5:56 PM	OUTDATED
v1	Initial release	Harvey Jules Nett	Sep 5, 2023 5:43 PM	OUTDATED