


WATCH MANUAL

MICHAEL HILL
FINE JEWELLERS

CHRONOGRAPH

A. DISPLAY AND BUTTONS

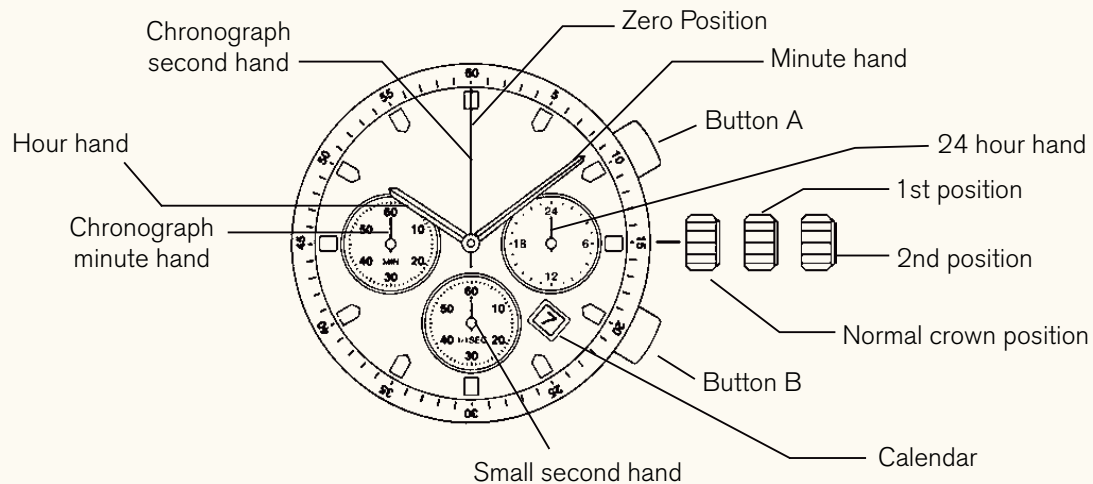

*Dial positions and layout of the face might vary depending on the watch model.



Alternate chronograph eye positions

B. SETTING THE TIME

- 1 Pull the crown out to the 2nd position.
- 2 Turn the crown to set hour and minute hands.
- 3 Push the crown back to the normal position.

C. SETTING THE DATE

- 1 Pull the crown out to the 1st position.
- 2 Turn the crown counter-clockwise to set the date.
*If the date is set between the hours of around 9:00 PM and 3:00 AM, the date may not change the following day.
- 3 After the date has been set, push the crown back to the normal position.


CHRONOGRAPH

D. USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to maximum of 59 minutes 59 seconds. The chronograph second hand keeps continuously for 59 minutes 59 seconds after starting.

Measuring time with the chronograph:

- 1 The chronograph can be started and stopped each time button "A" is pressed.
- 2 Pressing button "B" resets the chronograph and the chronograph second hand and chronograph minute hand return to zero position.

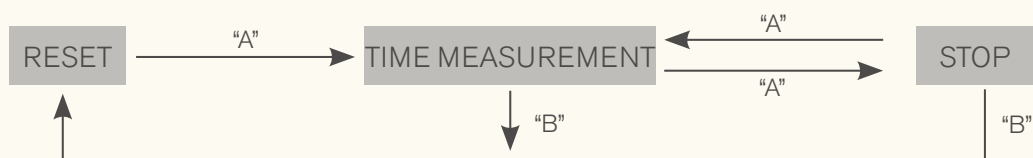

E. CHRONOGRAPH RESET (INCLUDING AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

- 1 Pull the crown out to the 2nd position.
- 2 Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing button "A".
- 3 Once the hand have been zeroed, return the crown to the normal position.

*Do not push crown to normal position while the chronograph second hand returns to zero position. It stops on the way when crown are returned to normal position and its position is recognized as zero position.

CHRONOGRAPH

F. WARNING



WARNING





**THIS PRODUCT
CONTAINS A
BUTTON BATTERY**

AUSTRALIA
Australian Poisons Information Centre
13 11 26

NEW ZEALAND
New Zealand Poisons Information Centre
0800 764 766

CANADA
Canada Poisons Information Centre
1 844 764 7669

Dispose of used button batteries immediately.

If swallowed or placed inside any part of the body, the battery can cause serious injuries. It can cause severe or fatal injuries within two hours or less. Button batteries are hazardous. Keep batteries out of reach of children. If you think the battery may have been swallowed or placed inside any part of the body, you should contact your local Poisons Information Centre immediately for 24/7 fast, expert advice.