


WATCH MANUAL

MICHAEL HILL
FINE JEWELLERS

MULTI-FUNCTION

A. DISPLAY

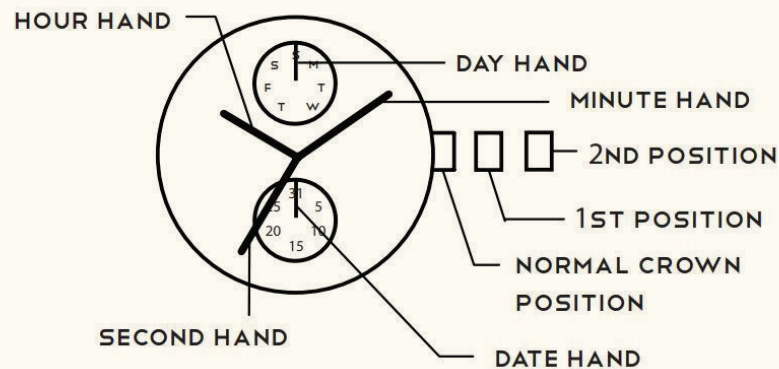

*Dial positions and layout of the face might vary depending on the watch model.

B. SETTING THE TIME & DAY

- 1 Pull the crown out to the 2nd position when the second hand is at the 12 o'clock position.
- 2 Turn the crown clockwise to advance hour and minute hands until day hand is set to the desired day of the week.
- 3 Turn to set the time taking AM or PM into consideration.
- 4 Push crown back to normal position.

C. SETTING THE DATE

- 1 Pull out the crown to 1st position.
- 2 Turn the crown counter-clockwise to set date hand.
- 3 Push crown back to normal position.

MULTI-FUNCTION

D. WARNING



WARNING





**THIS PRODUCT
CONTAINS A
BUTTON BATTERY**

AUSTRALIA
Australian Poisons Information Centre
13 11 26

NEW ZEALAND
New Zealand Poisons Information Centre
0800 764 766

CANADA
Canada Poisons Information Centre
1 844 764 7669

Dispose of used button batteries immediately.

If swallowed or placed inside any part of the body, the battery can cause serious injuries. It can cause severe or fatal injuries within two hours or less. Button batteries are hazardous. Keep batteries out of reach of children. If you think the battery may have been swallowed or placed inside any part of the body, you should contact your local Poisons Information Centre immediately for 24/7 fast, expert advice.