


MULTI-FUNCTION

A) DISPLAY

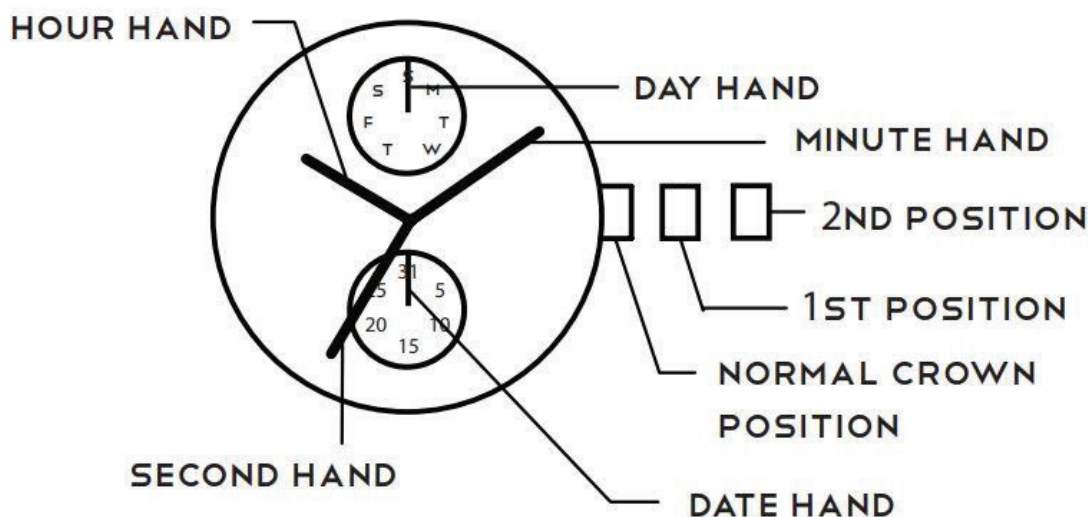


Dial positions and layout of the face might vary depending on the watch model.

TIMING OF DAY CHANGES

- THE DATE HAND MOVES TO THE NEXT BETWEEN 11:00PM AND 12:00AM
- THE DATE HAND MOVES TO THE NEXT BETWEEN 2:00AM AND 4:00AM

- 27 -

Alt dial arrangement:

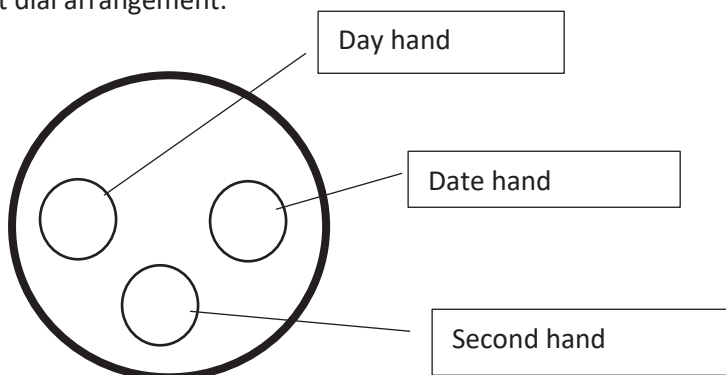

B) SETTING THE TIME & DAY

1. PULL OUT THE CROWN TO 2ND POSITION WHEN THE SECOND HAND IS AT THE 12 O'CLOCK POSITION.
2. TURN THE CROWN CLOCKWISE TO ADVANCE HOUR AND MINUTE HANDS UNTIL DAY HAND IS SET TO THE DESIRED DAY OF THE WEEK.
3. TURN TO SET THE TIME TAKING AM OR PM INTO CONSIDERATION.
4. PUSH CROWN BACK TO NORMAL POSITION.

ADVANCE SETTING TECHNIQUE

- TO ADVANCE THE DAY HAND QUICKLY, TURN BACK THE HOUR AND MINUTE HANDS 4 TO 5 HOURS BEYOND THE POINT THE DAY CHANGES (BETWEEN 11:00PM AND 4:00AM) AND THEN ADVANCE THEM AGAIN UNTIL THE DAY HAND IS SET TO THE NEXT.
NOTE: THE DAY HAND WILL NOT MOVE BACK BY TURNING THE CROWN COUNTERCLOCKWISE.
- THE 24-HOUR HAND MOVES CORRESPONDINGLY WITH THE HOUR HAND.
- WHEN SETTING THE HOUR HAND, CHECK THAT THE 24-HOUR HAND IS CORRECTLY SET.
- WHEN SETTING THE MINUTE HAND, ADVANCE IT 4 TO 5 MINUTES AHEAD OF THE DESIRED TIME AND THEN TURN IT BACK TO THE EXACT TIME.

- 28 -

C) SETTING THE DATE

- 1. PULL OUT THE CROWN TO 1ST POSITION.**
- 2. TURN THE CROWN COUNTERCLOCKWISE TO SET DATE HAND.**
- 3. PUSH CROWN BACK TO NORMAL POSITION.**

ADVANCE SETTING TECHNIQUE

- DO NOT SET THE DATE HAND BETWEEN 9:00PM AND 1:00AM. OTHERWISE, IT MAY NOT TURN PROPERLY.**
- WHILE SETTING THE DATE HAND, CHECK THAT IT MOVES PROPERLY IN ONE-DAY INCREMENTS.**
- IT IS NECESSARY TO ADJUST THE DATE ON THE FIRST DAY AFTER A 30-DAY MONTH AND FEBRUARY.**