


DVR Usage: Controlling Recordings and Live TV

Pause A Live Program



Access and Play Back Your Recorded Programs

1. Press the "List"  button.
2. Use the  or  arrow buttons to choose the program you want to play back.
3. Press the  button.
4. Press  again to play your recorded program or use the arrow keys to scroll and select other options.

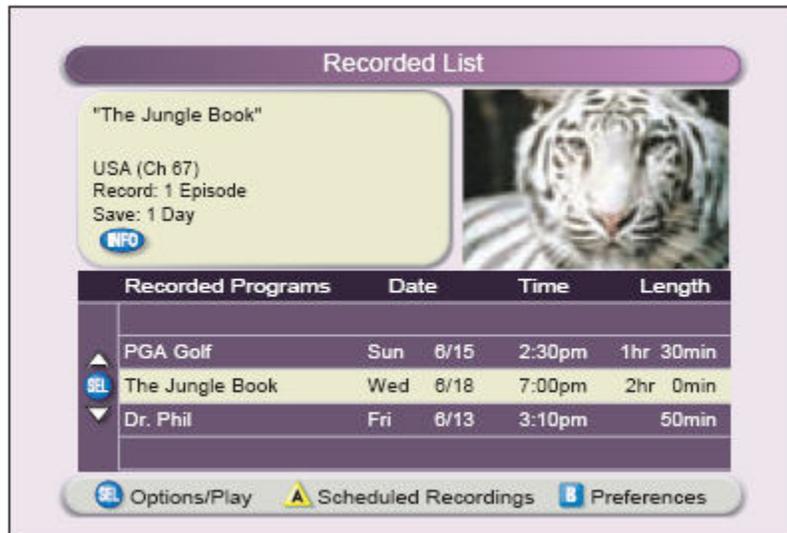



To exit the **Recorded List** screen, press  again or **“Exit”** .

Access and Play Back Your Recorded Programs From the Program Guide.

1. Press the  button.
2. Use the  or  arrow buttons to choose the **DVR** channel.
3. Press  to play back the program.



The **DVR** channel is a dedicated channel that allows you to play back your recorded programs.

Record a TV program you are watching

1. Press **“Record”** .
2. In the **Confirm Recording** screen, choose the recording option and press .
3. The **Record Indicator** light on the receiver will illuminate.

- To stop recording, press **“Stop”**  and follow the on-screen prompts.



Record a TV program from the Program Guide

- Press .
- Press the  or  arrow buttons to highlight a program then press .
- In the **Confirm Recording** screen, choose the recording option and press .
- The **Record Indicator** light on the receiver will illuminate and the recording program will highlight in red in the IPG.



Record Episodes of a TV Program

A single episode or all episodes of a TV program of a program can be recorded on the DVR. The options are available in the **Confirm Recording** screen.


1. Press the  button.
2. Use the  or  arrow buttons to select the program.
3. Press the  button. The **Confirm Recording** screen appears.

 The **Start** and **Stop** time can be modified in this window.

4. Highlight **One Episode** or **All Episodes** and press .



5. If the **All Episodes** option is selected, the **All Episode Recording Options** screen appears.
6. Choose one of the options in the **All Episode Recording Options** screen.
7. Press  to save the settings.

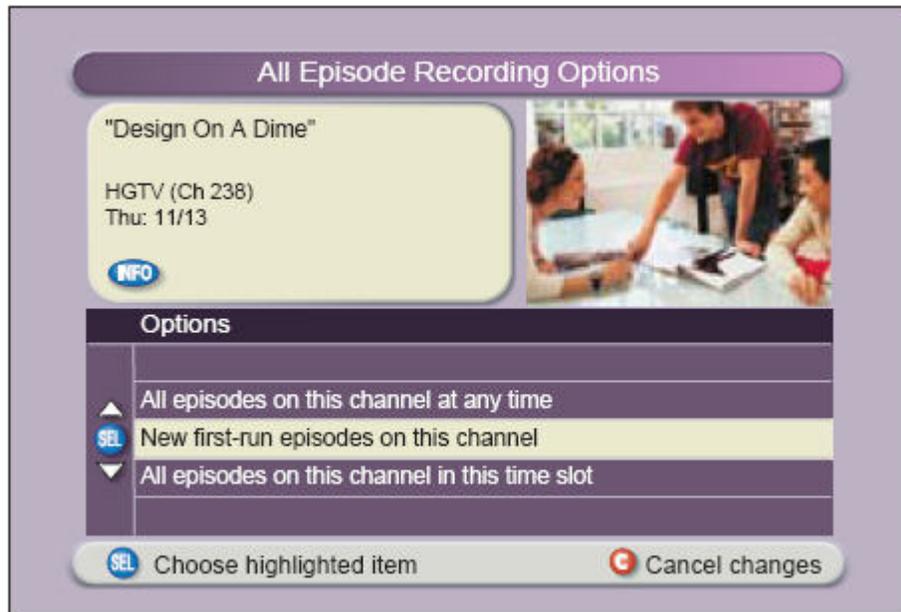

Erase a Recording

1. Press the  button.
 2. Highlight the recording to erase using the arrow keys.
 3. Press . The **Recorded Programs Options** screen appears.
 4. Use the “**Down**”  arrow button to highlight the **Erase** option.
 5. Press the  button. “**Are you sure you want to erase this recording?**” message appears.
 6. Press the  button to confirm deletion.
-