


Getting to Know Your Remote

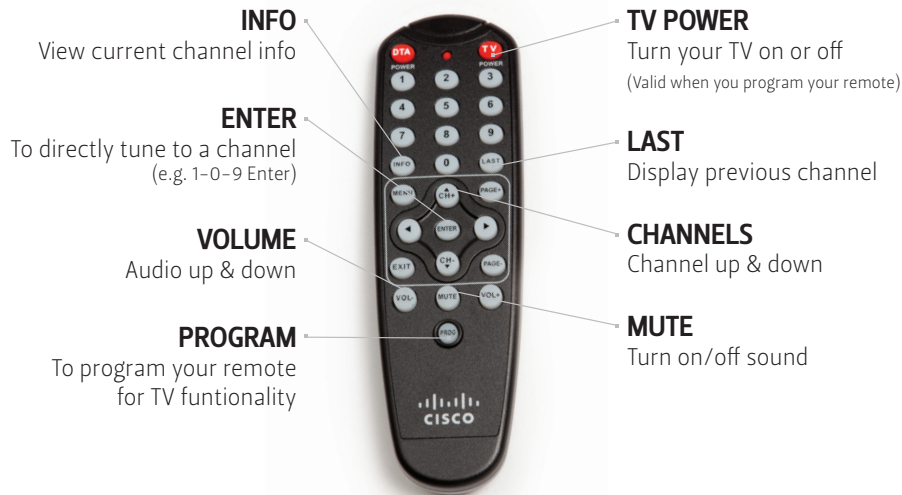

Programming Your Remote

Program your remote to sync with your TV model.

1. Get remote instructions manual from self-install kit. Find the brand name and 4-digit device code number of your TV.
For example, Panasonic TV: 0001, 0061, 0101, 0201, 0231.
2. Manually turn on the TV.
3. Confirm the batteries are correctly inserted in the remote.
4. Press and hold the “PROG” button. Then, while holding down “PROG”, press the “TV POWER” button. The LED light will turn red, indicating the remote is in program mode. Release both buttons.
5. Enter the 4-digit Device Code (for example: code 0001 under Panasonic TV). The red LED light turns off if the code has been accepted by the remote control.
6. If the LED light flashes twice, it means the code entered is incorrect, and the remote control remains in program mode. Re-enter the correct code number again. The remote will exit program mode if the code is not entered within 10 seconds.
7. Point the remote towards the TV and press the Power button. If the TV turns off, the remote is now programmed to operate the TV.
8. If the TV fails to turn off, go back to Step 1 and enter the next code listed under the TV brand.

Please refer to the remote instructions manual for more detailed instructions and the code list.

Cisco Digital Transport Adapter HDA-IR2.1 Remote Control



Welcome

The Cisco Digital Transport Adapter (DTA) remote controls your Cisco DTA and the volume and power on many connected TVs. Use the instructions in this guide to set up and use your Cisco DTA remote.

Important Information About Your Remote

The remote control is initially programmed for DTA only. If you want to program a TV into the remote, you need to go to Program the Remote to Control Your TV.

Batteries

Use two AAA batteries. Check the diagram inside the battery compartment to ensure the batteries inserted in the correct direction.

Note: Batteries must be replaced within two minutes of removal to retain programmed TV code.

⚠ Caution: This remote should be kept out of reach of the children under the age of 6.

Program the Remote to Control Your TV

Program the remote control for TV following these steps:

1. Turn on your TV.
2. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on, then release both keys.
3. Find four-digit device code for your TV brand. Press and release the four numeric keys.
4. If the device code is valid, the LED turns off and the device code will be retained.

If the device code is invalid, the LED will blink two times and then remain on. The remote will stay in set up mode. You can go back to step three to enter another code if necessary

Automatic Code Search

If the device code for your TV brand can't be found in the list, please try to search the device code database following these steps:

1. Turn on TV device manually.
2. Press and hold the "PROG" and "TV Power" keys at the same time until the LED turns on, then release both keys.
3. Press the "TV POWER" key on your remote to enter automatic code search mode. The remote will transmit the TV power code every 1.5 seconds and the LED will blink at the same time. When you see the TV device is powered off, the remote has found a valid group device code.
4. Press the "PROG" key to store the code and to exit the search mode.

DTA Volume Control

1. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on. Release both keys.
2. Press the VOL+ to assign the volume and power on many connected TVs. Use the instructions in this guide to set up and use your Cisco DTA remote.

TV Volume Control

1. Press and hold the "PROG" and "TV POWER" keys at the same time until the LED turns on. Release both keys.
2. Press the VOL+ to assign the VOL+, VOL-, and MUTE keys to control DTA. LED will blink twice then OFF.

Trouble Shooting

If there is no response when you press any key on the remote, please check the following items before calling for service.

Check the Batteries

Are the batteries inserted correctly? Are the batteries drained? You may need to replace the batteries with new ones.

Check the DTA


Is the DTA connected to the input of the TV? Is the DTA connected to the cable wall outlet? Is the DTA power cord connected to the power outlet?

Check the TV

Is the TV power cord connected to the power outlet? Is the TV tuned to the correct channel to work with the DTA?

Check the TV Code List

Is your TV's brand included in the code list? Sometimes there is more than one code for a TV's brand, please try to use different codes. If you can't find your TV's brand in the list or you can't program your remote manually, you should perform the following steps:
-Run Auto Search Mode.
-Use the original remote control that is provided with the TV.

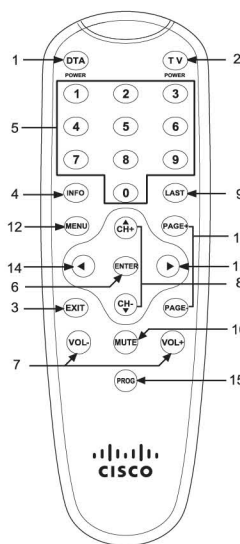

The Keys Including:

- 1.DTA Power
- 2.TV Power
- 3.Exit
- 4.Info
- 5.0-9 Digits
- 6.Enter
- 7.Volume +/-
- 8.Channel +/-
- 9.Last
- 10.Mute
- 11.Page+/-
- 12.Menu
- 13.Right Arrow
- 14.Left Arrow
- 15.PROG

TV Brand and Code List

888	0471 0701
A. R. Systems	0061 0601 2881
Accent	0021 0061 2881
Acer	2961 3281
Acoustic arch	2911
Acura	0021
Adcom	1061
Addison	1181 0201
ADL	2181
Admiral	0171 0231 1191
	0821 0471
Advent	1901
Adyson	0081 2051
AEA	0061 2881
AEG	2501 1031 1951
Agashi	2051 0471 0081
AGB	1611
Aiko	0021 0061 2881
	2051 0641 0041
	0711 0121 0311
	0291 0471 0081
Aim	0061 0121 0701
	2881 1521 0341
	1651 1701 1301
Airis	3221
Aiwa	0981 2341 2581
	2401 0021 0311
	0341 2881 0061
Akai	0641 2741 2431
	0711 1481
	0291 0041 0351
	1241 2641 0121
	1521 0231 0701
	1421 1351 1611
	1341 0991 0911
	0771 3121 0081
	1091 2051 0471
	0281 0651 1031
	2001 2581 0761
	1151 2421 2271
	2601
Akashi	2151 0021
Akiba	0351 0481 0751
	0061 2881
Akira	0821
Akito	0061 2881
Akura	0061 0351 0471
	2881 1271 0701
	0021 0481 1351
	2621
Alaron	2051
Alba	0021 0061 2001
	2881 0051 1351
	0351 0821 1371
	0641 1271 0621
	2051 0431 0231
	0811 2581 0731
	2601

Alfide	1241
Alkos	0041
All-Tel	1881
Allorgan	0081
Allstar	0061 2881
Ambassador	0271
Amplivision	0081 1371 0531
Amstrad	0021 0271 0061
	1611 0471 0671
	0641 0351 0701
	0711 2881 2001
	1151 2621
Anam	0061 2881 0021
	1161 1871
Anam National	0061 2881 1161
Andersson	1951 2041
Anglo	0021 0471
Anitech	0021 0471 0061
	2881 0481 0191
Ansonic	1371 0061 2881
	0021 1271 0661
	0231 0191 0891
	0461 0431 2381
	1621
AOC	0021 0101 0171
	0201 0281
Aolingpike	0471 0701
Apollo	0761
Arc en Ciel	0211
Arcam	2051 0081
Ardem	1221 1351 0061
	1101 2881
Aristona	2881 0061
Arthur Martin	0231
ASA	1621 0181 0581
	0111
Asambal	2721
Asberg	0061 2881 0191
Asora	0021
Astra	0061 2881
Asuka	0351 0081 2051
	0471 0481
ATD	1301
Atlantic	0061 2881 2051
	0531 0461
Atori	0021
Auchan	0231
Audiosonic	0021 0061 0661
	1721 0211 2881
	1351 1341 0081
	1371 0561 0471
	0351 1221 2191
Audioton	0081 1221 1371
	0471
Audioworld	1301
Aumark	0101
Autovox	0081 0431
AVP	2581
AWA	0021 0031 0051
	0661 0701 0061
	2881 2051 1031
	0081
	0201 0471 3021
Axxent	0021
Axxon	1351
B&D	2181
Baier	1901
Baihc	0021 0471 0701
Baile	0001 0021 0661
	1211
Baird	0211 2651 0301
	0121 0131 0081
	0341 2091
	0951
Bang & Olufsen	0471 0701
BaoHuaShi	0471 0701
Baosheng	0021
Barco	0231
Basic Line	0021 0661 0061
	0351 0231 1271
	0021
	2881 0481 0081
	0751 0571 2001
	0081
Bastide	0081
Bauer	1701 0021
Baur	0021 0061 0311
	0791 0881 0011
	2881 0291 2401
Bazin	0081
Beaumarck	0281
Beijing	0001 0021 0341
	0371 0471 0661
	0701 0801 1211
	1741
Beko	1371 1351 0041
	1221 1341 0061
	0821 2001 2881
	1031 1821
	2071 2711
Belson	2881 0061
Bennett	2511
BenQ	0061 2881 0821
Beon	1271
Berthen	0561 1371
Best	0061 2881 1371
Bestar	0661
Bestar-Daewoo	0661
Binatone	0081
Black Diamond	1001 1721 2001
	2881 1741 1521
	1951
Black Panther	0191
Black Star	0431
Black Strip	0041
Blackway	0481 0351
Blaupunkt	0011 0291 0881
	0551 0401 0331
	0751 0261 0051

Blue Sky	0061 0351 2881
	1271 1351 2001
	0811 1341 2411
	0481 0751 2581
	2071 1821 2971
	0481
Blue Star	0431
Bondstec	0081 0021
Boots	0531 0401
Bosch	0061 0481 3111
BPL	2881 2721 2841
	0341 2551 2811
	2691 2791 3131
	3391 3251 3101
	0211 1061 0441
	0491 2651 0961
	2981
Brandt	0491 0441
Brandt Electrique	0061 2881 1271
Brinkmann	2661 0821 1221
	0061 0671 2881
Brionvega	2051 0081
Britannia	0471
Brother	1221
Bruns	4841 4391 4071
Broksonic	4441
	0231 0311
BSR	0351
BTC	0021 1001 0051
Bush	2001 0061 1201
	3231 0351 1351
	0481 1271 0621
	0231 0641 0661
	2661 1301 1191
	0471 0311 0811
	0341 0081 2501
	2881 2521 2581
	1591 2421 2271
	2341 3401
	0021
Caihong	1971
Caishi	0351
Canton	0471
Capsonic	1011 0061 2881
Carad	1271 2001
	0751 0061 2881
Carrena	0051 0111 0061
Carrefour	2881
	0261
Carver	0021 0061 2881
Cascade	0061 2881 0231
Casio	0061 2881
Cathay	0061 0081 2881
CCE	2641
	2721
CE	1711 1721 1741
Celestial	2681
	1631 1971
Centrex	2001
Centrum	0061 2881
Centurion	0431
Century	0141 0251 0431
CGE	0821 1371 0231
	0001 0021 0471
Changchen g	0661 0701 1211
	0021 2641 0661
Changfei	0471 0701 1521
Changfeng	0021 2641
Changhai	2681 1721 0021
Changhong	0471 0871 1741
	0021
Chengdu	0021
Ching Tai	0021
Chun Yun	0021 0471
Chunfeng	0201 0051
Chung Hsin	0701
ChungFeng	0021
Chunsun	0021 0351
Cimline	1241
Cinema	1151 2501
Cinex	0101
Citizen	0021
City	0061 0821 2881
Clarivox	0111 0191
	0061 0431 1371
Clatronic	0641 1351 0351
	0471 2881 0081
	0021 0191 0531
	1151 1031 1951
Clayton	2001
CMS	2051
CMS hightec	0081
Cobolt	1971
Cobitech	2581
Concorde	0021
Condor	0531 0061 1371
	2881 2051 0021
	0481 0191 0431
	0821 0891 0231
	0471
Conia	1531 1741 2711
	1721
Conrac	1821
Conrad	0061 2881
Conrowa	0021 0471 0701
	1301 1521 2031
	0021 2051 0051
Contec	0031 0471 0061
	2881
Continental Edison	0211 0491 0811
Cosmel	0021 0561 0061
	2881
Crosley	0141 0431 0251
	0231
Crown	0021 1331 0061

Crown Mustang CS Electronics CTC CTX Curtis Mathes Cybertron Cytrox D-Vision Daewoo	1371 1221 2881	Elin	0061 2051 0911	Galaxi	0191 0061 2881	HCM	0021 0481 0701	Intervision	0061 0481 0081
	0821 0811 1351		2881 0181 1621		0311 0231		0061 2881 0081		0191 0751 0471
	1031 1241 1341		0311 0231 0021		1371 0821 0061		0351 0821 0471		0641 0651 2661
	0341 1181 0571		0351 0061 0531		0191 2881		2881 0061		1221 1371 0691
	2001		2881		0021		0081 0021		0811 0351 0231
	1241		0191		2511		3191		0431 0021 2881
	2051 0351 0431		0021 0471 2051		0231 0021 0661		0211		4061 4411 4621
	0431		0431		0351 1191		2051		4071 4491 4681
	2511		0271 0281 1351 0431		2651 0281 0481		0471 0061 2881		4371 4961
	0101 0171 0241		0061 2881 0641 0111		0961 0491 0211		0351		0021 0061 2881
Cybertron Cytrox D-Vision Daewoo	0351	Elite	1221 1371 0231 0541	Galeria Gateway GBC GE	0441 1061	Hedzon Hema Hicon Hifivox Higashi Highline Hikona Himitsu Hinari	1601	Insignia	0351 0431 0641
	2321		1271 4671 4021 4071		0231		0021 0341 0051		1301
	0061 2621 2881		4521 4661 4731 4391		0061 0231 0311		0061 2881 0351		0351 0061 2881
	1111 1211 0661		4421 4461 4651 4431		0121 0081 1611		0231 0621 0731		0481 0751
	2411 0861 0061		4031 4441 4681 4631		2881		0811 0471 2581		0081 0531
	2881 0021 2051		4701 4711 4341 4561		0021 0431 1191		1011 2581 1351		0061 0641 0351
	0351 0081 1891		4311 4471 4481 4201		0231 0661		0481 0351 0751		0481 0471 2051
	0281 0261 2531		4571 4601 4351 4721		0211 0491		2971 0341 0021		0021 2881
	2581 1931 0201		4741 4821 4841 4861		2651 0491		0871 1521 1741		0231 0311 0771
	2931 3361 1901		4871 4881 4911 4941		0021		2031 2121 1631		0911 0761 0301
Dainichi Daitzu Danichi Dansai	1881 1241	Emperor	0481	General Electric General Tehnic Genesis Genexxa	0021 0061 2881	Hitachi	2881 3121	ITT Nokia	0581 0571 0341
	0351 2051		1521		0231 0351 0061		0361 2211 0021		1011
	2891		2991		2881 0701 0021		0971 0051 0071		0311 0911 0231
	0351		0061 2881 0081		1881 2321 2771		0201 0761 0231		0761 0771 0581
	0061 2881 0471		0231		2181 1931		2651 0081 0211		0341 0571 1031
	0041 2051 0021		0021		2991		0321 0281 1611		1011 1091 1191
	0051 0081 0341		0001 0021 0061		0081		0121 0781 0861		0471 0061 2881
	0701		2881 0231 1721		1391		0911 1191 1381		0431 0661
	1371 1221 1351		0471 0081		1271		1111 1491 2001		2621
	1031 1341 2581		0061		2051		1891 2031 0181		0051 1391 0021
Datsura Dawa Daytek Dayton Daytron	0341	Eurofele EuroLine Euroman	2881 0081 1371	Goldhand Goldline GoldStar	0561	Hisawa	0791 0771 1991	ITV	0021 0471 0701
	0021 0061 2881		0061 2881		0001 0061 0021		2451 2041 1911		0021 0471 0701
	1301 2101 1651		0061 1611 0191		0281 1371 0651		4271 4021 4241		0021 0471 1301
	3021 1241 3011		0231 0081 2881		0081 0431 2881		4161 4551 4541		1741
	0021 2101 3011		0431 2051		2051 0231 0311		4301 4311 4921		0061 0861 1111
	0021 0661 0061		2271 2421		0211 1191 1031		0201 0361		0661 2881 0731
	2881		0061 2881		0071 1351 1341		0021 1011 0751		2581
	0661 1211		0461 0231		0751		0351		3411 1901
	0341 0071 0911		0061 2881 0431		0811		0301		1331
	0231 1191		0061 2881		1111 2421 0051		1351 2501 1881		2881
DEC Decca	1661 2151 1971	Europhon	2071	Gooding Goodmans	0121 0861 0081	HMV Hoer	1951	JNC	0471 0701
	0061 0121 1611		0061 2881		2881 1351 2651		1031		0051 0171 0301
	2881 0081 1891		0021		1271 0641 2411		0021 0171 0471		0351 0641 0821
	1051 2581		0021		0661 0471 1611		0471 0701		0871 1031 1161
	0061 2881 0661		0471 0701		0021 0811 0041		0061 2881		1181 1261 1451
	0351		0021		0771 0961 0441		0351 0751 0481		2731 3481
	2281		0661 0021		0351 2581 2251		0021 0471 0701		0021 0471 0701
	0471		0061 0131 0211		1211 2521 1931		0021		0021 0351 2051
	0061 2881 1031		1061 0491 0441		2191 1281 3021		0021		0481 0061 0081
	2061 1281		2651 0961 0301		1371		0021		2881 0751
DER Desmet Diamant Diamond	0301	FairTec Family Life Feilang Feiyan Feiyue Fenner Ferguson	2881 0041 1181	Gorenje GPM Gradiente	0351	Home Electronics	0021	JVC	0651
	0531 0061 2881 0021		1621 0201 0311		1181 0261 2731		0021		2051
	0061 2881		0911 0731 2001		0061 2881		0021		2551
	0471 1301 0021		3211 2341 2581		0231 1351 0311		0021 0471 0701		0001 0021 0471
	1731 2051 0641		0231 2051 0791		0641 0061 0571		2051 0661 0471		0661 1211
	2151 1721		0311 1191 0061		2881 1951		0471 0701		0021 0471 0701
	0061 2881		2881 0641 0701		1151		1961 2181		0231 0311 0461
	2041		0301 0471 2581		0061 0091 0121		0081 2051		1621
	0061 2881 0181		0081		2881 0341 0371		0021 2051 0081		0061 2881 1371
	1271		0341 0581 0911		0081 0571 1611		0431		1011 0231 0481
DigiLogic Digitex Digitor	0061 2881	Finlandia	0311 0231 1191	Gran Prix Granada	0201 0051 0761	Hyper	0311	Karcher	1351 2501 1031
	1721		0121 0491 2651		0441 0961 0231		0061 0471 2881		2881 0061
	0061 2881 1941		0091		1191 0361 2651		0481 1351 1341		0641
	1871		0061 0181 0111		0911		0081 0751 2581		2051
	0311		1621 0121 2881		0061 0481 2881		2001 1271 1221		0061 1011 0671
	1931		1351 0581 0891		0021 0231 1011		0061 1881 3201		2881 0231 2661
	0061 2881		1611 0081 0231		1351 1341 1271		2881 1651 2151		0791 1371 0651
	0021 0061 2881		1341 0191 1091		0661 0531 0351		1521 2751 2241		1191 0891 0191
	0431 0081		0841 0771 2501		0751 2001 1881		1901 3361 2501		0431 1151 2001
	DL		1971 1631 0061		Firstar Firstline		1051 1821		Gronic Grundig
1281 1881		0021	0011 0021 0051	0081 0471 0061		0231 0721			
3411 2951		0021 0061 2051	0061 0111 0281	0641 0021 2881		2001			
1271		2881 0081 0661	0291 0721 0731	0351 2051		0181			
0691		0431 1271 0541	0811 0871 0881	0351 2051		0081 2641			
0021		1351 0231 2411	2881 1021 1241	0061 1891 2881		2051			
0021		0191 0891 0121	1281 1371 1471	2781		0001			
2481		0341 0311 2001	1651 2191 2201	3021		2881 1651			
1941 1871 2501		0091 0311 0231	2251 2341 2581	2181 1961		1681			
1721		1951 2991	2601 2651 2991	0061 0141 0231		2881 0061 1271			
DTS Dual	0021	Fisher	2701	Grunkel H&B Haaz Haier	3021 3441	Ices Ict Igo ILSonic Iiyama Imperial	0431 1371 0821	Kendo	0061 0461 1371
	2661 0081 2651		0061 0751 2881		1951		0251 2881 2251		1011 0891 0661
	0061 2881 0461		1011 0121 0351		1821		0891 0311		0861 2881 0721
	0601 0691 0231		0471		1651		0001 0021 0471		0671 2581
	1891 1091 2041		0191		1301 0471 1601		0061 0701 1211		3191
	2001		2831		0021		0061 2881		0201 0051
	0081		2041		0471 0701		2021 2771		0061 2881 0191
	0111 1621 0191		0301		0471 2051 0081		0231 0811 1011		0431 0351
	0081 0121		0061 0231 0531		2881		1351 0311		0021 0471
	Dunai Durabrand		0231		Fortress Fraba Friae		1221 2051		Hammerstein Hampton Hanimex Hankook Hanseatic
0061 0281 2381		0061 2881 1371	2051 0081	0021 0121 1611		0061 2881 0641			
2881		0061 0661 2881	0351 2581	0061 2881 0351		1351 0821 0351			
0061 2881		0021 0061 2881	0281	0081 0431 0191		1121 1281 1531			
1971		0191 1371 0861	0061 0531 2881	0481 1951		1601 2711 1661			
0061 2881		1171 1011	0311 0861 2661	0061		0811			
0061 2881		0231 0431 0471	0231 1211 0481	2661 0061 2881		0061 2881			
1971		191 0081 0021	0691 1111 1371	1881 2321		1371 0531			
0811		1881	0021 0081 0651	1581 1721		0061 2881			
Elbe Elbe-Sharp Elcit		0461 0721 0671	Fujimaro	1261 0121 0191		Hantarex	1351 1821 1221	Interactive	
	1371 0231 0061	1861 0081 0231		0021 1611 0061	1371 0211 0891		0021		
	2881 0351 0291	0021 0601 0061		2881 0191 2951	0401 0231 0311		0081		
	0891 1011 0081	2881 0311 0461		3141	1371 0211 0891		0021 0471 0701		
	1611 0311 2251	0021 0081 0231		0061 2881 0791	0021 0061 0471		0231		
	1611	2321 2421 2271		0061 2881	0431 0791 2881		0021		
	0431 1611 0191	3001 1951 1821		1881	0061 0231 2881		0021		
	0231	1271 0471 0701		1581 2091 2301	0431 0311 0791		0341 0371 0471		
	0021 0061 2881	0471 0701		0021 0701 0061	0401 1371 0211		0661 1211		
	Elekta Elfunk ELG	0471 0481		Furichi Futronic	2151		Harwood		2881 0811
2121 2001		0471 1661 2151	0061 2881		0061 2881 0861	0231 2051 0081			
0061 2881		0061 2881	0061 2881		0661 2411	1881 1351			
0061 2881		3221	0061 2881		2051	1221 1371			
Elfon Elit El									

Lavis	2001	0061	0231	Maxim	2621	2501	Nesco	0431	2581	Panasonic	0001	0061	0101	0311	0701	0211
Leader	0021			MCE	0021		Netsat	0061	2881		0201	0231	0281	0881	0791	0291
Lecson	0061	2881		ME	2721		Network	0561			0311	0341	0371	0051	0081	0431
Legend	0021	0561		Mediator	0061	2881	Neufunk	0061	0021	2881	0631	0081	0911	0401	0251	0331
Lemair	0891			Medion	0061	1271	1351	1011	0351	0481	2881	1161	1611	0181	1271	2881
Lenco	0061	1391	0021					1351			1841	1861	2361	0011	0551	0471
	0231	0661	2881				New Tech	0061	0021	2881	2461	2551	0501	2001	0581	0021
	1621	1281	2001					2651	0081		0061	0891	2881	0051		
Lenoir	0021						New World	0351			Panda	0021	0341	0371	0061	2881
Lesa	0431						Newwave	0021	1391	0281	0471	0701	0871	0211	0351	0231
Levis Austria	0061	2881						0171				1301	1741	0061	2881	0491
Lexsor	2091			Megas	1011		Nfren	1681			Papouw	0061	2881	0561		
Leyco	0061	0471	0121	Megatron	0281		Nicamagic	2051			Pathe Cinema	0231	2051	0531	0061	2881
	2881			MEI	2001	0061	2881	0121	0041	0351	1371			1611	0431	0061
LG	0001	0021	0061	Meile	0471	0701	Nikkai	0061	2881	2051	0211			0061	2881	0281
	0081	0101	0201	Meletronic	0021	0581	0061	0081	0471	0561	Pausa	0021		0021	0061	2881
	0211	0231	0281					0021	0051		Peng Sheng	1971		1371	0821	0701
	0311	0431	0651					1351			Penney	0101	0281	1151	1271	0471
	2881	1031	1131				Nikkei	0281			Perdio	0531	0121	2001		
	1301	1341	1351				Nikko	2831				0061	2051	0051	0991	1521
	1371	1761	1851				Nippon	0801			Perfekt	0061	2881	0111		
	2051	2071	2261				Nishi	0191	0111	2051	Philco	0251	0141	1061	0101	0171
	2801	2851	2921				Nobliiko	0211				0431	0061	0961	0441	1041
	3081	3471	3501				Nogamatic	0021	0231	0761		0231	1371	1521	1251	4201
	3531	3591					Nokia	0771	0911	1031		2661	0781	4261	4211	4581
Liesenk & Tter	0061	0401	2881	Memorex	0021	0281	2001	0841	1091	0571	Philex	0301	0231	4021	4221	4231
Liesenkotter	0061	0401	0331	Memphis	0561	0121	0021	0341	0661	0581	Philharmonic	0081		4501	4611	4281
	2881			Mercury	0001	0061	0021	0531	1011	0211	Philips	0021	0061	4311	4321	4591
Lifetec	0061	0021	2661					0081				0021	0061	4851	4891	4901
	0661	1271	0791					0211	1351	1971				0281		
	1171	2001	1891	Merritt	0911	0311	0231	0491	2651	0961				0061	0821	2881
	2881	0351	0471	Metronic	1061			0011	0061	2881				0061	2881	
	1261	2271	2421	Metz	0681	0881	0741	0441	0231	2421				0311	0911	0051
	1351							2271						0581		
Lloyd's	0001	0021						0231						0061	2881	
Local Calcutta TV	3171	2831	2841					0061	2881					0061	2881	2001
	2721							0061	2881					1271		
Local Chennai TV	0641	3171	0471	MGA	2001	3321		0061	2881		Phocus	2311	2191	1881	1901	1911
	0991	3261	2831					0061	0181	0661	Phoenix	0061	2881	2771	2101	2171
	3051	3091	0021	Micromaxx	0351	1621		2881				1221	0231	2321		
Local Delhi TV	2741	3231	3171					3041				0121	2051	1351	1111	2411
	3261	2831						0751	1301	1721	Phonola	0061	2881	0061	2881	1371
	2001	2041		Microstar	2001	2251	1821	0061	2881			2051		0231	0461	0471
Lodos	0791	1101	1641	MicroTEK	1721			0231	0311		Pilot	2881	0061	1191	0891	0431
Loewe	0061	2881	1171	Mikomi	2041			0761	0911	0771	Pioneer	1651		1371	0121	0471
	1371	0671	1611	Minato	0061	2881		0471				0061	0211	0061	2881	1221
Logik	0001	0031	0101	Minerva	0011	0291	1611	1371	0061	2881		0231	1251	2051		
	1301	1581	0021					0471	0121	0021		0491	2871	0061	2881	
	0301	0471	0641	Minoka	0701	0061	2881	3021				2651	0311	1581	0821	
	1931	2181	2001	Mirror	2521			0471			Pionier	1371	1221	0021	2001	0351
Logix	1271	2661		Mistral Electronics	0301			1631	1971	1301	Plantron	0061	2881	0821	0471	0821
Longjiang	0471	0701		Mitsubishi	0201	0171	0791	2721	0931	2781		0021		2881	1351	1271
Luker	2621							2861	1181					2341	2061	2521
Luma	0061	1191	0231					0641	0991	0351	Playsonic	1351	0061	0061	2881	
	0891	2881	0661	Mitsuri General	0231			0711	0191			0571	1341	0051	1911	
Lumatron	0021	0671	0461	Mivar	2051	1611	1371	0061	2881		Policom	0191	0211	0061	0471	1301
	1191	0061	2881					1161	0241			0231	0111	0021	0081	1331
	0671	0231	0461	Monaco	0021			0481				0251	0881	2051	1281	2881
	0311	0081	0471	Morgan'S	0061	2881		0171			Polytron	4331	4401	1371	0701	0441
	0131			Motorola	0171			0061	2881		Polaroid	4451	4491	2881	0061	
Lux May	0061	0021	2881	MTC	0101	1371	0791	3071	3291			4531	2711	0211	1061	0231
Luxor	0321	1951	0311					0061	0271	0731		4951		0491	0961	0441
	1191	0771	0841	MTlogic	0231	2051	0311	0621	2881	2351	Poppy	0021		2651	1611	0311
	0341	0911	0231	Mudan	1351	2191		1351	0531	1171	Portland	0661	2411	0851	0911	1161
	0581	0761	2001					0541	0031	1611	Powerpoint	0811	0061	1351		
	0081	1091		Multibroadcast	0471	0701		0021	0191	0471		1301	2711	1011	0751	0481
LXI	0281			Multistandard	0301			0701	2341	2581	Prandoni-Prince	0431	1611	1771	1041	3351
Madison	0061	2881		Multitec	0061	2881	1221	1931	2091			1191		0021		
Magnadyne	0191	0431	1611					0061	0351	2881	Precision	0081		0021	0031	1611
	0231			Multitech	1271	2001	2501	1271	2001	0061	Premier	0021	0471	0271	0471	0081
Magnafon	0191	1611	2051					2881			President	2151		0231		
	0131							1611			Prima	0021	0471	0061	2621	2881
Magnavox	0061	2881	0051	Murphy	0431	0471		0121	0351	0081		2301		1951	1271	1331
	1651	1631	1151					0471	0701	0061	Princess	1301		2001		
Magnum	1351	0061	2881	Musikland	0231			0661	0621	2881	Prinston	2001		0061	2881	
	1341	2311						0061	2881		Prinz	0121	0311	0231	0321	0311
Mandor	0471			MvCom	2881			0351			Profex	0021	0231	0911	1611	1191
Manesth	0061	0081	2881					0121	0051	0351		1191		0571	0341	0771
	0471	0531	0041	NAD	2881	0061		0061	2881		Profi	0021		1051		
	0231	1191						0051	2401	0061	Proline	0061	0541	0441		
Manhattan	0061	1901	2881	Naiko	0061	2621	1031	0081	0531	2651		1061	1111	0191	1611	
	1271	2001	2891					0171	0791	0881		0891	0121	0021	0051	0171
	0231	1591		Nakimura	2881			2881	0011	0291		3021		0281	1161	1391
Marantz	0061	2881	0701	Nanbao	0661	0061	2881	0311	0211	0371	Prosonic	0061	2881	1041	0121	0281
	3311			Nansheng	0021	0471	0701	0431	0021	0481		0661	0641	1741	2671	0021
Mark	0061	2881	0081					1611	2661			1351	2051	0081	0101	0171
	2051	0661	0021	Naonis	1191	0231		2581			Protech	0021	0061	0341	0371	0471
	1351	1341		Narita	2621			0061	2881	1891		0191	0081	2881	1061	1131
Master's	0861	0061		NAT	0371	0341	0871	1351	2001	0731		0471	0561	2051	2111	2221
Masuda	0351	0641	0021	National	0231	0031	0051	2051				1271	0481	2661	1501	3241
	0471	0061	0081	NEC	0061	0081	0261	1371	0061	0821		1221	2001	3371	3771	0411
	2881							1171	0891	2251	Proton	0001	0281	3631	3661	3691
Matsui	0021	0061	0031					1351	1891	0291		1131		3831	1231	1751
	2881	0041	0811					2401	0551	2881	Provision	0861	0061	0901	1311	2291
	0051	0121	0271					0431	0401	0231		2001	1351	4021	4131	4141
	0341	0621	0081					2661	0081	1191		2071	1901	4161	4171	

	1371 0571 0121	Sonneclair	0061 2881	Telecor	0061 2881 0231	0881 0311 0431
	2051 1621 0081	Sonoko	0021 0061 2881		0351 0081 0461	0841 0771 0551
	0941 0701 0021	Sonolor	0471 0481 0081	Telefunken	0691	0821 0031 0791
	0871 0231 0061		0231 0341 2401		1061 0141 0961	0051 0111 0231
	0201 2881 1221	Sontec	0911 0311 0481		0211 1281 0441	2881 0891 0401
	0261 1321		0061 2881 1371		1301 2651 1331	0331 2401 1271
Sanyuan	0021 0171	Sony	0021		0851 1721 2551	0081 0211 0671
Save	0061 2881		0031 0051 0061		1531 3071 1631	0561 0271 1091
Saville	2581		0141 0171 0191		0491 1971 0251	0021 0251 2001
SBR	0061 2881 0301		0261 0611 2881		0131 0061 2881	2381 0261 1951
Schaub Lorenz	1031 1221 0661		1161 1791 1981		1221 1351 2501	2041 1041
			2331 2401 2471	Univox	0061 2881 0561 0231	
			3381 3701 3621	Utax	0231	
			4381 4751 4761	V7 Videoseven	2491 0281 1931	
			4781 4791 4811		3021 2181	
Schneider	0061 1891 0351		0161 0221 0381	Telegazi	0061 0231 0461	
	0431 2881 0641		0421 0521 0831		0351 0471 2881	
	2661 1271 0691	Sound & Vision	2591	Telemeister	0531 0061 2881	2881 1271 2001 1951
	0601 0461 2651		0191 0351 0661	Teleonic	0061 2881	
	0081 0311 2001	Soundesign	0061 2881	Telestar	0021 0061 2881	
	0231 1151 1351	Soundwavc	0281		0701	Vexa
	2411 2581 2621		0061 0821 2881	Teletech	0021 0061 2881	Victor
	2341 0111	Sowa	0531 1341		1271 0431 0561	Videocon
	0281	Soyea	0101 0371 0051		2001	
Scotland	0231	Spectra	0281	Teleton	0051 0081 0231	Videologic
Scott	2061 0281	Ssangyong	1581		0461 1191	0351 2051
Sears	0281	Standard	0021	Televideon	0531 0231 2051	Videologique
Seaway	1111		0021	Telex	0061 2881	0431
Seelver	2881 2001 0061		0021 0061 0081	Tempest	0021 0061 2881 0471	VideoSystem
SEG	0051 0061 0081	Starlite	0531 0661	Tennessee	0061 2881	Videotecnica
	2881 0471 2001		0021 0231 0061	Tensai	1621 0351 0531	Videoton
	1271 2381 0811	Stenway	2881 0471 0701		0061 2881 0081	Vidikon
	0021 0231 1111	Stern	0481 0351		0021 0181 0661	Vidtech
	0191 0431 0671		0231 0461 1191		1341 0651 0431	Viewpia
	2051 1951 0351	Stevison	0471 0891 0721		0311 0231 2001	ViewSonic
	2411 1351	Strato	2621 2501	Tenson	0531 0021	Viper
SEI	0191 0271 1611	Strong	0061 2881 0471	Tesla	0061	Visiolia
	2401 0231 0061		0021	Tevion	2661 2711 2271	Vision
	2881	Stylandia	1951 2041 2001		2321 0061 2421	0311
Sei-Sinudyne	0191 1611 2401	Sunic Line	0061 2881 2701		2881 2681 2501	Vistar
	0061 2881	Sunkai	0081		1151 1821 1271	Vizio
	2181		0541 0621 0751	Texet	1881 1891 1351	
Seitech	0231 0461 0671	Sunstar	0351 1011 0061		2001 2311	Vortec
Seleco	1191 0891 0641		2881 0811 1881		0661 0021	Voxson
	0051 0471 0581	Sunwatt	0641 0061 2881	Texla	1631	Waltham
	0721	Supersonic	0021 0471	Thomson	0061 0211 0441	
Sencora	0021		0061 2881 0021		0491 0531 2881	Wards
Sentra	0041 0351 0021		1611 2051 0081		0961 1061 2051	Warumaia
Serino	1011 0751 2051		0341 2881 1301	Thorn	2651 3651	Watson
	0171	SuperTech	0471 1701 0751		0041 0201 0301	
Shancha	0471 0701		0021 2051 0061		0061 0211 0121	
Shanghai	0021 0341 0371	Supra	2881 0351		0131 0361 0141	
	0471 2641 0701	Susumu	0281 0661 0021		2651 1621 0311	
Sharp	0051 0171 0301	Sutron	0351 0441 0491		1621 0311 2401	Watt Radio
	0331 0451 1611	SVA	0021		0251 0861 0791	Wega
	1181 1551 1951	Svasa	1701		0881 2881 0031	Wegavox
	2081 2371 0021	Swissline	0431	Thorn-Ferguson	0441 0051 0091	Wepai
	1161 0551 3611	Swisstec	3071 1931		0661 0111	Welttech
	3641 4001 4021	Sydney	2051 0081		1621 0201 2651	Weltblick
	4031 4011 4041	Sylvania	4021 4071 4681		0211 0301 0311	Weltstar
	4051		4511 4381 4361		0441 0861 0131	Weston
Shen Ying	0021		4691 4821 0591		0041	Wharfedale
Shencai	0021 0471 0701	Synco	1071 1431 2011	Tiane	0171	
Sheng Chai	0021		2141 2161 2561	Tiny	2091 2301	
Sheng Chia	0021 0171	Sysline	2571 2131 2631	Tiny Digital	1201	White Westinghouse
Shenyang	0021 0471 1521	Sytong	3581 3741	TMK	0271 0281	
	0021	T+A	0051 0101 0171	Tobishii	0351	Windsor
Sherwood	0021	Tacico	0281	Tobo	0021 0471 0701	Windstar
Shintoshii	0061 2881	Tai Yi	0061 2881	Tokai	0121 0061 2881	Windy Sam
Shivaki	0061 2881 0731	Taishan	2051		0561 1271 0231 0081	Wintel
	0661 0281	Tandberg	0741		0661 0021 2001	World-of-Vision
Show	0821 0201 0121		0281 0021	Tokaido	2001	
Siarem	0191 1611 0231		0021 0661	Tokyo	2051 0041 2641	Worldview
Siemens	0061 0291 0011	Tandy	0631 0891 0211	Tomashi	0481 0351	X-View
	0881 0551 0401	Targa	0561 0671 0311	Tongtong	0471 0701	Xenius
	0331 2881 0311	Tashiko	0231	Tongtel	1631 1281	Xiahua
Siera	0061 2881 1281		0351 0121 0171	Topline	2001 1271	
Siesta	1371	Tatung	0081 0231 0431	Toshiba	0011 0021 0041	Xianghai
Silva	0061 2881 2051		2991		0051 0061 0081	Xiangyang
	0311 1151		0051 1391 0081		0101 0111 0171	Xihu
Silva Schneider	2501		1161 0261 2051		0191 0211 0291	Xinaghai
Silver	0051 0061 0751		0231 1191		0471 0701 0871	Xingfui
	0311 2881 1341		2501 0021 0051		1041 1131 1161	Xinghai
	0231	TCM	0061 2881 0121		1301 1351 1361	Xingyu
SilverCrest	2001 0061 2881	Teac	1611 0101 0081		1441 1741 1781	Xinsida
Singer	0021 2431 0061		0031 1051 2581		1951 2021 2121	Xlogie
	2881 0191 0431		2511 2991 2421		2311 2341 2441	Xoro
	0721 0441 0231		2271 2071		2481 2501 2581	Xrypton
Sinotec	1581	TCL	1411 2721 0701		2601 2611 2801	Yamaha
Sinudyne	0191 0271 1611		1301	Towada	3671 3731	Yamishi
	0231 0311 2401		1351 2311 1821		0191 0081	
	0061 2881 2581	TEC	0021 1301 0061	Toyoda	0021 0641 0471	
	0061 0481 1931		0791 0471 0481	Trakton	0021 0471 0081	Yingge
	0281 2881 3071		2381 0701 2001	Trans Continens	1271 0081 2001	Yokan
Skymaster	0181	Tech Line	0821 2881 0751		0061 2881 1221	Yoko
Skysonic	1521		1331 1271 0081	TRANScontinents	1051 3011 3031	
Skyworth	0061 2881 0021		1651 1391 2411		1881 2881	
	0471 1301 1411		0281 0261 1351	Transonic	0061 1301 2881	Yonggu
	1521		2041 2491		1331 0751 1281	Yorx
Sliding	1881 1931 3011		0081 0431 0021		0791 0471 0821	Yousida
	3031 1681		0441 0561 0461		0021	Yuhang
SLX	1271		0061 2881 0311		2051	Zanussi
Smaragd	0811		0061 2881 0311	Transtec	0061 2881 0351	Zenith
Soemtron	1881 2321		0231 2891	Triad	1611 0081	Zenor
Sogera	0531		1351 2311	Trident	0471 0351 0301	Zhuhai
Solavox	0231 0311 0121		0061 2881 0861	Tristar	0271 1611 0581	Zonda
	0911 0061 2881		1951	Triumph	2881 0061	ZX
	0311 0911 1351		0021 0051 0171		0481	
Sonawa	0351		0281 0351 0471		0021	
Sonber	0191		1181		0061 2881 0761	
Sonba	0021		0081 1301 1031	Unic Line	0751	
Soniko	0061 2881		1651 0061 0821		1351 0061 1341	
Soniq	3191		0021 2431 0341	United	2881 2341 2581	
Sonitron	0341 1371 0571		1971 1281 2881		2001 1281 2621	
	0081		0021		1351 0061 2881	
			1661	Universal	0061 0581 0141	
			0101	Universum	0181 1621 0011	
			1901		0471 0761 1371	
			0211 2651 0491			

Handling Disposable Batteries

This product may contain disposable batteries. Heed the following warning and follow the Battery Safety and Battery Disposal instructions below.

Battery Safety

-Insert batteries correctly. There may be a risk of explosion if the batteries are incorrectly inserted.

- Do not attempt to recharge 'disposable' or 'non-reusable' batteries.

-Please follow instructions provided for charging 'rechargeable' batteries.

- Replace batteries with the same or equivalent type that we recommend.

-Do not expose batteries to excessive heat (such as sunlight or fire).

-Do not expose batteries to temperatures above 100° C (212° F).

Warning: There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.

Battery Disposal

The batteries may contain substances that could be harmful to the environment. Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations.



The batteries may contain perchlorate, a known hazardous substance, so special handling and disposal of this product might be necessary. For more information about perchlorate and best management practices for perchlorate-containing substances see www.dtsc.ca.gov/hazardouswaste/perchlorate

Disclaimer

Cisco Systems, Inc. assumes no responsibility for errors or omissions that may appear in this guide. We reserve the right to change this guide at any time without notice.

Cisco Systems, Inc.
cisco. 5030 Sugarloaf Parkway, P.O. Box 465447
 Lawrenceville, GA 30044
 Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks.
 Third party trademarks mentioned are the property of their respective owners.
 The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1009R)
 Product and service availability are subject to change without notice
 © 2012 Cisco and/or its affiliates. All rights reserved.
 September 2012

678- 277-1120
 800-722-2009
www.cisco.com
 Part Number 4042218 Rev D