


Getting to Know Your Remote

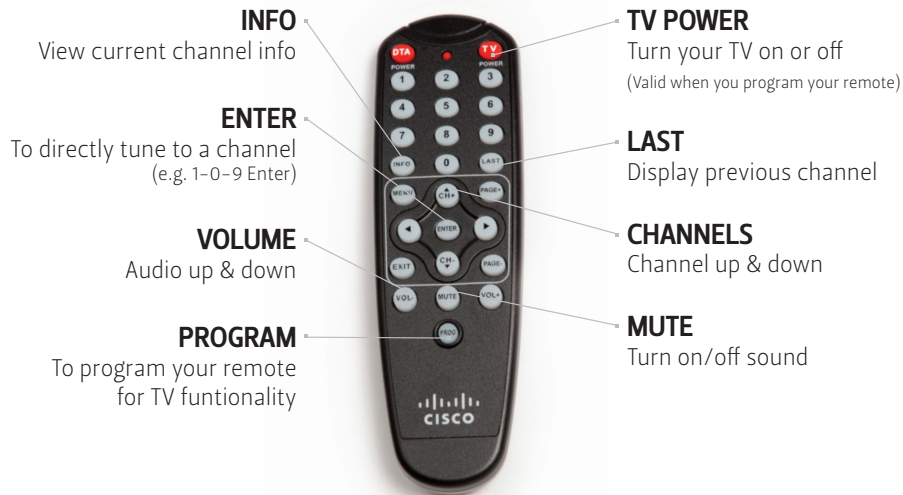

Programming Your Remote

Program your remote to sync with your TV model.

1. Get remote instructions manual from self-install kit. Find the brand name and 4-digit device code number of your TV.
For example, Panasonic TV: 0001, 0061, 0101, 0201, 0231.
2. Manually turn on the TV.
3. Confirm the batteries are correctly inserted in the remote.
4. Press and hold the “PROG” button. Then, while holding down “PROG”, press the “TV POWER” button. The LED light will turn red, indicating the remote is in program mode. Release both buttons.
5. Enter the 4-digit Device Code (for example: code 0001 under Panasonic TV). The red LED light turns off if the code has been accepted by the remote control.
6. If the LED light flashes twice, it means the code entered is incorrect, and the remote control remains in program mode. Re-enter the correct code number again. The remote will exit program mode if the code is not entered within 10 seconds.
7. Point the remote towards the TV and press the Power button. If the TV turns off, the remote is now programmed to operate the TV.
8. If the TV fails to turn off, go back to Step 1 and enter the next code listed under the TV brand.

Please refer to the remote instructions manual for more detailed instructions and the code list.