

How to Replace Battery for Smart Doorlock

Description

This page shows battery replacement for a Smart Doorlock



Instructional Video Link

This Video link illustrates how to replace the batteries inside your Smart Door Lock.

[TELUS | Replace the batteries in your Smart Door Lock](#)

Parts Required

- Four AA batteries
- A Phillips screwdriver

Instructions

1. Go to the inside of your door

2. Use the screwdriver to loosen the two screws located on the sides and one on the bottom of the lock
3. Remove the cover of the door lock
4. Slide the battery cartridge out from the top part of the door lock
5. Remove the old batteries from the battery cartridge
6. Put in the new batteries
7. Slide the battery cartridge back into the door lock
8. Reposition the cover and screw in all three screws back into place