


TELUS Optik TV

HD PVR Drive Installation Guide

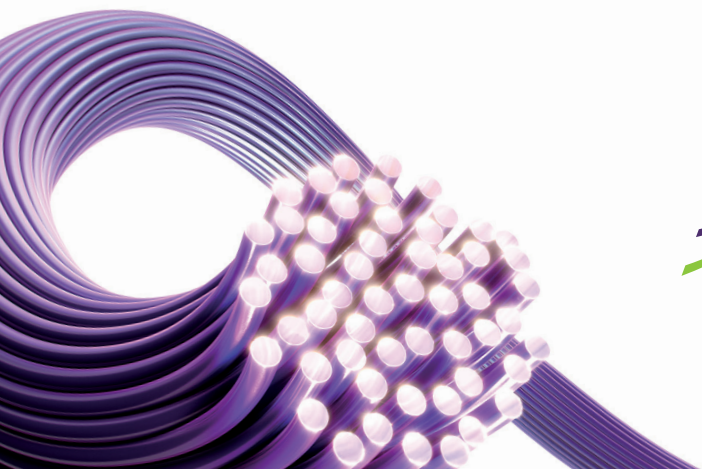

 **TELUS**[®]
the future is friendly

Before you get started

Important: These instructions will guide you through the setup of your Optik TV HD PVR Drive. You must have TELUS Internet installed in order to install the Optik TV. The PVR Drive will be connected to your TELUS Internet Modem, not your TV.

Before you get started Page 1
Step 1: Locate and identify the TELUS Internet Modem..... Page 2
Step 2: Connect your Optik TV HD PVR Drive to the Internet Modem..... Page 3

What you will find in your kit:




Installation Guide




Optik TV HD PVR Drive



Ethernet Cable

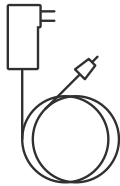

Power Adaptor Cable

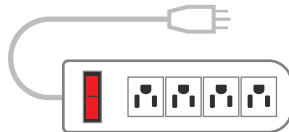

Power Bar

Additional support:

If you try the following instructions and need help with any part of your install, call TELUS Technical Support:

In Quebec, call **310-1212**

In BC and Alberta, call **1-888-811-2323**

Step 1: Locate and identify the TELUS Internet Modem

Locate your existing TELUS Internet Modem. The images below show the different types of TELUS Internet Modems. Ensure that your Modem is powered on and that you have an active TELUS Internet service.

 
1a



T3200M



TELUS Wi-Fi Hub




Other


1b

Look at the back side of your Internet **Modem** and confirm that you have at least one yellow **LAN port** available.

If all yellow LAN ports are in use, you will have to disconnect one of your existing devices from the **Modem**.

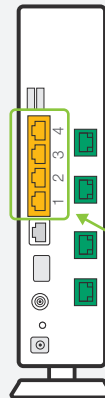

T3200M

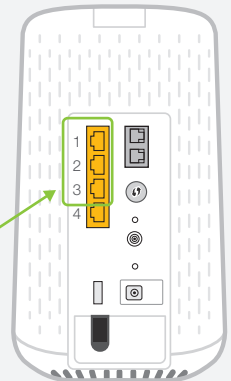


TELUS Wi-Fi Hub

Step 2: Connect your Optik TV HD PVR Drive to the Internet Modem

Find the **Ethernet cable** that was included in your Optik TV HD PVR Drive kit. Connect one end of the cable to the yellow **LAN port** on your **Modem**. Insert the second end of the cable to the **Network port** on your **PVR Drive**.


2a

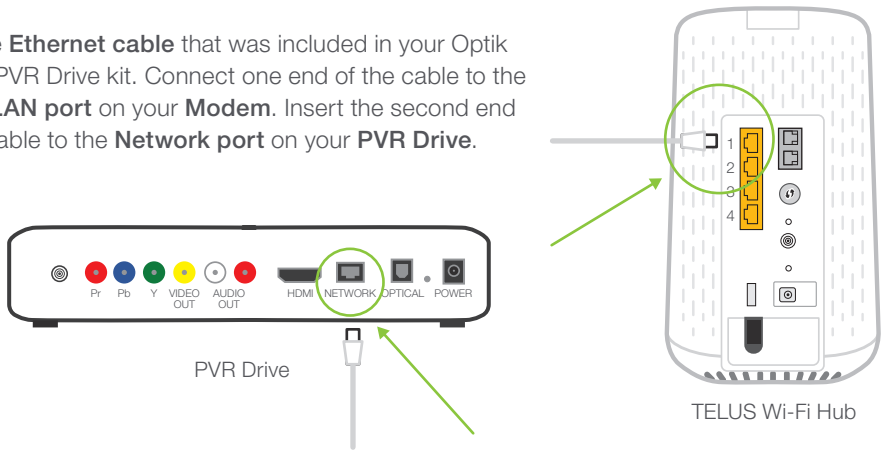

Position your Optik TV HD PVR Drive near your Internet Modem. Ideally, place both devices on a shelf or a table. Ensure that there are at least 2 inches of clearance from all sides of the PVR Drive and never stack any items on top of the PVR Drive.

2b

Connect the Optik TV HD PVR Drive with the power cable provided. The green light located at the front of the box will turn on, which indicates that the PVR Drive has started initializing.

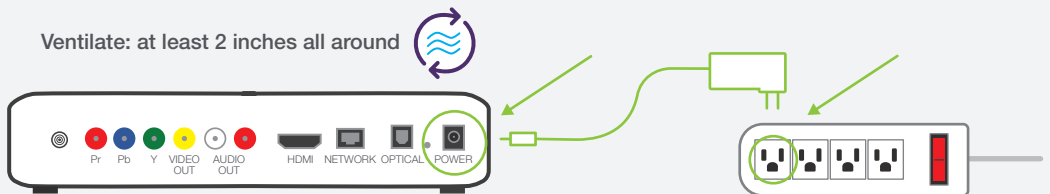

Allow 10-15 minutes for the initialization process to complete, before you can start enjoying the HD PVR Drive and managing recordings on your Optik TV.

2c



Note: Once the PVR Drive starts initializing you can proceed to install your Optik TV Wireless Digital Box(es) for each of your TV sets. Proceed to the installation instructions provided in the Optik TV Wireless Digital Box kit.