

How to Replace Battery for Smart Thermostat

Description

This page shows battery replacement for a Smart Thermostat



Instructional Video Link

This Video link illustrates how to replace the batteries inside your Smart Thermostat

[TELUS | Replace the batteries in your Smart Thermostat](#)

Parts Required

- Four AA batteries

Instructions

1. Gently remove the thermostat body from the wall by firmly pulling from the top center down and out
2. Remove old batteries
3. Position new batteries into the body of the thermostat

4. Gently reposition the thermostat body back onto the backplate, bottom first then press up