

## How to Replace Battery for Smart Garage Tilt Sensor

### Description

---

This page shows battery replacement for Smart Garage Tilt Sensor



Because there are many different versions of fobs, it is important to remove the sensor cover first to determine what kind of batteries are required for your equipment. We advise you to check before purchasing batteries.

### Instructional Video Link

---

This Video link illustrates how to replace the batteries inside your Door/Window Sensor.

[TELUS | Replace the batteries in your Smart Garage Door Opener Tilt Sensor](#)

### Parts Required

---

- One CR2032 lithium battery
- Small flathead screwdriver

### Instructions

---

1. To open the sensor place the screwdriver on the side edge
2. Gently press into the indent with the screwdriver, shimmy back and forth until the two sides separate
3. Remove the cover
4. Use the flathead screwdriver to remove the battery
5. Place the new battery in the battery slot
6. Close the sensor by aligning the two covers together and press until the sensor is closed