ecobee for Pro

A new level of comfort for your customers.

With SmartSensor placed in multiple rooms, your customers can set an average temperature for their home and experience better comfort throughout.





Smarter, automatic savings for customers.

ecobee SmartSensor signals the thermostat to start saving energy when your customers aren't home, keeping their energy bill in check. SmartSensor installs in seconds with no wires to start saving immediately.



Temperature and occupancy detection.

Help customers manage hot and cold spots by setting an average temperature, keeping the whole home comfortable while detecting occupancy, and allowing for room-specific comfort, when and where your customers want it.



Remote control for peace of mind.

Lets customers check the temperature in important rooms, like the nursery, using the app or their favorite voice assistant and adjust for comfort. SmartSensor wirelessly connects to all ecobee devices for a whole-home ecosystem.

Support Hours

Available 8am-11pm (Mon-Fri) and 9am-9pm (Sat-Sun). 1.866.518.6740 | support@ecobee.com | ecobee.com/contractors HVAC-RSHMPROSELLSHTEN-01

ecobee | SmartSensor





Be ready for your next service call.

Keeping ecobee SmartSensor handy means you are ready with the right solution when customers need you.

Bungalow-style home

Challenge: When the furnace is installed near the thermostat, the master bedroom is naturally cooler since hot air dissipates as it moves through the ducts across the home.

Solution: Add an ecobee Smart Thermostat with an extra set of SmartSensors to avoid moving the thermostat to a more central location.

Multi-level home

Challenge: The thermostat is mounted on the main floor, which typically makes the second floor warmer.

Solution: Add SmartSensor to hot and cold areas to give the thermostat multiple temperature reference points. This automatically balances the comfort level throughout the home.

Multi-unit/Duplex

Challenge: The building has a boiler in the basement and it's the primary source of heat throughout. It's difficult to pull a new thermostat wire and add multiple zones to control the temperature in each unit.

Solution: Install an ecobee Smart Thermostat near the boiler where it's easy to wire. Using ecobee's participation mode, add a wireless SmartSensor to each floor as a temperature input and disable the temperature sensor on the thermostat itself

Follow Me + temperature averaging

- Avoid extra labor and easily balance the comfort level throughout the home automatically.
- Program SmartSensor participation according to the homeowner's schedule.
- Follow Me detects what spaces are occupied in the home and prioritizes comfort in those rooms.

Compatibility

ecobee Smart Thermostat Premium ecobee Smart Thermostat Enhanced ecobee SmartThermostat with voice control ecobee3, 3 lite, and 4

Compatibility

Temperature Occupancy

What's in the box

2 SmartSensor 2 Detachable stands 2 Batteries Install guide Adhesive

2 Wall mounting brackets

Warranty

3 years

Range

50 ft*

Mounting

Detachable stand Wall mounting bracket

Powering Method

CR2477 battery

Battery Life

Up to 5 years

Connectivity

915MHz

Storage

Temperature: -31°F to 113°F (-35°C to 45°C)

Humidity: 5% to 95% RH

Product Dimensions

Length: 40 mm (1.58 in) With stand: 50 mm (1.58 in) Width: 40 mm (1.6 in) Depth: 26.4 mm (1.03 in)

Product SKU

US: EB-RSHM2PK-01 CAN: FB-RSHM2PKC-01

*Up to 50 feet away from your ecobee smart thermostat. Range varies according to outstanding factors including wireless connectivity and individual home structure and arrangement.