

# New Products

# Compact mechanical valve MSE series

## New product



# **Overview**

●A compact, lightweight, and space-saving 3-way pneumatic control valve that can be operated either manually, or by mechanical detection.

 
Port size Rc1/8


#### Specifications

Model no.	MSE-321	MSE-321R	MSE-321PP	MSE-321PB
Working fluid	Compressed air			
Valve structure	Poppet valve			
Actuation	Normally closed			
Working pressure	0 to 1.0MPa			
Proof pressure	1.5MPa			
Fluid temperature	-5 to 60°C			
Port size	Rc1/8			
Weight (g)	48	59	94	103
Effective sectional area mm <sup>2</sup>	2.5			
Operating force Note N	22	15	26	26
Button color	-	-	Black/red/green	Black/red/green
Mounting orientation	Free			

Note: Required force for operation at 0.5MPa pressure.

### Operational principle



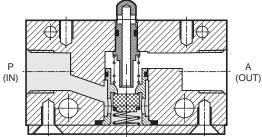


Note: Reverse-direction pressurizing (pressurizing from port "A") is not possible.




Before starting use, be sure to read the safety precautions. given on the rear face.

#### How to order

 


a Actuator type

Code	Description			
a Actuator type				
No code	Pin plunger type			
R	Roller lever type			
<b>PP-</b> *1	Push button valve type			
<b>PB-</b> *1	Mushroom valve type			
*1 Color-coded push-button type (PP) / mushroom button type (PB)				
В	Black			
R	Red			
G	Green			

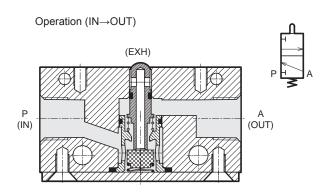


**CKD** Corporation

CC-1151A

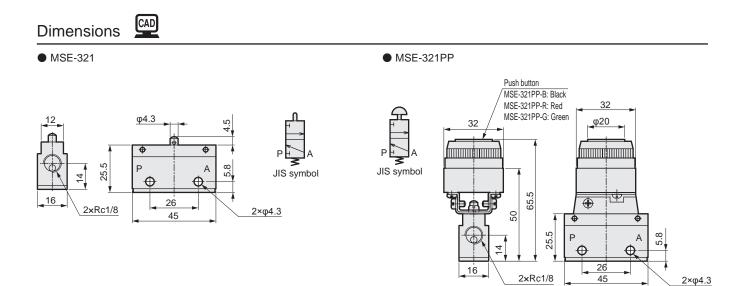

#### • MSE-321R

MSE-321PB

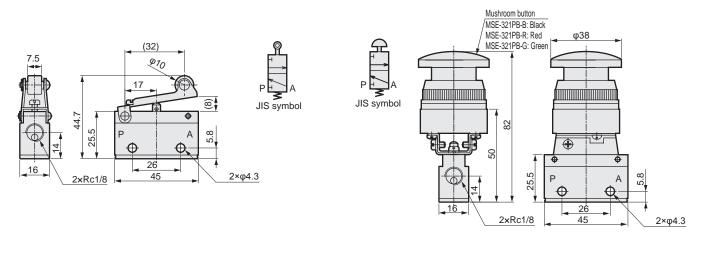

#### Safety precautions

#### A Precautions

#### Piping

- Be sure to remove all dust and foreign matter, etc., from inside the piping before installing. Failing to do so could cause leakage inside the valve, and/or operation malfunctions.
- Using an excessive amount of sealant when installing the valve in the piping could allow sealant to enter the valve, possibly causing it to malfunction.
- Operating
  - When supplying compressed air after installation is completed, be sure to check all the piping connections to ensure that no air is leaking.
     Do not use the mechanical valve unit as a mechanical stopper.
  - Operate in a manner which prevents an excessive force from being applied to the actuator.

Maintenance

Before performing maintenance, always stop the air supply and verify that no residual pressure remains in the circuit.

If the goods and their replicas, or the technology and software in this catalog are to be exported, laws require the exporter to make sure they will never be used for the development or the manufacture of weapons for mass destruction.

CKD	Corporation
	ebsite>
http://wv	vw.ckd.co.jp/

Head Office•Plant Sales And Marketing Div. Tokyo Branch Office Nagoya Branch Office Osaka Branch Office

 2-250, Ouji, Komaki, Aichi 485-8551
 TEI

 2-250, Ouji, Komaki, Aichi 485-8551
 TEI

 4F. Bunkahousou Media Plus, 1-31-1, Hamamatsu-cho,
 TEI

 Minato-ku, Tokyo 105-0013
 TEI

 2-250, Ouji, Komaki, Aichi 485-8551
 TEI

 1-3-20, Tosabori, Nishi-ku, Osaka 550-0001
 TEI

EL(0568)77-1111	FAX(0568)77-1123
EL(0568)74-1303	FAX(0568)77-3410
EL(03)5402-3620	FAX(03)5402-0120
EL(0568)74-1356	FAX(0568)77-3317
EL(06)6459-5770	FAX(06)6446-1945