



AirPrime BX310x

Product Technical Specification



SIERRA
WIRELESS®

41111444
Rev 17.0

Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless product are used in a normal manner with a well-constructed network, the Sierra Wireless product should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless product, or for failure of the Sierra Wireless product to transmit or receive such data.

Safety and Hazards

Do not operate the Sierra Wireless product in areas where blasting is in progress, where explosive atmospheres may be present, near medical equipment, near life support equipment, or any equipment which may be susceptible to any form of radio interference. In such areas, the Sierra Wireless product **MUST BE POWERED OFF**. The Sierra Wireless product can transmit signals that could interfere with this equipment.

Do not operate the Sierra Wireless product in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless product **MUST BE POWERED OFF**. When operating, the Sierra Wireless product can transmit signals that could interfere with various onboard systems.

Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless products may be used at this time.

The driver or operator of any vehicle should not operate the Sierra Wireless product while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

Limitation of Liability

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless. SIERRA WIRELESS AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS AND/OR ITS AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

Notwithstanding the foregoing, in no event shall Sierra Wireless and/or its affiliates aggregate liability arising under or in connection with the Sierra Wireless product, regardless of the number of events, occurrences, or claims giving rise to liability, be in excess of the price paid by the purchaser for the Sierra Wireless product.

Patents

This product may contain technology developed by or for Sierra Wireless Inc. This product is manufactured or sold by Sierra Wireless Inc. or its affiliates under one or more patents licensed from MMP Portfolio Licensing.

Copyright

© 2021 Sierra Wireless. All rights reserved.

Trademarks

Sierra Wireless[®], AirPrime[®], AirLink[®], AirVantage[®] and the Sierra Wireless logo are registered trademarks of Sierra Wireless.

Windows[®] and Windows Vista[®] are registered trademarks of Microsoft Corporation.

Other trademarks are the property of their respective owners.

Contact Information

Sales information and technical support, including warranty and returns	Web: sierrawireless.com/company/contact-us/ Global toll-free number: 1-877-687-7795 6:00 am to 5:00 pm PST
Corporate and product information	Web: sierrawireless.com

Revision History

Revision number	Release date	Changes
1	August 2017	Creation (limited release)
2	October 2017	General release
3	February 2018	Updated application schematic Updated VDD_PADS_BB voltage Updated current consumption measurement power supply to 3.3V Updated Table 2-1 AirPrime BX310x Capabilities—noted Bluetooth features not yet supported Updated Table 3-5 RF Current Consumption Specifications Updated Table 3-7 Generic Radio Characteristics Updated Table 3-8 Generic Radio Characteristics Updated Table 3-9 Absolute Maximum Ratings Updated Table 3-10 Recommended Operating Conditions Updated Mechanical drawings Updated Table 6-1 Pin Definitions—VDD_PADS_BB min voltage
4	February 2018	Updated Table 2-1 (moved Data Transfer entry from Bluetooth to Wi-Fi section) Corrected pin types in Table 6-1 Pin Definitions (11–13, 24–27)

Revision number	Release date	Changes
5	July 2018	<p>Added module weight</p> <p>Removed system clock outputs</p> <p>Updated schematics</p> <p>Updated mechanical drawings</p> <p>Updated Power Supply Ratings (voltage ranges)</p> <p>Added Analog Power Considerations section</p> <p>Updated Digital Power Considerations section</p> <p>Updated VGPIO Power Considerations section</p> <p>Updated Power Management description</p> <p>Updated Current Consumption section</p> <p>Updated Generic Radio section</p> <p>Updated Wi-Fi Radio section</p> <p>Updated Bluetooth Radio section</p> <p>Updated Antenna section</p> <p>Added Suggested Antennas section</p> <p>Updated UART section</p> <p>Added ADC/Voltage Measurement topic (replaced ADC topic and Voltage Measurement topic)</p> <p>Updated General Purpose Input/Output topic</p> <p>Updated SPI Bus topic</p> <p>Updated SDIO topic</p> <p>Updated Module Enable topic</p> <p>Added General Layout Recommendations chapter</p> <p>Added Firmware Upgrade chapter</p> <p>Removed United States and Canada Regulatory Information topics</p> <p>Updated Bluetooth Qualification Program topic</p> <p>Added References section</p>
6	July 2018	<p>Updated VDD_PADS_BB voltage range</p> <p>Updated Wi-Fi Radio Generic Radio Characteristics table values</p> <p>Updated Bluetooth Radio Generic Radio Characteristics table values</p>
7	December 2018	<p>Updated section 1.2.1 Wi-Fi—Transmit Power bullet</p> <p>Updated section 1.2.2—added A2DP, AVRCP, Transmit Power values</p> <p>Updated table 2-1 Wi-Fi—added 802.11 PS, updated Bluetooth content, removed Power Management Hibernation, SPP, A2DP, AVRCP, and WPA2 Enterprise</p> <p>Updated table 3-3—removed ‘future release’ footnote, removed Hibernation</p> <p>Updated table 3-4—RF Current Consumption</p> <p>Updated table 3-5—Added antenna gain note</p> <p>Updated table 3-6—Wi-Fi Generic Radio Characteristics</p> <p>Updated table 3-7—Bluetooth Generic Radio Characteristics</p> <p>Updated mechanical drawings</p> <p>Updated table 4-8—Added GPIO(27), GPIO(17)</p>
8	April 2019	Added section 7.1
9	May 2019	Updated Regulatory Compliance and Industry Certification chapter—replaced Additional Certifications section with Brazil, Japan, and Republic of Korea sections.

Revision number	Release date	Changes
10	August 2019	<p>Updated section 2.1 Architecture—replaced BX310x schematic with BX3100 and BX3105 schematics</p> <p>Updated section 3.2.5 Current Consumption—Updated RF Current Consumption for BX3100 (fixed 'Mode' description for BLE Data Mode), added RF Current Consumption for BX3105</p> <p>Updated section 4.6 General Purpose Input/Output (GPIO)—Added BX3105 table</p> <p>Updated section 4.7 Bootstrap Pins—Added BX3105 tables</p> <p>Updated section 4.8 SPI Bus—Removed Master mode details</p> <p>Removed SDIO interface details</p> <p>Updated section 8.2 Pin Description—Added BX3105 table</p>
11	October 2019	Updated pin 40 function description
12	November 2019	Changed Pin #G1–G16 to 55–70
13	November 2019	Changed Pin #57 to Pin#54
14	April 2020	<p>Modified CTS/RTS sections</p> <p>Updated user guide template</p>
14.1	April 2020	Minor edits
15	July 2020	Add Bluetooth connection indicator (only supported in FW version 2.7.3 and the latest version)
16	March 2021	Minor edits
17	June 2021	Table 3-4 and Table 3-5 current consumption values update

>> Contents

Introduction	9
Module Variants	9
General RF/Software Features	9
Wi-Fi	9
Bluetooth	10
Interfaces	10
Configuration Utility	10
General Hardware Features	11
Physical Dimensions and Connection Interface	11
Functional Specifications	12
Architecture	12
Features	15
Technical Specifications	18
Environmental	18
Power Supply Ratings	18
Analog Power Considerations	18
Digital Power Considerations	19
VGPIO Power Considerations	19
Power Management	20
Current Consumption	20
RF	23
Generic Radio	23
Wi-Fi Radio	23
Bluetooth Radio	24
Electrical Specifications	25
Absolute Maximum Ratings	25
Mechanical	26
Mechanical Drawings	26
Antenna	28
Suggested Antennas	31

Interfaces Specifications	32
Overview	32
UART	32
ADC/Voltage Measurement	33
I2C Interface	34
Application	35
I2S Interface (Digital Audio)	35
General Purpose Input / Output (GPIO)	36
Bootstrap Pins	40
SPI Bus	41
Module Enable	42
PWM	42
Firmware Upgrade	43
General Layout Recommendations	45
Regulatory Compliance and Industry Certification	46
United States	46
Canada	47
Brazil	48
Japan	48
Republic of Korea	49
Bluetooth Qualification Program (BQP)	49
Labeling	49
Pinout	50
Pin Configuration	51
Pin Description	52
References	60
Web Site Support	60

Reference Documents	60
Appendix - Abbreviations	61

>> 1: Introduction

This document defines and illustrates the AirPrime BX310x Wi-Fi/BT Host-less module's high-level product features, interfaces, and hardware features (including electrical and mechanical performance criteria).

Module Variants

AirPrime BX310x module variants include:

- BX3100 — External antenna required
- BX3105 — Embedded antenna

Note:

- *BX3100 and BX3105 are available in two SKUs (with and without Ethernet support).*
- *Throughout this document, "BX310x" refers to all module variants.*

General RF/Software Features

The AirPrime BX310x is a low-power, small form-factor self-contained Wi-Fi/Bluetooth® (Wi-Fi/BT) module.

With an embedded software suite, the BX310x is an ideal solution for developers who want to quickly and cost-effectively integrate Wi-Fi/BT functionality into their products.

The following table summarizes the module's supported wireless frequencies and modes:

Table 1-1: Supported RF Frequencies

Technology	RF band	Notes
Wi-Fi	2.4GHz (2.400–2.485 GHz)	<ul style="list-style-type: none"> • 802.11b/g/n/e/i • Max data rate— MCS7 HT40 150 Mbps
Bluetooth		<ul style="list-style-type: none"> • v4.2 BR/EDR and BLE compliant

Wi-Fi

The AirPrime BX310x supports 2.4 GHz Wi-Fi operation. Key features include:

- TCP/IP
- 802.11 b/g/n/e/i
- Connection methods — BSS STA, SoftAP
- Transmit power — Up to 20 dBm (maximum)

For a list of additional supported Wi-Fi functionality, protocols, and features, see [Features](#) on page 15.

Bluetooth

The AirPrime BX310x supports 2.4 GHz Bluetooth classic and BLE operation.

Key features include:

- Bluetooth v4.2 BR/EDR and BLE compliant
- Transmit Power — +7 dBm nominal (BR/LE)
- Transmit Power — +5 dBm nominal (EDR)

For a list of additional supported Bluetooth functionality, protocols, and features, see [Features](#) on page 15.

Interfaces

The AirPrime BX310x provides the following interfaces and peripheral connectivity:

- Power supply — See [Power Supply Ratings](#) on page 18.
- RF — See [RF](#) on page 23.
- UART serial link — See [UART](#) on page 32.
- ADC/Voltage measurement — See [ADC/Voltage Measurement](#) on page 33.
- I2C — See [I2C Interface](#) on page 34.
- Digital audio (I2S) — See [I2S Interface \(Digital Audio\)](#) on page 35.
- GPIOs — See [General Purpose Input / Output \(GPIO\)](#) on page 36.
- SPI bus — See [SPI Bus](#) on page 41.
- Module enable — See [Module Enable](#) on page 42.
- PWM — See [PWM](#) on page 42.

Configuration Utility

The AirPrime BX310x includes a browser-based utility for device configuration. For usage details, refer to [1] AirPrime BX310x AT Command Reference available at source.sierrawireless.com.

General Hardware Features

Physical Dimensions and Connection Interface

AirPrime BX310x modules are compact, robust, fully shielded and laser-marked modules with the dimensions noted in [Table 1-2](#).

Table 1-2: AirPrime BX310x Dimensions (Nominal)

Parameter	BX3100 ^a	BX3105	Tolerance	Units
Length	11.5	13.5	±0.10	mm
Width	9.5	11.5	±0.10	mm
Thickness	2.4	2.4	±0.20	mm
Weight	0.56	0.65	±0.10	g

a. BX3100 is a CF3 xSmall module, which belongs to the Common Flexible Form Factor (CF3) family of WWAN modules.

The AirPrime BX310x module is an LGA form factor device. All electrical and mechanical connections are made through the 70 Land Grid Array (LGA) pads on the bottom side of the PCB. (See [Figure 8-1](#) for details.) The LGA pads have the following distribution:

Table 1-3: LGA Pad Types

Pad Type/Quantity		Dimensions	Pitch
Signal Pads	54 outer pads	0.75x0.35 mm	0.65 mm
Ground Pads	16 inner pads	1.0x1.0 mm	1.83 mm/1.48 mm

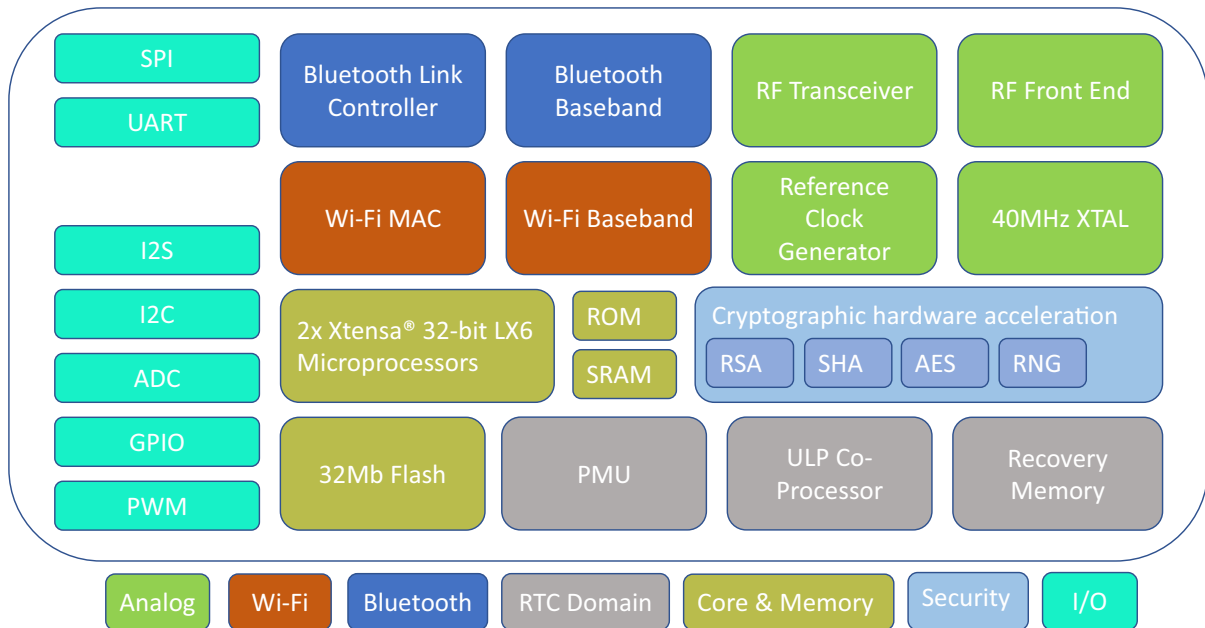


Figure 2-3: Block diagram

Features

Table 2-1 summarizes the AirPrime BX310x module’s RF (Wi-Fi and Bluetooth), Power, software, and hardware capabilities.

Note: The following table’s contents are preliminary and subject to change.

Table 2-1: AirPrime BX310x Capabilities

Feature	Description
Module	<ul style="list-style-type: none"> • Secure boot • Secure update • FOTA (Firmware update Over The Air) • Sierra Wireless AirVantage support • CF3-compliant footprint (BX3100)
Wi-Fi	<ul style="list-style-type: none"> • Protocols: <ul style="list-style-type: none"> • 802.11 b/g/n/e/i • 802.11 n (2.4 GHz), up to 150 Mbps; MCS0-7 in 20/40 MHz bandwidths • 802.11 Power Saving (PS) • Receiving STBC (Space-time Block Code) 2x1 • 802.11 e: QoS for wireless multimedia technology • Additional 802.11i security features (pre-authentication, TSN, etc.) • WMM-PS, UAPSD • A-MPDU, A-MSDU aggregation • Block ACK (RTS/CTS/ACK/BA) • Fragmentation/defragmentation • CCMP (CBC-MAC, counter model), TKIP (MIC, RC4), WAPI (SMS4), WEP (RC4), CRC • Frame encapsulation (802.11h/RFC 1042) • Pre-authentication, TSN • Supported channels—1–14 • Data transfer (HTTP, HTTPS, MQTT, TCP/UDP) • Autoconnection—After device reset, automatically connects to available AP based on previous configuration • Infrastructure BSS Station mode/SoftAP mode: AP mode, STA mode, concurrent AP/STA mode • Up to 8^a simultaneous Wi-Fi clients • IP configuration—IP address in STA mode via DHCP or static assignment • Authentication (security) modes: WPA, WPA2, WPA/WPA2 • UMA-compliant and certified • Open interface for various upper layer authentication schemes over EAP (e.g. TLS, PEAP, LEAP, SIM, AKA, customer-specific) • Adaptive rate fall-back algorithm • Automatic retransmission/response on slow hosts

Table 2-1: AirPrime BX310x Capabilities (Continued)

Feature	Description
Bluetooth	<ul style="list-style-type: none"> • Bluetooth v4.2 BR/EDR and BLE compliant • Supported channels: BT Classic—0–78; BLE—0–39 • Supported v4.2 modes: BR (Basic Rate); EDR (Enhanced Data Rate); LE (Low Energy) • BT classic mandatory features • BT low-energy mandatory features • Bluetooth Supported Profiles: <ul style="list-style-type: none"> • A2DP Sink • ATT/GATT • AVRCP • BLE Beacon^b • GAP (General Access Profile) • Legacy Pairing • RFCOMM • SDP (Service Discovery Protocol)^b • SMP (Service Manage Protocol) • SPP • Class 1/Class 2/Class 3 transmitter without external power amplifier • Class 1 operation without external PA • Enhanced power control (>30 dB dynamic control range) • +7 dBm transmitting power • NZIF receiver with -91 dBm sensitivity (LE) • Modulation—p/4 DQPSK, 8 DPSK • ACL, SCO, eSCO • Adaptive Frequency Hopping (AFH) • BT 4.2 controller and host stack • Bluetooth Low Energy (BLE) • Profiles: Wi-Fi • Autoconnection—After device reset, automatically connects to available AP based on previous configuration. • UART features: GATT profiles, Define personal services • Roles—Simultaneous Central (access point)/Peripheral (client) • Simultaneous connections: <ul style="list-style-type: none"> • Up to 7^a(total) simultaneous connections, including up to 3^a BLE connections • Simultaneous BT Classic and BLE connections • PCM^b/I2S • Bluetooth LED indication function (only supported in FW version 2.7.3 and the latest version): <ul style="list-style-type: none"> • Classic/LE — LED pattern repeating • Standby — LED on • Advertising — LED flash blinks quickly • Connection — LED flashed once for approximately 2.4 seconds

Table 2-1: AirPrime BX310x Capabilities (Continued)

Feature	Description
Configuration	Device configuration methods: <ul style="list-style-type: none"> • Built-in web-based configuration utility. See Configuration Utility. • AT commands available over UART, Wi-Fi, and BT links. Refer to [1] AirPrime BX310x AT Command Reference at source.sierrawireless.com.
Security	<ul style="list-style-type: none"> • All standard IEEE802.11 security features, including WFA, WPA/WPA2, WAPI • Secure boot • Flash encryption • Cryptographic hardware acceleration: AES, HASH (SHA-2) library, RSA, ECC, Random Number Generator (RNG)
Power management	Multiple power modes to reduce power consumption: Active, Radio off, Light sleep, Deep sleep Sleep Patterns: Association sleep pattern, ULP sensor-monitored pattern ^b

- a. Subject to firmware support and RAM limitations.
- b. Support pending firmware upgrade.

>> 3: Technical Specifications

Environmental

The environmental specifications for operation and storage of the AirPrime BX310x are defined in Table 3-1.

Table 3-1: Environmental Specifications

Parameter	Range
Ambient Operating Temperature	-40°C to +85°C
Ambient Storage Temperature	-40°C to +105°C (Recommended)

Power Supply Ratings

DC power is supplied via the pins described in the table below.

Note: Operation above the maximum specified operating voltage (see [Table 3-10](#) on page 25) is not recommended, and specified typical performance or functional operation of the device is neither implied nor guaranteed.

Table 3-2: Power Supply Pins

Pin	Name	Voltage	Direction	Function
33	VGPI0	3.3V	Output	Supply voltage reference for pins 53/54: <ul style="list-style-type: none"> Secondary I2C interface—Non-Ethernet SKUs Ethernet MAC interface—Ethernet SKUs
50	VDD_3V3_RF	2.3–3.6V	Input	RF/Analog signal power supply
51	VDD_3V3_PA	2.3–3.6V	Input	Internal Power Amplifier power supply
52	VDD_PADS_BB	2.7–3.6V	Input	Baseband/Digital I/O power supply

Analog Power Considerations

Pin 51 (VDD_3V3_PA) supplies the power amplifiers, and pin 50 (VDD_3V3_RF) supplies the remaining analog domains. During radio operation, a transient increase in current supplied via pin 50 could cause power rail collapse if not appropriately decoupled with a reservoir capacitor. Therefore, as shown in [Figure 3-1](#), external 10 μ F and 22 μ F decoupling capacitors are required to be connected close to pin 50. If the module is powered with a single 3.3V supply derived from an LDO or SMPS, ensure that the regulator's peak current handling is at least 500 mA (600 mA preferred).

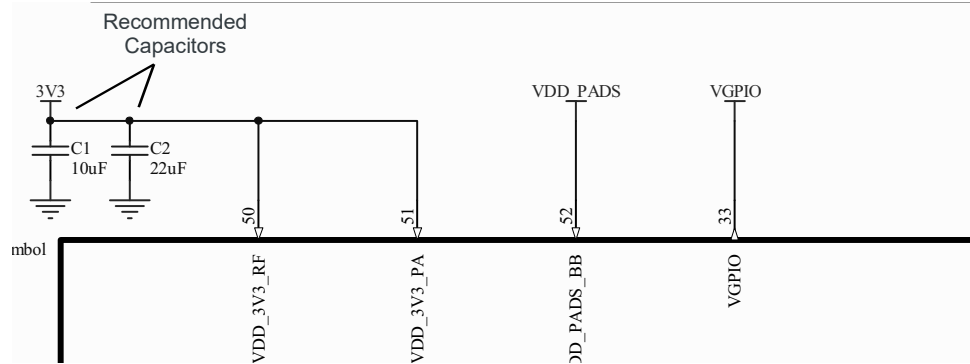


Figure 3-1: VDD_3V3_RF Capacitor Requirement

To avoid resistive losses affecting the power rail stability and level, ensure sufficient tracking width from the regulator output to the decoupling capacitors — a track width of 0.3 mm is recommended:

- Acceptable peak-to-peak voltage ripple on the analog voltage pins (50, 51) is 80 mV maximum.
- Typically, the analog and digital pins (50, 51, 52) are supplied by the same source. If this is the case (two or three pins with same source), connect the output of the external LDO or SMPS to those pins via both decoupling capacitors to form a star point for the supply inputs.

Digital Power Considerations

Pin 52 (VDD_PADS_BB) supplies the baseband digital parts of the design, including the CPU domains and the RTC domains. There are no specific requirements for decoupling of this pin.

As noted in [Analog Power Considerations](#), the analog and digital pins (50, 51, 52) typically are supplied by the same source. If this is the case (two or three pins with same source), connect the output of the external LDO or SMPS to those pins via both decoupling capacitors to form a star point for the supply inputs.

Pin 52 also connects to an internal LDO to generate the VGPIO voltage on pin 33.

VGPIO Power Considerations

VGPIO provides the voltage reference for the GPIO pins and, if required, is available to supply 3.3V to external circuitry.

VGPIO is generated internally from the VDD_PADS_BB input pin via a configurable LDO that provides either 1.8V or VDD_PADS_BB as its output.

No external pull-down is required.

Important: A limitation on the module's internal Flash voltage range requires VGPIO to be set at 3.3V. If the voltage is switched to 1.8V, the module will not boot. Therefore do not include any external pull-up on pin 43 (Non-Ethernet SKUs—MISO/GPIO(12); Ethernet SKUs—EMAC_RXD0/GPIO(25)), which if pulled high at boot time will cause VGPIO to switch to 1.8V.

Power Management

The AirPrime BX310x switches between several power modes to minimize current consumption.

Light Sleep and Deep Sleep modes are enabled via AT commands from the host. Refer to [1] AirPrime BX310x AT Command Reference for details.

[Table 3-3](#) describes the AirPrime BX310x’s supported power modes.

Table 3-3: Power Modes — Descriptions

Power Mode	CPU	Wi-Fi/BT radio / baseband	RTC	ULP co-processor	Notes
Active	On	On	On	On	Fully functional
Radio off	On	Off	On	On	
Light sleep	Pause	Off	On	On	Wake up events will wake the module.
Deep sleep	Off	Off	On	On/Off	Connection data stored in RTC memory

Current Consumption

The following current consumption values are taken using a single 3.3 V supply input and measuring the current drawn in the various operational modes. RF power is referenced to the Antenna port into a 50 Ω load. The values provided are average current taken at 25°C ambient temperature.

All Wi-Fi transmitter measurements are based on 50% duty cycle and continuous transmit mode. All Bluetooth transmitter measurements are based on 11% (DH1) duty cycle.

Table 3-4: Module Total Current Consumption Specifications in Different RF Conditions — BX3100 / BX3105 (Non-Ethernet SKUs)

Mode	Typ	Unit
50% Duty Cycle Transmit 802.11b, DSSS 1 Mbps, POUT=+18.0 dBm	192	mA
50% Duty Cycle Transmit 802.11b, CCK 11 Mbps, POUT=+18.0 dBm	194	mA
50% Duty Cycle Transmit 802.11g, OFDM 54 Mbps, POUT = +14 dBm	155	mA
50% Duty Cycle Transmit 802.11n, MCS7 HT20, POUT=+11.5 dBm	152	mA
50% Duty Cycle Transmit 802.11n, MCS7 HT40, POUT=+11.5 dBm	152	mA
Receive 802.11b, packet length=1024 bytes, -80 dBm	57	mA
Receive 802.11g, packet length=1024 bytes, -70 dBm	57	mA
Receive 802.11n HT20, packet length=1024 bytes, -65 dBm	57	mA
Receive 802.11n HT40, packet length=1024 bytes, -65 dBm	57	mA

Table 3-4: Module Total Current Consumption Specifications in Different RF Conditions — BX3100 / BX3105 (Non-Ethernet SKUs)

Mode	Typ	Unit
11% Duty Cycle, DH1 Transmit Bluetooth 1 Mbps, 0 dBm	64	mA
11% Duty Cycle, 2DH1 Continuous Transmit Bluetooth 2 Mbps, 0 dBm	64	mA
11% Duty Cycle, 3DH1 Continuous Transmit Bluetooth 3 Mbps, 0 dBm	64	mA
11% Duty Cycle Continuous Transmit Bluetooth 1 Mbps, 10 dBm	69.6	mA
11% Duty Cycle Continuous Transmit Bluetooth 2 Mbps, 4.0 dBm	67.4	mA
11% Duty Cycle Continuous Transmit Bluetooth 3 Mbps, 4.0 dBm	67.4	mA
84% Duty Cycle Transmit LE 1 Mbps, 10 dBm	137	mA
84% Duty Cycle Transmit LE 1 Mbps, 4.0 dBm	114	mA
84% Duty Cycle Transmit LE 1 Mbps, 0 dBm	95	mA
Continuous Bluetooth Receive	58	mA
Modem Sleep (Subsystems off)	22.15	mA
Light Sleep, RTC GPIO Wake	1.08	mA
Deep Sleep, RTC GPIO Wake	10	μA
Light Sleep, RTC Timer Wake	0.725	mA
Deep Sleep, RTC Timer Wake	10	μA
BT Subsystem on	93.5	mA
BLE Active Scanning, Scan Interval=50 ms, Scan Window=30 ms	68.2	mA
BLE Active Scanning, Scan Interval=1 s, Scan Window=30 ms	24.5	mA
BLE Advertising, Default Settings +SRBLEADVPARMS: 32,96,0	29.4	mA
BLE Advertising, 1 s interval	24.2	mA
BLE Data Mode, +SRBLECONNPARAMS_IND: 1,16,39,0,2000	27.1	mA
BLE Data Mode, +SRBLECONNPARAMS_IND: 1,1,3200,0,2000	24.5	mA
Wi-Fi Subsystem on	95.0	mA
Wi-Fi Scanning	95.5	mA
Wi-Fi Power Saving (STA Mode) DTIM1	28.3	mA
Wi-Fi Power Saving (STA Mode) DTIM3	25.7	mA
Wi-Fi Power Saving (STA Mode) DTIM10	23.7	mA
Wi-Fi AP Beacon, 100 ms Beacon interval	98.1	mA
Wi-Fi AP Beacon, 1 s Beacon interval	93.5	mA
Subsystems off (From Boot, subsystems turned off)	22.15	mA

Table 3-5: Module Total Current Consumption Specifications in Different RF Conditions — BX3100 / BX3105 (Ethernet SKUs)

Mode	Min	Typ	Max	Unit
50% Duty Cycle Transmit 802.11b, DSSS 1 Mbps, POUT=+18.5 dBm	274.0	274.4	274.9	mA
50% Duty Cycle Transmit 802.11b, CCK 11 Mbps, POUT=+18.5 dBm	276.8	277.0	277.3	mA
50% Duty Cycle Transmit 802.11g, OFDM 54 Mbps, POUT = +14 dBm	226.1	226.2	266.5	mA
50% Duty Cycle Transmit 802.11n, MCS7 HT20, POUT=0 dBm	196.2	196.3	196.4	mA
50% Duty Cycle Transmit 802.11n, MCS7 HT40, POUT=0 dBm	200.4	200.5	200.6	mA
Receive 802.11b, packet length=1024 bytes, Data rate 1M, 0 dBm	111.7	112.7	115.5	mA
Receive 802.11g, packet length=1024 bytes, Data rate 6M, 0 dBm	113.6	113.7	113.8	mA
Receive 802.11n MCS0 HT20, packet length=1024 bytes, 0 dBm	113.5	113.7	114.4	mA
Receive 802.11n MCS0 HT40, packet length=1024 bytes, 0 dBm	119.3	120.0	121.6	mA
11% Duty Cycle, DH1 Transmit Bluetooth 1 Mbps, 0 dBm	112.7	112.8	113.0	mA
11% Duty Cycle, 2DH1 Continuous Transmit Bluetooth 2 Mbps, 0 dBm	112.9	113.0	113.1	mA
11% Duty Cycle, 3DH1 Continuous Transmit Bluetooth 3 Mbps, 0 dBm	112.8	113.0	113.2	mA
84% Duty Cycle Transmit LE 1 Mbps, 10 dBm	196.1	196.8	197.4	mA
84% Duty Cycle Transmit LE 1 Mbps, 4.0 dBm	157.8	158.0	158.3	mA
84% Duty Cycle Transmit LE 1 Mbps, 0 dBm	170.8	171.1	171.4	mA
Continuous Bluetooth Receive DH1, prbs9, 1Mbps	109.2	109.6	110.1	mA
Modem Sleep (Subsystems off)	23.79	23.81	23.83	mA
Light Sleep, RTC Timer Wake, Sleep 60 sec	0.781	0.791	0.815	mA
Deep Sleep, RTC Timer Wake, Sleep 60 sec	3.97	4.11	6.65	μA
BT Subsystem on BLE	95.7	96.0	96.5	mA
BT Subsystem on BT	96.3	96.5	96.6	mA
BT Subsystem on BLE+BT	96.5	96.6	96.8	mA
BLE Active Scanning, Scan Interval=50 ms, Scan Window=30 ms	66.5	70.4	73.0	mA
BLE Active Scanning, Scan Interval=1 s, Scan Window=30 ms	25.4	27.8	32.8	mA
BLE Advertising, Default Settings +SRBLEADVPARMS: 32,96,0	25.5	30.9	36.3	mA
BLE Advertising, 1 s interval	25.4	25.8	27.8	mA
BLE Data Mode, +SRBLECONNPARAMS_IND: 1,16,39,0,2000	27.0	27.6	28.4	mA
BLE Data Mode, +SRBLECONNPARAMS_IND: 1,6,3200,0,2000	25.3	25.5	26.8	mA
Wi-Fi Subsystem on STA	98.7	98.8	99.6	mA
Wi-Fi Subsystem on AP	98.7	103.5	111.2	mA

Table 3-5: Module Total Current Consumption Specifications in Different RF Conditions — BX3100 / BX3105 (Ethernet SKUs) (Continued)

Mode	Min	Typ	Max	Unit
Wi-Fi Subsystem on STA+AP	98.6	104.5	115.6	mA
Wi-Fi Scanning	98.4	99.0	100.3	mA
Wi-Fi Power Saving (STA Mode) DTIM1	25.3	30.3	46.4	mA
Wi-Fi Power Saving (STA Mode) DTIM3	24.6	26.8	54.5	mA
Wi-Fi Power Saving (STA Mode) DTIM10	24.6	25.5	45.0	mA
Wi-Fi AP Beacon, 100 ms Beacon interval	97.3	103.7	120.9	mA
Wi-Fi AP Beacon, 1 s Beacon interval	96.1	99.3	116.4	mA

RF

Generic Radio

Measurements conducted at 25°C ambient temperature.

Table 3-6: Generic Radio Characteristics

Description	Min	Typ	Max	Unit
BX3100 RF Port Impedance		50		Ω
Frequency Band	2.4	2.45	2.485	GHz
BX3105 Antenna Gain ^a			-1.65	dBi

a. Antenna gain is dependent on the size of the available ground plane provided by the application board. Nominal Antenna gain measured on BX310x Dev Kit Board.

Wi-Fi Radio

Measurements conducted at 25°C ambient temperature.

Table 3-7: Wi-Fi Radio Characteristics

Description	Typ	Unit
Transmit 802.11b, CCK 11 Mbps, Output Power, EVM and Mask Compliant	17.5 ± 2	dBm
Transmit 802.11g, OFDM 54 Mbps, Output Power, EVM and Mask Compliant	12.5 ± 2	dBm
Transmit 802.11n, MCS7 HT20 72.2 Mbps, Output Power, EVM and Mask Compliant	11.5 ± 2	dBm
Transmit 802.11n, MCS7 HT40 135 Mbps, Output Power, EVM and Mask Compliant	11.5 ± 2	dBm

Table 3-7: Wi-Fi Radio Characteristics (Continued)

Description	Typ	Unit
Receiver Sensitivity 11b DSSS, 1 Mbps	-96 ± 3	dBm
Receiver Sensitivity 11b CCK, 11 Mbps	-87 ± 3	dBm
Receiver Sensitivity 11g OFDM, 9 Mbps	-90 ± 3	dBm
Receiver Sensitivity 11g OFDM, 54 Mbps	-74.5 ± 3	dBm
Receiver Sensitivity 11n HT20 OFDM, 72.2 Mbps	-71 ± 3	dBm
Receiver Sensitivity 11n HT40 OFDM, 135 Mbps	-70 ± 3	dBm
BX3100 Harmonics 2F0	-47	dBm
BX3100 Harmonics 3F0	-57	dBm

Bluetooth Radio

Measurements conducted at 25°C ambient temperature.

Table 3-8: Bluetooth Radio Characteristics

Description	Min	Typ	Unit
Transmit Power BR 1 Mbps, ACR & Modulation Compliant	-	4 ± 2 ^a	dBm
Transmit Power BR 2 Mbps, ACR & Modulation Compliant	-	4 ± 2	dBm
Transmit Power BR 3 Mbps, ACR & Modulation Compliant	-	4 ± 2	dBm
Transmit Power LE 1 Mbps, ACR & Modulation Compliant	-	0 ± 2 ^b	dBm
Receiver Sensitivity BR 1 Mbps	-	-87 ± 3	dBm
Receiver Sensitivity EDR 2 Mbps	-	-88 ± 3	dBm
Receiver Sensitivity EDR 3 Mbps	-	-81 ± 3	dBm
Receiver Sensitivity LE 1 Mbps	-	-90 ± 3	dBm
Out-of-band blocking performance 30 MHz~2000 MHz	-10	-	dBm
Out-of-band blocking performance 2000 MHz~2400 MHz	-27	-	dBm
Out-of-band blocking performance 2500 MHz~3000 MHz	-27	-	dBm
Out-of-band blocking performance 3000 MHz~12.5 GHz	-10	-	dBm

- a. For FCC Band edge compliance on channel 78
- b. 0 dBm default. May be increased to 4 dBm (max) for FCC Band edge compliance on channel 39. Future firmware upgrade to support increase to 10 dBm.

Electrical Specifications

Absolute Maximum Ratings

Table 3-9: Absolute Maximum Ratings

Parameter		Min	Max	Units
V _{IL}	Input low voltage	-0.3	0.25×V _{IO}	V
V _{IH}	Input high voltage	0.75×V _{IO}	3.6	V
I _{IL}	Input leakage current	-	50	nA
V _{OL}	Output low voltage	-	0.1×V _{IO}	V
V _{OH}	Output high voltage	0.8×V _{IO}	-	V
C _{pad}	Input pin capacitance	-	2	pF
V _{IO}	VDD_PADS_BB	2.7	3.6	V
I _{MAX}	GPIO maximum drive capability	-	12	mA
T _{STR}	Storage temperature range	-40	150	°C

Table 3-10: Recommended Operating Conditions

Parameter		Min	Typ	Max	Units
V _{DD}	Supply voltage (VDD_3V3_PA, VDD_3V3_RF)	2.3	3.3	3.6	V
V _{IO}	I/O supply voltage (VDD_PADS_BB)	2.7	3.3	3.6	V
T _{OPR}	Operating temperature range	-40	-	85	°C
V _{IL}	CMOS low level input voltage	0	-	0.3×V _{IO}	V
V _{IH}	CMOS high level input voltage	0.7×V _{IO}	-	V _{IO}	V
V _{TH}	CMOS threshold voltage	-	0.5×V _{IO}	-	V

Mechanical

Mechanical Drawings

The AirPrime BX310x module's LGA footprint is a 70-pad array of copper pads. The following drawings illustrate the device footprint and dimensions.

Note: Dimensions in Figure 3-2 and Figure 3-3 are preliminary and subject to change.

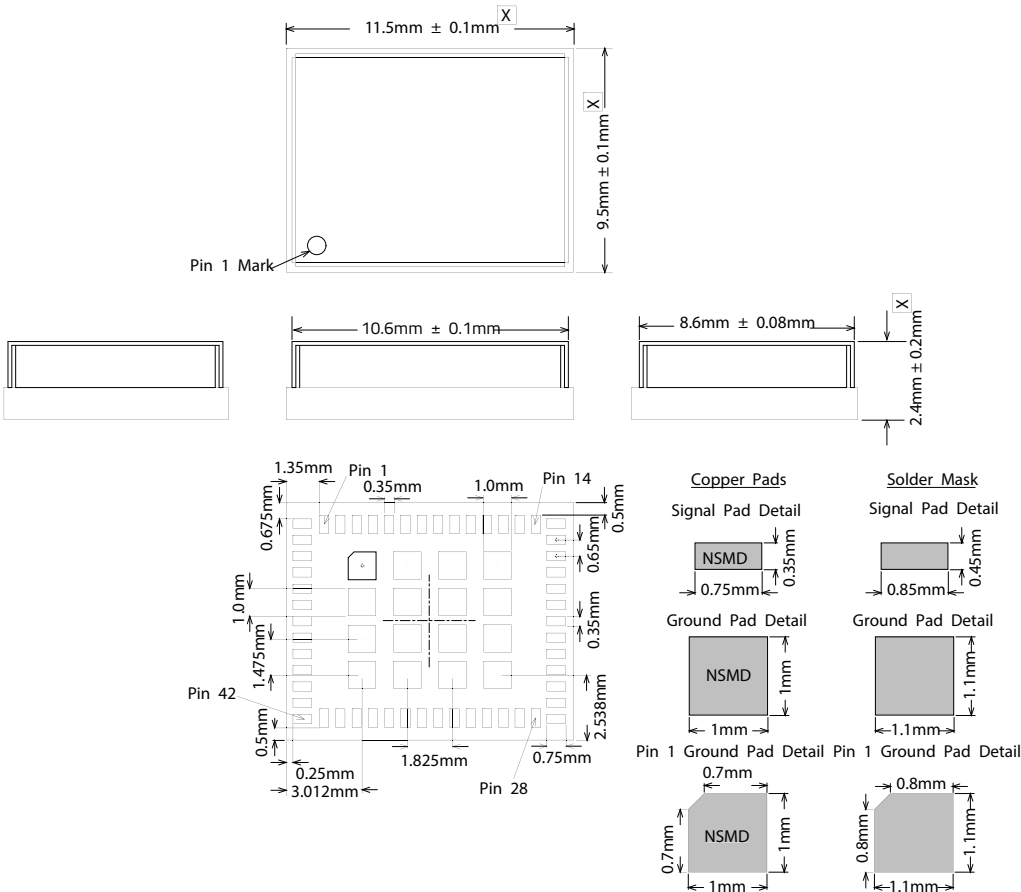


Figure 3-2: AirPrime BX3100 Mechanical Drawing

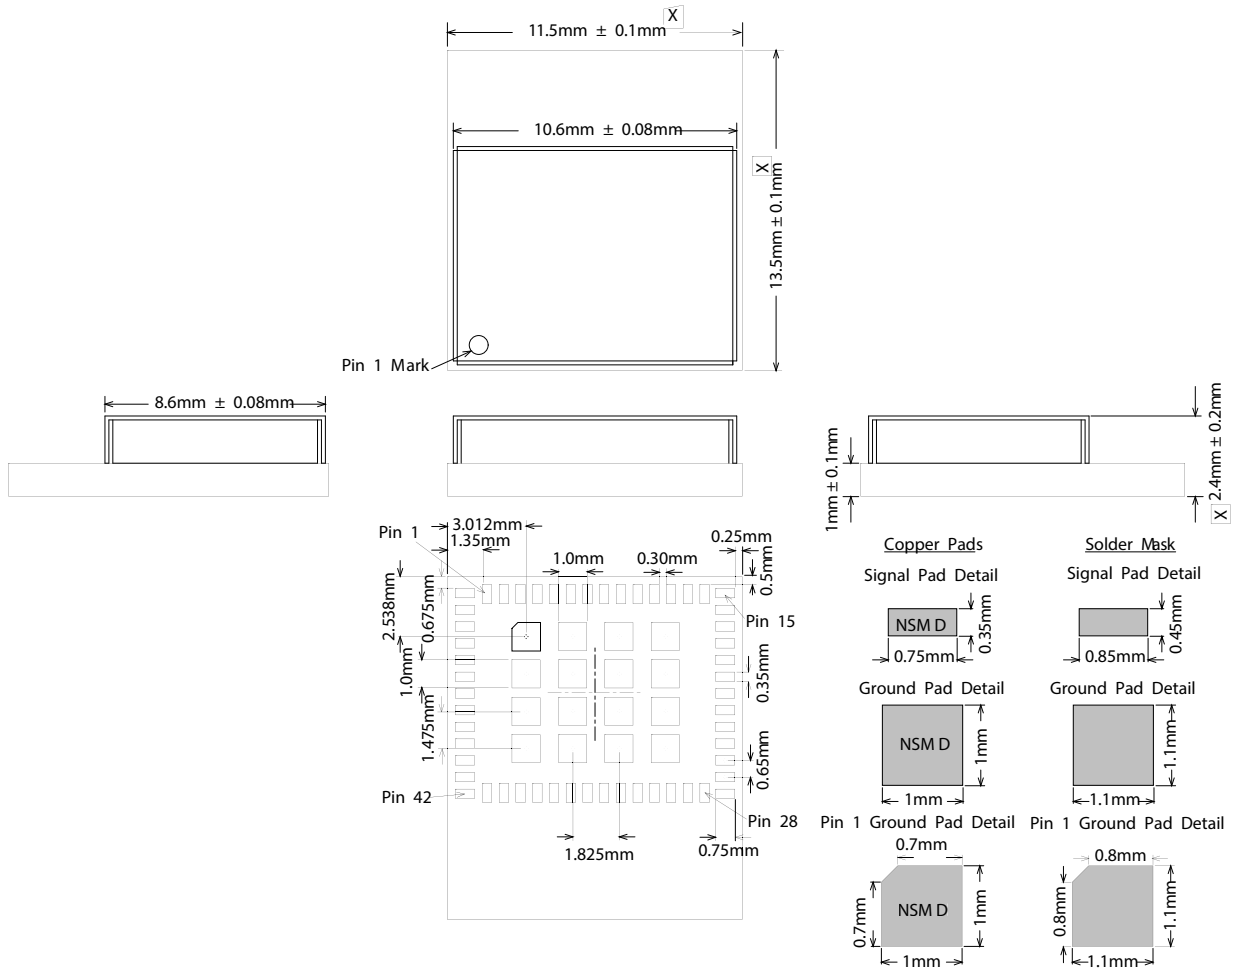


Figure 3-3: AirPrime BX3105 Mechanical Drawing

Antenna

The AirPrime BX3100 connects the RF I/O to the LGA pad (pin 40 – RF_MAIN). The port is nominally matched to 50 Ω, which the application typically will connect to an external antenna. Tracking from the LGA pad to the antenna port should use a controlled 50 Ω impedance transmission line technique. Provision for an antenna-matching circuit is recommended for conversion of the nominal 50 Ω module port to the antenna impedance required for optimum transmission.

The AirPrime BX3105 includes an integrated PCB antenna. In this case, pin 40 is not connected internally to the RF port, however Sierra Wireless recommends leaving pin 40 unconnected on the application PCB.

For optimum antenna performance, the AirPrime BX3105 requires restrictions on metal, ground, and other tracking around the BX3105 antenna area. The module is designed to be placed in a corner area of the customer application, as shown in Figure 3-4.



Figure 3-4: BX3105 Placement Examples

Table 3-11 presents operating range information for the integrated antenna.

Table 3-11: BX310x — Typical Range Performance

Radio	Mode	Range (m)	Notes
BLE	Advertising	105	LOS (Line of Sight)
	Connection	105	
	Connection to Mobile	110	
Wi-Fi	Connection	> ~250	

When the BX3105 module is placed along a side of the PCB, ground, metal tracking, and metallic objects should not be placed in the area indicated by red arrows in [Figure 3-5](#). Also, when the application PCB is placed in a housing, do not use metallic coatings or structures in the area adjacent to the area indicated by red arrows.


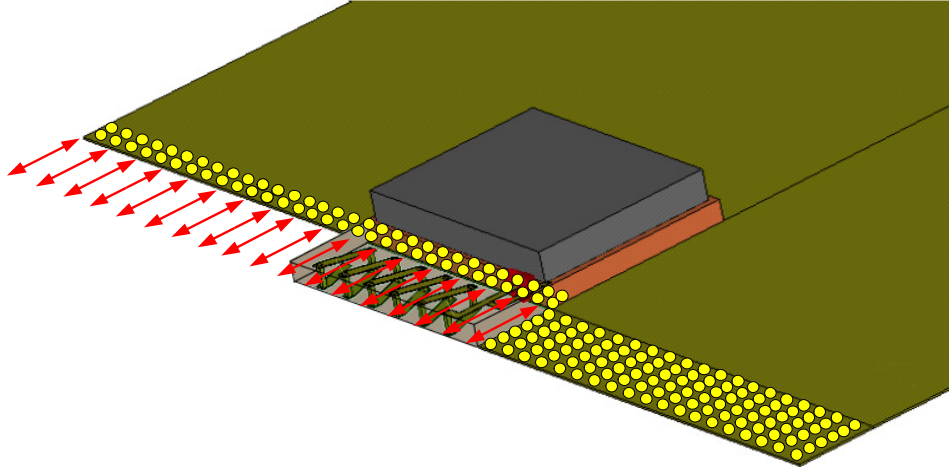


Figure 3-5: BX3105 Placement Restrictions

The integrated antenna in the BX3105 requires a solid ground plane on the application PCB. At the PCB edges (indicated in [Figure 3-5](#) by yellow dots), place dense vias to connect internal and external ground planes together. Continue the via pattern throughout the application PCB where possible. An insufficient ground plane that is poorly connected throughout the application PCB may cause poor radiated performance of the module. [Figure 3-6](#) shows the simulated radiated performance of the Antenna and module when placed on a 50 mm x 75 mm application PCB.

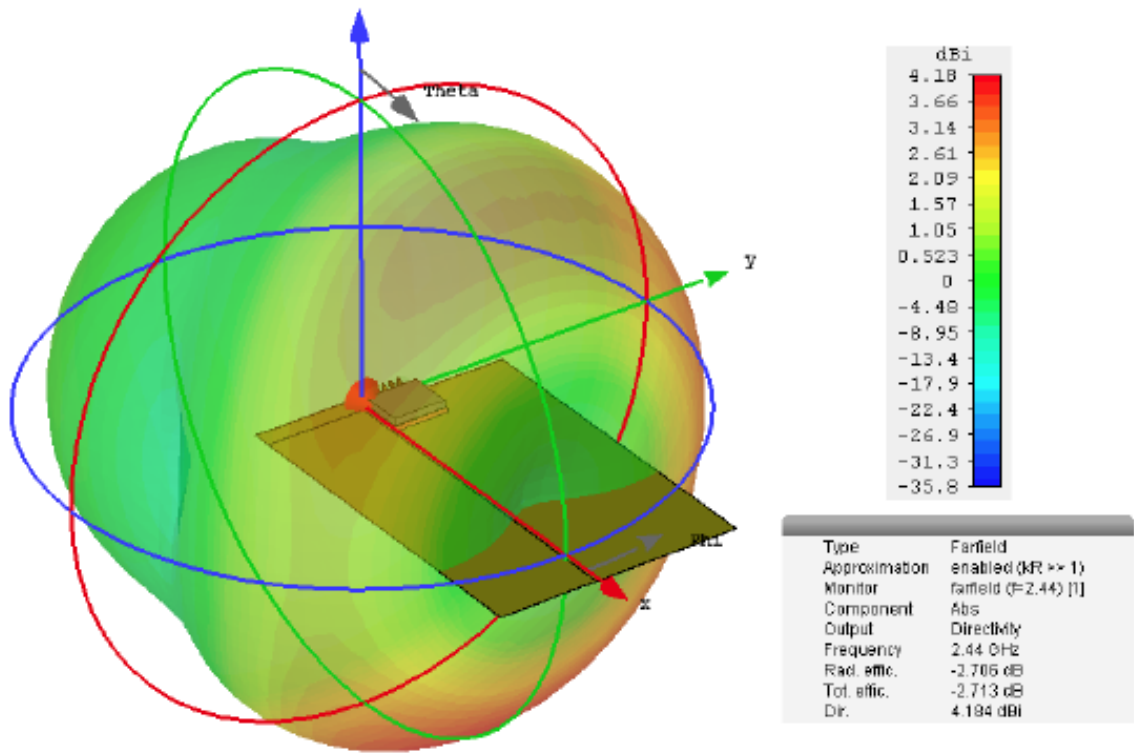

Simulated Performance—Measurements pending final tuning

Figure 3-6: Simulated Radiated Antenna Performance

Suggested Antennas

The following table describes several suggested antennas. Comparable antennas may also be used.

Table 3-12: Antennas

Module	Antenna	Description	Type	Maximum Gain
BX3100	Gemwave Technologies, Ltd FSD_BL3404-50T	2.4 GHz; S-SMA (M/M); swivel antenna	Dipole	1.5 dBi
	RF Solutions ANT-24G-S21	2.4 GHz General purpose whip; straight RF antenna	Monopole	0 dBi
	RF Solutions ANT-24G-DPL-SMA	2.4 GHz Whip Wi-Fi antenna; SMA male	Dipole	2.1 dBi
	Molex 47950-0011	2.4 GHz/5 GHz; micro-coaxial RF connector	Dipole	2.27 dBi @ 2.4 GHz 4.9 dBi @ 5 GHz
BX3105	3D PIFA Antenna	-	Integrated antenna	-1.65 dBi

>> 4: Interfaces Specifications

Overview

This section describes the interfaces supported by the AirPrime BX310x embedded module and provides specific voltage, timing, and circuit recommendations for each interface.

UART

The AirPrime BX310x provides one UART interface for asynchronous communication between the AirPrime BX310x module and a host device (e.g. a PC or host processor):

- UART0 — 4-wire, RS-232-compliant interface

Note: Up to two additional UART interfaces can be added by configuring GPIOs using AT commands.

Flow control is managed using:

- RTS/CTS signals (This method is required for higher UART interface speeds.)
or
- Software XON/XOFF

[Table 4-1](#) on page 32 describes the signals used for UART0.

Table 4-1: UART0 Pins^{a, b}

Pin	Interface	Name	Direction	Function (For peripheral device point of view)	Voltage Level
2	UART0	UART0_RTS	I	Ready To Send, flow control	VDD_PADS_BB
3		UART0_CTS	O	Clear To Send, flow control	
4		UART0_TXD	I	Transmit Data	
5		UART0_RXD	O	Receive Data	

a. If UART0 pins are not used, leave open.

b. BX310X <=> Peripheral Device

RTS<=>RTS

CTS<=>CTS

TX<=>TX

RX<=>RX

Note: UART signals are named with respect to the HOST, and directions are listed with respect to the module. For example, UART0_RXD is an output from the module to the host.

The UART interface is configurable via AT commands:

- Default configuration — 115200 (baudrate), 8 bit, no parity, no handshaking
- Baud rate considerations:
 - Maximum supported — 5 Mbaud
 - Maximum tested — 3 Mbaud. This is the maximum baud rate supported by the BX310x Dev Kit FTDI converter IC.
 - HW handshaking is recommended above rates of 1 Mbaud and can be enabled via AT command (AT&K3).
 - Common baud rates are supported — any baud rate in the supported range can be selected via AT+IPR=<uart_baud_rate> command. The device automatically configures the clock dividers appropriately for the chosen baud rate.
 - Baud rates are persistent post-reset.
 - Recommendation — Add series termination resistors (499Ω recommended) close to the module in the UART lines for management of clock harmonics.

ADC/Voltage Measurement

The AirPrime BX310x provides a general purpose ADC (Analog to Digital Converter) input, which can sample multiple inputs configured using AT commands.

Pins VDET_1, VDET_2, SENSOR_VP, and SENSOR_VN are used to measure single-ended analog voltages referenced to ground. The voltage on these pins is read via an AT command.

Noise can have a large impact on sensitive voltage measurements. To improve the accuracy of small voltage level measurements, a 100 nF capacitor to ground is recommended on the input to the VDET_1, VDET_2, SENSOR_VP, and SENSOR_VN pins.

Table 4-2: ADC Interface Pins^a

Pin	Signal name	Direction ^b	Function	Voltage Level
18	VDET_1	I	Analog to Digital Converter	VDD_PADS_BB
19	VDET_2	I		

- a. Leave open any pins that are not used.
- b. Signal direction with respect to the module.

Table 4-3: Voltage-measurement GPIO Pins^a

Pin	Signal Name	Direction ^b	Voltage level
31	SENSOR_VP	I	VDD_PADS_BB
32	SENSOR_CAPP	I	
34	SENSOR_CAPN	I	
36	SENSOR_VN	I	

- a. Leave open any pins that are not used.
- b. Signal direction with respect to the module.

Access to a Hall effect sensor is supported via firmware, and is selected using AT commands.

The sensor pins (SENSOR_VP or SENSOR_VN) will trigger an input perturbation (glitch) lasting for 80 ns when the ADC or Hall sensor is initialized.

I2C Interface

The AirPrime BX310x module provides two I2C (Inter-Integrated Circuit) dedicated serial ports (bus interface) based on [2] The I2C Bus Specification, Version 2.1, January 2000 (Phillips Semiconductor document number 9398 393 40011).

The interfaces use the pins indicated in [Table 4-4](#).

Table 4-4: i2C Interface Pins^a

Pin	Signal name	Direction	Function	Voltage Level
9 ^b	I2C1_SCL	I/O	Primary I2C interface	VDD_PADS_BB
17	I2C1_SDA	I/O	Primary I2C interface	
53 ^b	I2C2_SDA	I/O	Secondary I2C interface	VGPIO
54 ^b	I2C2_SCL	I/O	Secondary I2C interface	

- a. Leave open any pins that are not used.
- b. Non-Ethernet SKUs only

This implementation of the I2C interface includes the following characteristics:

- Supported voltage:
 - Primary I2C (3.3 V, configurable)
 - Secondary I2C (3.3 V)
- Standard-mode interface – Data transfer rates up to 100 kbit/s
- Fast-mode interface – Data transfer rates up to 400 kbit/s)
- Master mode operation
- Addressing modes – 7-bit; 10-bit; Dual addressing mode

External 2.2 kΩ pull-up resistors must be applied to I2C signals (see [Figure 4-1](#) on page 35).

For I2C bus details, including I2C bus waveform and timing details, refer to the I2C Bus Specification.

Application

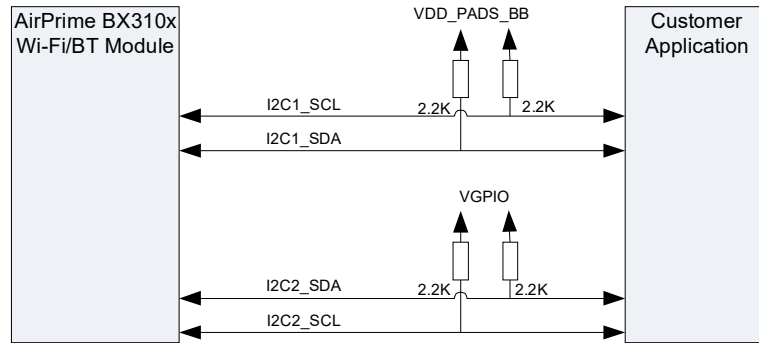


Figure 4-1: Example of I2C Bus Application

I2S Interface (Digital Audio)

Note: Interface support is forthcoming.

The AirPrime BX310x provides a 4-wire I2S (digital audio) interface that can be used to transfer serial digital audio to or from an external stereo DAC/ADC, and supports the following features:

- Modes — Master
- LRCK — 44.1 KHz
- Resolution (bits per frame)
- Channels — Output
- Bit clock — 1.4 MHz
- Supported audio interfaces (forthcoming) — PDM (Pulse Density Modulation), BT PCM (Pulse Code Modulation)

The interface uses the pins indicated in [Table 4-5](#).

Table 4-5: I2S Interface Pins^a

Pin	Signal name	Direction ^b	Function	Voltage Level
16 ^c	I2S_MCLK	O	I2S MasterClock	VDD_PADS_BB
24	I2S_DO	O	I2S Data Out	
25	I2S_DI	I	I2S Data In	
26	I2S_LRCLK	I/O	I2S Left-Right Clock (Word Select)	
27	I2S_BCLK	I/O	I2S Bit Clock	

- a. Leave open any pins that are not used.
 b. Signal direction with respect to the module.
 c. Non-Ethernet SKUs only

General Purpose Input / Output (GPIO)

The AirPrime BX310x defines several GPIOs for customer use, as described in [Table 4-6](#) and [Table 4-7](#).

The pins carrying the 'Alternate function' GPIOs are multi-function. The alternate interface (SPI) can be selected via an AT command.

Table 4-6: GPIO Pins (Dedicated) — BX3100 / BX3105 (non-Ethernet SKUs)^a

Pin	Signal Name	Direction	Default State	Function	Voltage Level
14	GPIO(5) Bluetooth LED indicator	I/O	Pull high ^b	General purpose I/O	VDD_PADS_BB
35	GPIO(27)	I/O	No pull ^c		

- a. Leave open any pins that are not used.
- b. Pulled high internally
- c. Internal configuration—no internal pull-ups

**Table 4-7: GPIO Pins (Alternate function) — BX3100/BX3105
(non-Ethernet SKUs)^a**

Pin	Signal Name	Direction	Default State	Function	Voltage Level
9	GPIO(23)	I/O	No pull ^b	General purpose I/O	VDD_PADS_BB
16	GPIO(0)		Pull high ^c		
17	GPIO(25)		No pull ^a		
18	GPIO(34)		No pull ^a		
19	GPIO(35)		No pull ^a		
24	GPIO(32)		No pull ^a		
25	GPIO(33)		No pull ^a		
26	GPIO(18)		No pull ^a		
27	GPIO(26)		No pull ^a		
31	GPIO(36)		No pull ^a		
32	GPIO(37)		No pull ^a		
34	GPIO(38)		No pull ^a		
36	GPIO(39)		No pull ^a		
42	GPIO(15)		Pull high ^{b d}		
43	GPIO(12)		Pull low ^e		
44	GPIO(14)		Pull high ^b		
45	GPIO(13)		Pull high ^b		
46	GPIO(2)		Pull low ^d		
47	GPIO(4)		Pull low ^d		
53	GPIO(16)		No pull ^a		
54	GPIO(17)	No pull ^a			

- a. Leave open any pins that are not used.
- b. Internal configuration—no internal pull-ups
- c. Pulled high internally
- d. GPIO(15) default state (pull HIGH) enables UART boot messaging. To disable UART boot messages, drive GPIO(15) LOW prior to boot.
- e. Pulled low internally

Table 4-8: GPIO Pins (Dedicated)—BX3100/BX3105 (Ethernet SKUs)^a

Pin	Signal Name	Direction	Default State	Function	Voltage Level
14	GPIO(17)	I/O	Pull high ^b	General purpose I/O	VDD_PADS_BB
35	GPIO(27)	I/O	No pull ^c		

- a. Leave open any pins that are not used.
- b. Pulled high internally
- c. Internal configuration—no internal pull-ups

**Table 4-9: GPIO Pins (Alternate function)—BX3100/BX3105
(Ethernet SKUs)^a**

Pin	Signal Name	Direction	Default State	Function	Voltage Level
9	GPIO(15)	I/O	No pull ^b	General purpose I/O	VDD_PADS_BB
16	GPIO(16)		Pull high ^c		
17	GPIO(13)		No pull ^a		
18	GPIO(34)		No pull ^a		
19	GPIO(35)		No pull ^a		
24	GPIO(32)		No pull ^a		
25	GPIO(33)		No pull ^a		
26	GPIO(14)		No pull ^a		
27	GPIO(12)		No pull ^a		
31	GPIO(36)		No pull ^a		
32	GPIO(37)		No pull ^a		
34	GPIO(38)		No pull ^a		
36	GPIO(39)		No pull ^a		
42	GPIO(21)		Pull high ^{b-}		
43	GPIO(25)		Pull low ^d		
44	GPIO(0)		Pull high ^b		
45	GPIO(26)		Pull high ^b		
46	GPIO(19)		Pull low ^d		
47	GPIO(22)		Pull low ^d		
48	GPIO(5) Bluetooth LED indicator		Pull high ^b		
53	GPIO(2)	No pull ^a			
54	GPIO(4)	No pull ^a			

- a. Leave open any pins that are not used.
- b. Internal configuration—no internal pull-ups
- c. Pulled high internally
- d. Pulled low internally

Bootstrap Pins

The GPIOs listed in [Table 4-10](#) are used as Bootstrap pins during start-up.

Table 4-10: GPIO Bootstrap Functions — BX3100/BX3105 (non-Ethernet SKUs)

GPIO	Function	Default State	Default Function	Alternative Function
0	Boot Source	High, Internal pull 45 k Ω	Boot from Internal Flash	Download to Flash (Disabled)
2	Boot Source	High, Internal pull 45 k Ω		
17	UART/SPI Host interface selection	No pull	UART Host interface	SPI HOST interface When GPIO(17) is pulled high at Boot: <ul style="list-style-type: none"> • Device enters SPI HOST interface mode • AT commands are supported from the HOST device over SPI • BX3100 acts as an SPI Slave
27	UART Download mode selection	No pull	Normal operation	UART Download mode When GPIO(27) is pulled high at Boot, device enters UART download mode. Using the Sierra Wireless UART updater application, a firmware image can be programmed to the device over the UART interface.

Table 4-11: GPIO Bootstrap Functions — BX3100/BX3105 (Ethernet SKUs)

GPIO	Function	Default State	Default Function	Alternative Function
16	Boot Source	High, Internal pull 45 k Ω	Boot from Internal Flash	Download to Flash (Disabled)
19	Boot Source	High, Internal pull 45 k Ω		

Table 4-11: GPIO Bootstrap Functions — BX3100/BX3105 (Ethernet SKUs) (Continued)

GPIO	Function	Default State	Default Function	Alternative Function
4	UART/SPI Host interface selection	No pull	UART Host interface	SPI HOST interface When GPIO(4) is pulled high at Boot: <ul style="list-style-type: none"> • Device enters SPI HOST interface mode • AT commands are supported from the HOST device over SPI • BX3105 acts as an SPI Slave
27	UART Download mode selection	No pull	Normal operation	UART Download mode When GPIO(27) is pulled high at Boot, device enters UART download mode. Using the Sierra Wireless UART updater application, a firmware image can be programmed to the device over the UART interface.

SPI Bus

The AirPrime BX310x (non-Ethernet SKUs) provides a 5-wire Serial Flash SPI-compatible interface (SPI Slave), as described in [Table 4-12](#).

Table 4-12: SPI (Slave) Pin Descriptions^a

Pin	Signal Name	Direction ^b	Function
42	CS	I	SPI Chip Select
43	MISO	O	MISO
44	SCLK	I	SPI Clock
45	MOSI	I	MOSI
47	SRDY	O	Hold

- a. Leave open any pins that are not used.
- b. Signal direction with respect to the module.

Module Enable

The AirPrime BX310x uses the ENABLE (Module Enable) signal to turn the module on/off:

- Turn module on — Drive ENABLE high (to VDD_PADS_BB)
- Turn module off — Drive ENABLE low (to 0V)

Table 4-13: Enable Pin Description

Pin	Signal Name	Direction ^a	Function	Voltage Level
37 ^b	ENABLE	I	Start/stop module	VDD_PADS_BB

- a. Signal direction with respect to the module.
 b. Do not leave this pin unconnected.

To avoid a possible implementation-dependent issue where enabling/disabling Wi-Fi functionality could cause a perturbation (glitch) on the power supply rails that impacts module operations, a short delay (1 ms recommended) is required for the power supply to stabilize before enabling the module.

If ENABLE is controlled by the Host, the host implements the delay (from the time the supply is present) before driving ENABLE high.

If ENABLE is hard-wired to the supply (VDD_PADS_BB), an RC circuit (10k Ω & 0.1 μ F) is required. The RC circuit will create the required delay, allowing the supply to stabilize before ENABLE is pulled high.

Do not leave this pin unconnected.

PWM

The AirPrime BX310x (non-Ethernet SKUs only) supports the use of PWM functionality on GPIOs (GPIO(5) and GPIO(27)) via AT command configuration. Refer to [1] AirPrime BX310x AT Command Reference for details.

5: Firmware Upgrade

The BX310x is firmware-upgradeable via the following methods:

- AirVantage FOTA (Firmware Over The Air)

Once the BX310x is registered on AirVantage, the customer can select public firmware packages for the device and initiate the FOTA update. If connected to the cloud, the BX310x can respond to a service request for firmware update or can initiate the update via AT commands.

For AT commands and notification details, refer to [1] AirPrime BX310x AT Command Reference.

For AirVantage FOTA details, refer to source.sierrawireless.com/airvantage/fota.
- Non-AirVantage OTA (Over The Air)

The BX310x supports non-AirVantage OTA via the AT+FOTA=<url> command. The BX310x connects to the specified <url> and downloads the firmware package using the MQTT protocol.

The firmware package will be posted on source.sierrawireless.com for customers to use their own OTA service to update the firmware on the BX310x. For +FOTA details, refer to [1] AirPrime BX310x AT Command Reference. The customer is responsible for securing the communication between the BX310x and the MQTT server where the firmware package resides.
- UART from HOST

A firmware file can be downloaded to the module using the UART interface connected to a host device. A UART updater tool and source code is available on source.sierrawireless.com for customers who wish to implement this functionality in their own application.

Currently, the BX310x is put into update mode by driving GPIO(27) high prior to boot. If the customer wishes to use UART mode, then GPIO(27) must be controlled by the HOST to enable this mode.

The firmware file is transferred and written encrypted into Flash over the UART interface prior to initiating the update process.

Note: Only authentic, signed Sierra firmware can be used in the update process.

Each of the upgrade methods follows the same process:

1. Firmware is written encrypted into an empty (or unused) Flash partition.
2. Firmware signature is verified by the bootloader prior to use.
 - If verification passes, then:
 - The boot process switches to the new partition and the device boots normally using the new firmware file.
 - The verification process is not retriggered on subsequent boots until another update process is initiated.
 - If verification fails, then:
 - The device reverts to the original partition.
 - If the upgrade was attempted OTA, the running firmware indicates a failure to update. If the upgrade was attempted over the UART, a verification failure message is reported.

- The failed firmware file is not erased from Flash, but can be overwritten if another update process is initiate.

>> 6: General Layout Recommendations

In addition to specific requirements for the antenna implementation and clearance of the BX3105 detailed in this document, good mixed-signal layout practices should be followed:

- Avoid tracking of high frequency signals near the RF sections of the module.
- Ensure plenty of ground vias throughout the application board.
- Tightly tie ground planes together throughout the application board.
- BX3100 RF tracking to application board antenna or RF connector:
 - Use 50 Ω impedance controlled tracks.
 - Do not track near sources of digital interference.
 - Provide continuous unbroken ground plane reference.
 - Avoid multiple layer changes.
- Supply decoupling should be placed as close to the supply pins as possible.
- Avoid long digital tracks on surface layers — they may support significant RF harmonic content.

>> 7: Regulatory Compliance and Industry Certification

Caution: *Unauthorized modifications or changes not expressly approved by Sierra Wireless could void compliance with regulatory rules, and thereby your authority to use this equipment.*

The BX3100/BX3105 module is designed to meet the requirements of the following regulatory bodies and regulations, where applicable:

- Federal Communications Commission (FCC) of the United States
- Innovation, Science and Economic Development Canada (ISED)
- Ministry of Internal Affairs and Communications (MIC) of Japan
- Radio Equipment Directive of the European Union
- Ministry of Industry and Information Technology (People's Republic of China)
- The National Communications Commission (NCC) of Taiwan, Republic of China
- The National Telecommunications Agency (ANATEL) of Brazil
- National Radio Research Agency (Republic of Korea)

Note: To determine whether specific approvals have been received or to obtain the anticipated schedule for approvals, please contact your Sierra Wireless account representative.

Additional certifications and details on specific country approvals may be obtained upon customer request — contact your Sierra Wireless account representative for details.

Additional testing and certification may be required for the end product with an embedded BX3100/BX3105 module and are the responsibility of the OEM. Sierra Wireless offers professional services-based assistance to OEMs with the testing and certification process, if required.

United States

The BX3100/BX3105 module has been certified by the Federal Communications Commission under FCC ID: N7NBX31A. The BX3105 module is certified with an on-board antenna, while the BX3100 module is certified with an external antenna.

Integrators may use the BX3100/BX3105 modules in their end products without additional FCC certification if they meet the following conditions. Otherwise, additional FCC approval must be obtained.

1. Only antennas of the same type and with equal or less gains as shown in Table 7-1 may be used. Other types of antennas and/or higher gain antennas may require additional authorization for operation.
2. The end product integrating the BX3100 module must use the RF trace design approved with the BX3100 module. Details of the trace design can be obtained from Sierra Wireless upon request.
3. At least 6 cm separation distance between the antenna and the user's body, or 2.5 cm separation distance when the end product is designed or intended for use

on extremities, or mainly operated in extremity-only exposure conditions, i.e., hands, wrists, feet and ankles, must be maintained at all times.

4. The regulatory label on the end product must include the text “Contains FCC ID: N7NBX31A” and the following compliance statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5. A user manual with the end product must clearly indicate the operating requirements and conditions that must be observed to ensure compliance with current FCC RF exposure guidelines.
6. End users must not be provided with access to configuration options to change technical parameters of the BX3100/BX3105 module, except as permitted by the FCC rules.

The end product with an embedded BX3100/BX3105 module may also need to meet the requirements in FCC Part 15 Subpart B for unintentional radiators and be properly authorized.

Table 7-1: Antenna Specifications

Module	Antenna Type	Maximum Gain
BX3105	Integrated PIFA	-1.65 dBi
BX3100	Monopole	0 dBi
	Dipole	2.5 dBi @ 2.4 GHz

Canada

This radio transmitter IC: 2417C-BX31A has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Integrators may use the BX3100/BX3105 modules in their end products without additional ISED certification if they meet the following conditions. Otherwise, additional ISED approval must be obtained.

1. Only antennas of the same type and with equal or less gains as shown in Table 7-1 may be used. Other types of antennas and / or higher gain antennas may require additional authorization for operation.
2. The end product integrating the BX3100 module must use the RF trace design approved with the BX3100 module. Details of the trace design can be obtained from Sierra Wireless upon request.
3. At least 4.5 cm separation distance between the antenna and the user’s body, or 3 cm separation distance when the end product is designed or intended for use on extremities, or mainly operated in extremity-only exposure conditions, i.e., hands, wrists, feet and ankles, must be maintained at all times.

4. The regulatory label on the end product must include the text “Contains IC: 2417C-BX31A” and the following compliance statement:
This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
5. A user manual with the end product must clearly indicate the operating requirements and conditions that must be observed to ensure compliance with current ISED RF exposure guidelines.
6. End users must not be provided with access to configuration options to change technical parameters of the BX3100/BX3105 module, except as permitted by the ISED rules.

Brazil

Este produto está homologado pela ANATEL, de acordo com os procedimentos regulamentados pela Resolução n°. 242/2000 e atende aos requisitos técnicos aplicados. Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL — www.anatel.gov.br.



Figure 7-1: AirPrime BX3100/BX3105 Anatel Certification Marking

Japan



Figure 7-2: AirPrime BX3100 Japan Certification Marking



Figure 7-3: AirPrime BX3105 Japan Certification Marking

Republic of Korea



R-C-SWK-BX31A

Figure 7-4: AirPrime BX3100/BX3105 Korea (KCC) Certification Marking

Bluetooth Qualification Program (BQP)

- In case no other non-certified Bluetooth components are incorporated, the BX3100/BX3105's BQP marking certification allows users to integrate the module into products without the need to obtain subsequent and separate approval. 
- The BX3100/BX3105 is undergoing approval (as of publication date of this document) by the Bluetooth Qualification Body (BQB) to use the Bluetooth trademark and to offer official Bluetooth functionality. The approval according to the V4.2 Bluetooth specification confirms that the module complies with the Bluetooth specification and will successfully operate with other products supporting the same profiles. This certification applies globally.

Note: To determine whether specific approvals have been received or to obtain the anticipated schedule for approvals, please contact your Sierra Wireless account representative.

Table 7-2: QDID (Qualified Design Identifications)

Module	QDID
BX3100	121580
BX3105	121580

Labeling

- Products complying with all relevant requirements are allowed to bear the official Bluetooth logo

For further information regarding the BQP certification requirements please review the following website:

- Bluetooth Special Interest Group — <https://www.bluetooth.org/apps/content/>

>> 8: Pinout

The system interface of the AirPrime BX310x is through the LGA pattern on the bottom of the PCB.

AirPrime BX310x pins are divided into three functional categories:

- Core functions and associated pins — Cover all the mandatory features for M2M connectivity and will be available by default across all CF3 family of modules. These Core functions are always available and always at the same physical pin locations. A customer platform using only these functions and associated pins is guaranteed to be forward and/or backward compatible with the next generation of CF3 modules.
- Extension functions and associated pins — Bring additional capabilities to the customer. Whenever an Extension function is available on a module, it is always at the same pin location.
- Custom functions and associated pins — These are module-specific and make use of specific chipset functions and I/Os.

Warning: *Custom features should be used with caution as there is no guarantee that the custom functions available on a given module will be available on other CF3 modules.*

Pins marked as "Leave open" or "Reserved" should not be used or connected.

Pin Configuration

Figure 8-1 illustrates the pin configuration of the AirPrime BX310x module.

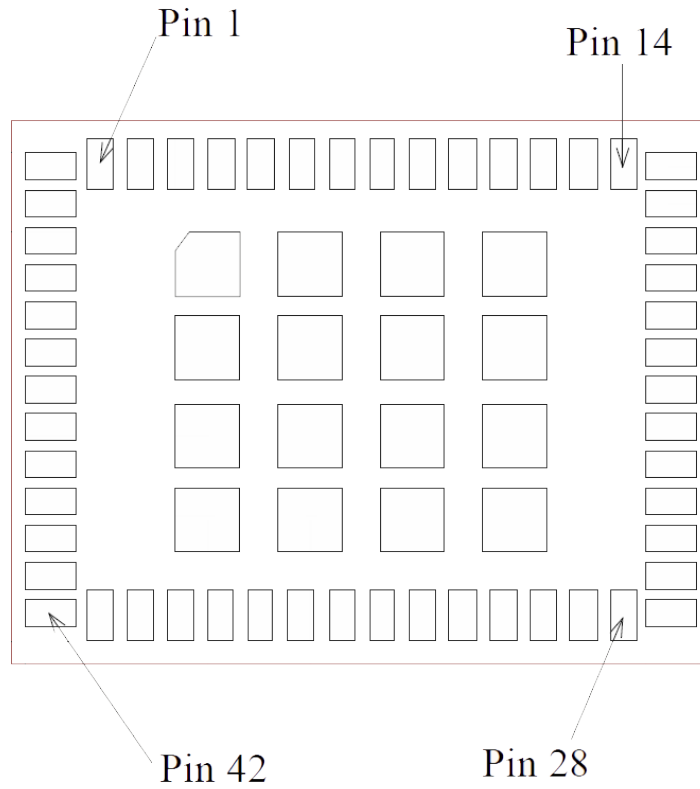


Figure 8-1: Pin Configuration (Bottom View)

Pin Description

Table 8-1 on page 52 lists detailed information for the LGA pins.

Important: Leave open all pins that are not used.

Table 8-1: Pin Definitions — BX3100/BX3105 (non-Ethernet SKUs)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
1	Reserved	NoConnect		-	-	-	-	E
2	UART0_RTS_GPIO(19)	UART0	I	VDD_PADS_BB	PU	L	UART0 Request To Send (For peripheral device point of view)	C
3	UART0_CTS_GPIO(22)	UART0	O	VDD_PADS_BB	PU	L	UART0 Clear To Send (For peripheral device point of view)	C
4	UART0_TXD	UART0	I	VDD_PADS_BB	PU	L	UART0 Transmit Data (For peripheral device point of view)	C
5	UART0_RXD	UART0	O	VDD_PADS_BB	PU	L	UART0 Receive Data (For peripheral device point of view)	C
6	Reserved	NoConnect	-	-	-	-	-	E
7	Reserved	NoConnect	-	-	-	-	-	E
8	Reserved	NoConnect	-	-	-	-	-	E
9	I2C1_SCL	I2C1	I/O	VDD_PADS_BB	PUE	L	Primary I2C interface—Clock	C
	GPIO(23)	GPIO	I/O		NP	SW	General Purpose I/O	C
10	Reserved	NoConnect	-	-	-	-	-	C
11	Reserved	NoConnect	-	-	-	-	-	C
12	Reserved	NoConnect	-	-	-	-	-	C
13	Reserved	NoConnect	-	-	-	-	-	C
14	GPIO(5)	GPIO	I/O	VDD_PADS_BB	NP	SW	General Purpose I/O	E
15	Reserved	NoConnect	-	-	-	-	-	E
16	I2S_MCLK	I2S	O	VDD_PADS_BB	NP	H	I2S Master Clock	E
	GPIO(0)	GPIO	I/O		NP	SW	General Purpose I/O	-

Table 8-1: Pin Definitions — BX3100/BX3105 (non-Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
17	I2C1_SDA	I2C1	I/O	VDD_PADS_BB	PUE	L	Primary I2C interface—Data	E
	GPIO(25)	GPIO	I/O		NP	SW	General Purpose I/O	E
18	VDET_1	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	C
	GPIO(34)	GPIO	I		NP	SW	General Purpose Input	-
19	VDET_2	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	C
	GPIO(35)	GPIO	I		NP	SW	General Purpose Input	-
20	Reserved	NoConnect	-	-	-	-	-	C
21	Reserved	NoConnect	-	-	-	-	-	C
22	Reserved	NoConnect	-	-	-	-	-	C
23	Reserved	NoConnect	-	-	-	-	-	C
24	I2S_DO	I2S	O	VDD_PADS_BB	PD	H	I2S Data Out	C
	GPIO(32)	GPIO	I/O		NP	SW	General Purpose I/O	-
25	I2S_DI	I2S	I	VDD_PADS_BB	PD	H	I2S Data In	C
	GPIO(33)	GPIO	I/O		NP	SW	General Purpose I/O	-
26	I2S_LRCLK	I2S	I/O	VDD_PADS_BB	PD	L/H	I2S Left-Right Clock (Word Select)	C
	GPIO(18)	GPIO	I/O		NP	SW	General Purpose I/O	-
27	I2S_BCLK	I2S	I/O	VDD_PADS_BB	PD	H	I2S Bit Clock	C
	GPIO(26)	GPIO	I/O		NP	SW	General Purpose I/O	-
28	GND	Ground	0V	0V	-	-	Ground	C
29	Reserved	NoConnect	-	-	-	-	-	E
30	GND	Ground	0V	0V	-	-	Ground	C
31	SENSOR_VP	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(36)	GPIO	I		NP	SW	General Purpose Input	C
32	SENSOR_CAPP	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(37)	GPIO	I		NP	SW	General Purpose Input	C
33	VGPI0	Power	O	3.3V		H	Reference voltage output	C

Table 8-1: Pin Definitions — BX3100/BX3105 (non-Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
34	SENSOR_CAPN	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(38)	GPIO	I		NP	SW	General Purpose Input	C
35	GPIO(27)	GPIO	I/O	VDD_PADS_BB	NP	L	General Purpose I/O	E
36	SENSOR_VN	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(39)	GPIO	I		NP	SW	General Purpose Input	C
37	ENABLE	Control	I	VDD_PADS_BB		L	Turn module on/off	C
38	Reserved	NoConnect	-	-	-	-	-	E
39	GND	Ground	0V	0V	-	-	Ground	C
40	(BX3100) RF_MAIN	RF	I/O		-	-	RF antenna, External DC block capacitor required, recommend 12 pF or 15 pF.	C
	(BX3105) Reserved	NoConnect	-	-	-	-	Leave pin unconnected	-
41	GND	Ground	0V	0V	-	-	Ground	C
42	CS	SPI	I/O	VDD_PADS_BB	NP	SW	SPI Chip Select	C
	GPIO(15)	GPIO	I/O		NP	SW	General Purpose I/O	E
43	MISO	SPI	I/O	VDD_PADS_BB	NP	SW	SPI Data In	C
	GPIO(12)	GPIO	I/O		NP	SW	General Purpose I/O	E
44	SCLK	SPI	I/O	VDD_PADS_BB	NP	SW	SPI Clock (output from Master)	C
	GPIO(14)	GPIO	I/O		NP	SW	General Purpose I/O	E
45	MOSI	SPI	I/O	VDD_PADS_BB	NP	SW	SPI Data Out	C
	GPIO(13)	GPIO	I/O		NP	SW	General Purpose I/O	E
46	GPIO(2)	GPIO	I/O		NP	SW	General Purpose I/O	E
47	SRDY	SPI	O	VDD_PADS_BB	NP	SW	SPI Hold	E
	GPIO(4)	GPIO	I/O		NP	SW	General Purpose I/O	E
48	Reserved	NoConnect	-	-	-	-	-	E
49	Reserved	NoConnect	-	-	-	-	-	E

Table 8-1: Pin Definitions — BX3100/BX3105 (non-Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
50	VDD_3V3_RF	Power	I	2.8 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Analog/RF	C
51	VDD_3V3_PA	Power	I	2.8 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Internal Power Amplifier	C
52	VDD_PADS_BB	Power	I	2.7 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Baseband and Digital I/O	C
53	I2C2_SDA	I2C2	I/O	VGPIO	PUE	L	Secondary I2C interface—Data	-
	GPIO(16)	GPIO	I/O		NP	SW	General Purpose I/O	C
54	I2C2_SCL	I2C2	I/O	VDD_PADS_BB	PUE	L	Secondary I2C interface—Clock	-
	GPIO(17)	GPIO	I/O		NP	SW	General Purpose I/O	C
55–70	Ground	Ground	0V	0V	-	-	Ground	C

- a. I/O: Signal direction with respect to the module
- b. PU/PD: NP—No Pull; PD—Pull Down; PU—Pull Up; PUE—Pull Up External
- c. Active: H—High; L—Low; SW—Software defined
- d. Type: C—Core; E—Extended; K—Custom

Table 8-2: Pin Definitions — BX3100/BX3105 (Ethernet SKUs)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
1	Reserved	NoConnect		-	-	-	-	E
2	UART0_RTS_GPIO(23)	UART0	I	VDD_PADS_BB	PU	L	UART0 Request To Send (For peripheral device point of view)	C
3	UART0_CTS_GPIO(18)	UART0	O	VDD_PADS_BB	PU	L	UART0 Clear To Send (For peripheral device point of view)	C
4	UART0_TXD	UART0	I	VDD_PADS_BB	PU	L	UART0 Transmit Data (For peripheral device point of view)	C
5	UART0_RXD	UART0	O	VDD_PADS_BB	PU	L	UART0 Receive Data (For peripheral device point of view)	C
6	Reserved	NoConnect	-	-	-	-	-	E
7	Reserved	NoConnect	-	-	-	-	-	E
8	Reserved	NoConnect	-	-	-	-	-	E
9	I2C1_SCL	I2C1	I/O	VDD_PADS_BB	PUE	L	Primary I2C interface—Clock	-
	GPIO(15)	GPIO	I/O		NP	SW	General Purpose I/O	C
10	Reserved	NoConnect	-	-	-	-	-	C
11	Reserved	NoConnect	-	-	-	-	-	C
12	Reserved	NoConnect	-	-	-	-	-	C
13	Reserved	NoConnect	-	-	-	-	-	C
14	EMAC_PHY_EN	EMAC	O	VDD_PADS_BB	PD	H	Enable the PHY chip	-
	GPIO(17)	GPIO	I/O		NP	SW	General Purpose I/O	E
15	Reserved	NoConnect	-	-	-	-	-	E
16	EMAC_CLK_OUT	EMAC	O	VDD_PADS_BB	NP	H	50 MHz clock from module	-
	GPIO(16)	GPIO	I/O		NP	SW	General Purpose I/O	-
17	I2C1_SDA	I2C1	I/O	VDD_PADS_BB	PUE	L	Primary I2C interface—Data	-
	GPIO(13)	GPIO	I/O		NP	SW	General Purpose I/O	E
18	VDET_1	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	C
	GPIO(34)	GPIO	I		NP	SW	General Purpose Input	-

Table 8-2: Pin Definitions — BX3100/BX3105 (Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
19	VDET_2	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	C
	GPIO(35)	GPIO	I		NP	SW	General Purpose Input	-
20	Reserved	NoConnect	-	-	-	-	-	C
21	Reserved	NoConnect	-	-	-	-	-	C
22	Reserved	NoConnect	-	-	-	-	-	C
23	Reserved	NoConnect	-	-	-	-	-	C
24	I2S_DO	I2S	O	VDD_PADS_BB	PD	H	I2S Data Out	C
	GPIO(32)	GPIO	I/O		NP	SW	General Purpose I/O	-
25	I2S_DI	I2S	I	VDD_PADS_BB	PD	H	I2S Data In	C
	GPIO(33)	GPIO	I/O		NP	SW	General Purpose I/O	-
26	I2S_LRCLK	I2S	I/O	VDD_PADS_BB	PD	L/H	I2S Left-Right Clock (Word Select)	C
	GPIO(14)	GPIO	I/O		NP	SW	General Purpose I/O	-
27	I2S_BCLK	I2S	I/O	VDD_PADS_BB	PD	H	I2S Bit Clock	C
	GPIO(12)	GPIO	I/O		NP	SW	General Purpose I/O	-
28	GND	Ground	0V	0V	-	-	Ground	C
29	Reserved	NoConnect	-	-	-	-	-	E
30	GND	Ground	0V	0V	-	-	Ground	C
31	SENSOR_VP	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(36)	GPIO	I		NP	SW	General Purpose Input	C
32	SENSOR_CAPP	VoldMeasur e	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(37)	GPIO	I		NP	SW	General Purpose I/O	C
33	VGPIO	Power	O	3.3V			Reference voltage output	C
34	SENSOR_CAPN	VoltMeasure	I	VDD_PADS_BB	NP	H	ADC input for voltage measurement	-
	GPIO(38)	GPIO	I		NP	SW	General Purpose Input	C
35	EMAC_CRS_DV	EMAC	I	VDD_PADS_BB		H	Carrier Sense/ RX_DATA valid	E
	GPIO(27)	GPIO	I/O		NP	L	General Purpose I/O	E

Table 8-2: Pin Definitions — BX3100/BX3105 (Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
36	SENSOR_VN	VoltMeasure	I	VDD_PADS_ BB	NP	H	ADC input for voltage measurement	-
	GPIO(39)	GPIO	I		NP	SW	General Purpose INPUT	C
37	ENABLE	Control	I	VDD_PADS_ BB		L	Turn module on/off	C
38	Reserved	NoConnect	-	-	-	-	-	E
39	GND	Ground	0V	0V	-	-	Ground	C
40	(BX3100) RF_MAIN	RF	I/O		-	-	RF antenna, External DC block capacitor required, recommend 12 pF or 15 pF.	C
	(BX3105) Reserved	NoConnect	-	-	-	-	Leave pin unconnected	-
41	GND	Ground	0V	0V	-	-	Ground	C
42	EMAC_TX_EN	EMAC	O	VDD_PADS_ BB	NP	H	When driven high, TX data is clocked into the PHY chip	-
	GPIO(21)	GPIO	I/O		NP	SW	General Purpose I/O	E
43	EMAC_RXD0	EMAC	I	VDD_PADS_ BB	NP	H	RX Data 0	-
	GPIO(25)	GPIO	I/O		NP	SW	General Purpose I/O	E
44	EMAC_TX_CLK	EMAC	I	VDD_PADS_ BB	NP	H	Not used. Module updates the clock on GPIO(16).	-
	GPIO(0)	GPIO	I/O		NP	SW	General Purpose I/O	E
45	EMAC_RXD1	EMAC	I	VDD_PADS_ BB	NP	H	RX Data 1	-
	GPIO(26)	GPIO	I/O		NP	SW	General Purpose I/O	E
46	EMAC_TXD0	EMAC	O	VDD_PADS_ BB	NP	H	TX Data 0	-
	GPIO(19)	GPIO	I/O		NP	SW	General Purpose I/O	E
47	EMAC_TXD1	EMAC	O	VDD_PADS_ BB	NP	H	TX Data 1	-
	GPIO(22)	GPIO	I/O		NP	SW	General Purpose I/O	E
48	GPIO(5)	GPIO	I/O	VDD_PADS_ BB	NP	SW	General Purpose I/O	E
49	Reserved	NoConnect	-	-	-	-	-	E
50	VDD_3V3_RF	Power	I	2.8 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Analog/RF	C

Table 8-2: Pin Definitions — BX3100/BX3105 (Ethernet SKUs) (Continued)

Pin	Signal name	Group	I/O ^a	Voltage	PU/ PD ^b	Active ^c	Function	Type ^d
51	VDD_3V3_PA	Power	I	2.8 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Internal Power Amplifier	C
52	VDD_PADS_BB	Power	I	2.7 (Min) 3.3V (Typ) 3.6 (Max)	-	-	3.3v nominal supply for Baseband and Digital I/O	C
53	EMAC_MDIO	EMAC	I/O	VGPIO	-	SW	Data Management I/O	-
	GPIO(2)	GPIO	I/O		NP	SW	General Purpose I/O	C
54	EMAC_MDC	EMAC	O	VGPIO	-	SW	Data Management Clock	-
	GPIO(4)	GPIO	I/O		NP	SW	General Purpose I/O	C
55–70	Ground	Ground	0V	0V	-	-	Ground	C

- a. I/O: Signal direction with respect to the module
b. PU/PD: NP—No Pull; PD—Pull Down; PU—Pull Up; PUE—Pull Up External
c. Active: H—High; L—Low; SW—Software defined
d. Type: C—Core; E—Extended; K—Custom

>> 9: References

Web Site Support

Check <http://source.sierrawireless.com> for the latest documentation available for the AirPrime BX310x.

Reference Documents

[1] AirPrime BX310x AT Command Reference
Reference number: 41111445

The I2C Bus Specification, Version 2.1, January 2000 (Phillips Semiconductor document number 9398 393 40011)

>> | A: Appendix - Abbreviations

Table 1-1: Abbreviations

Acronym or term	Definition
AFH	Adaptive Frequency Rate Hopping
AP	Access Point
BLE	Bluetooth Low Energy
BR	Basic Rate
BSS	Basic Service Set
BT	Bluetooth (Classic)
EDR	Enhanced Data Rate
EDR	Enhanced Data Rate
GAP	Generic Access Profile
GAP	General Access Profile
GATT	General Attribute Profile
HTTP	Hypertext Transfer Protocol
HTTPS	Hypertext Transfer Protocol Secure
LE	Low Energy
MQTT	Message Queuing Telemetry Transport
PAN	Personal Area Network
RFCOMM	Radio Frequency Communication
SDP	Service Discover Protocol
SMP	Security Manage Protocol
SPP	Bluetooth Serial Port Profile
STA	Station (client)
UART	Universal Asynchronous Receiver-Transmitter
Wi-Fi	Wireless Networking
WPA	Wi-Fi Protected Access
WPA2	Wi-Fi Protected Access 2
WPS	Wi-Fi Protected Setup