

CAUTION

PNEUMATIC RIVETING/DIMPLING MACHINE

WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT

(ie. eye, face, hearing etc.)

- Never start machine unless all guards are in place, properly designed and adjusted.
- Beware of all dangerous moving machinery parts.
- Keep work area clean. Foreign materials may cause poor footing
- Do not reach over or around moving machinery to activate controls.
- Cool hot dimpling components (dies) before removal or adjustment.
- Set correct temperature and timer settings before dimpling parts.
- Lower anvil all the way down when changing setup.
- Raise anvil gradually to avoid damage to dies and parts.
- Keep hands clear of anvils during operation.
- De-energize and lockout all energy systems before making adjustments/ repairs.
- Do not wear gloves, jewelry, or loose clothing.
- Ensure that operator is properly trained and has read owners operation manual.

Note: Immediately report all machinery malfunctions to management