


CONVERTIBLE STUDIO EASEL

BLICK art materials

assembly instructions
For model 51753-1010

hardware

No tools required

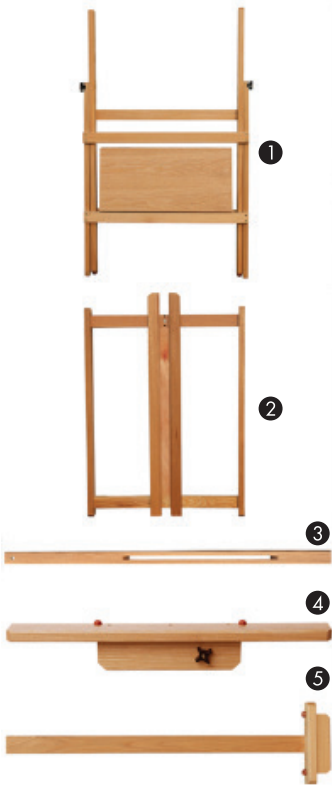

1




Unfold so legs are fully extended. (If necessary, first loosen the knobs at the joint where the legs meet.)




Tighten the knobs to stabilize.

2

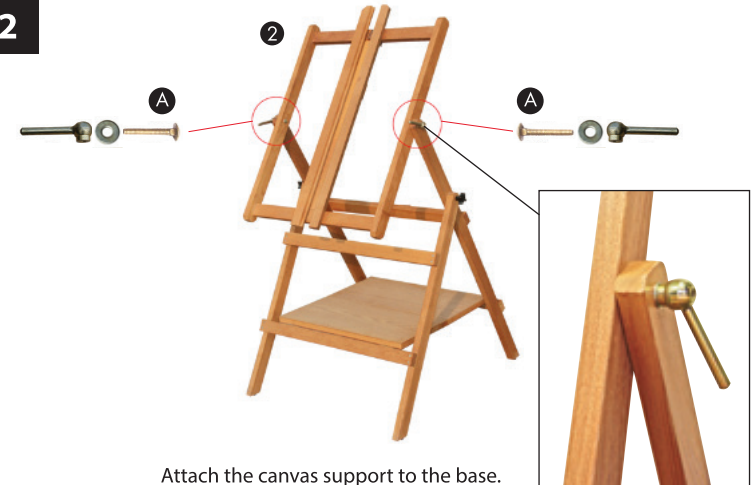

Attach the canvas support to the base.

3

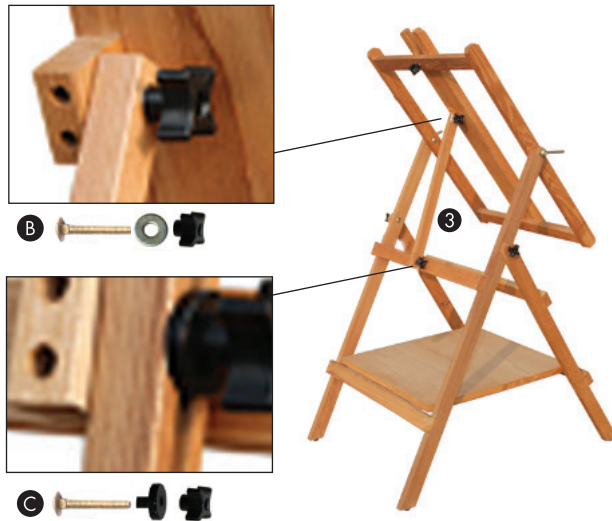


Attach the stabilizer to the base and the canvas support. The knobs allow you to adjust the canvas support position, and lock it in place.

4



Attach the bottom canvas tray by sliding the base into the channel on the canvas support, from the top.

5

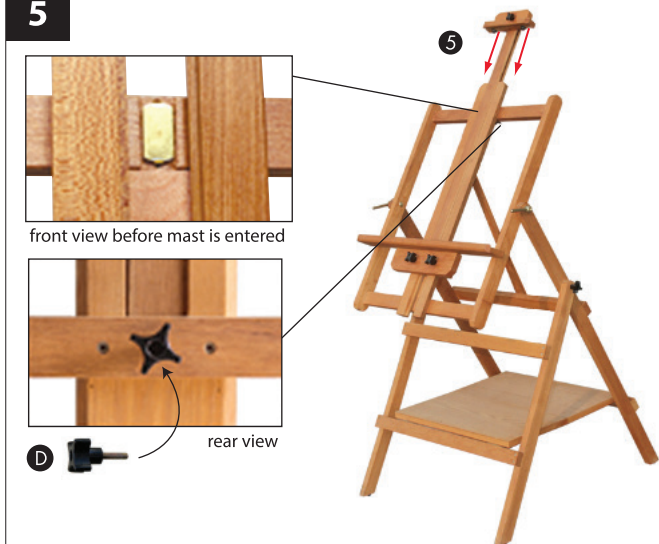

Insert the knob behind the protective plate, then slide the top mast of the canvas tray into the channel on the canvas support.