



ERGOBAG PRIME

How to attach the Gym Bag



1

Attach the upper buckle to the handle of the ergobag.



2

Fasten the buckles to the sides of the ergobag.

