

Marshall

**BROMLEY 150
PARTY SPEAKER**

SPARE PART INSTRUCTIONS

CONTENTS

INDEX

Replacing the corner caps	003
Replacing the carrying strap anchors	005
Replacing the carrying handle	009
Replacing the battery lid	012
Replacing the front grille	013
Replacing the side panel knobs	015

INSTRUCTIONS

ENGLISH


REPLACING THE CORNER CAPS

Before starting the procedure, make sure that you are working in a well-lit, clean, and clutter free-area. All cables should be disconnected and the speaker powered off. You will need a Hex screwdriver, size 3 mm (H3) and a flathead screwdriver to replace the corner caps.

Note! This instruction applies to all four caps.

REMOVING THE CORNER CAP

- I. Use a H3 screwdriver to remove the 4 screws securing the cap.
- II. Gently pry on the corner cap using a flathead screwdriver to loosen it.
- III. Remove the old cap.

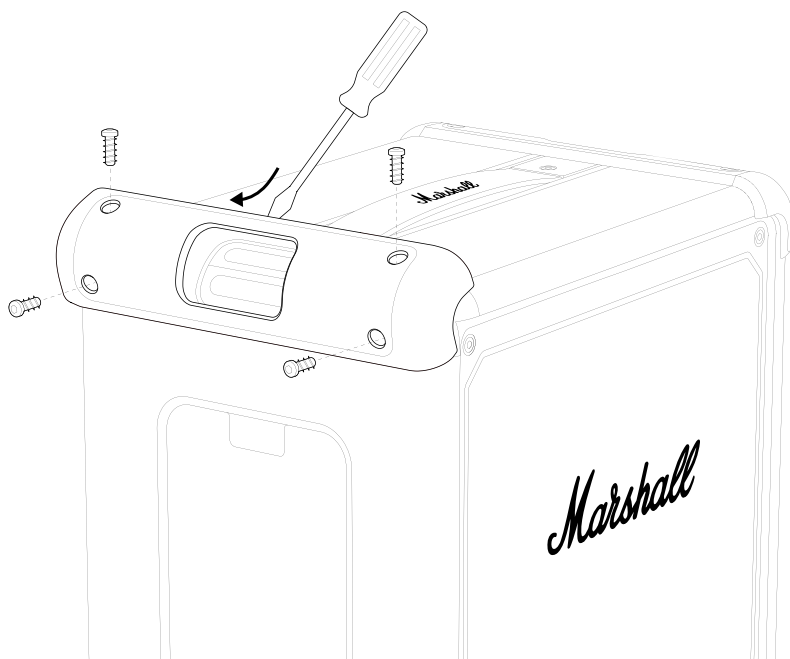


INSTRUCTIONS

ENGLISH

ATTACHING THE NEW CORNER CAP

- I. Position the new cap on the speaker. Check that the pins on the cap align with the holes on the speaker.
- II. Use a H3 screwdriver to fasten the 4 screws securing the cap to the speaker.

Make sure to recycle old parts and packaging in a correct manner.

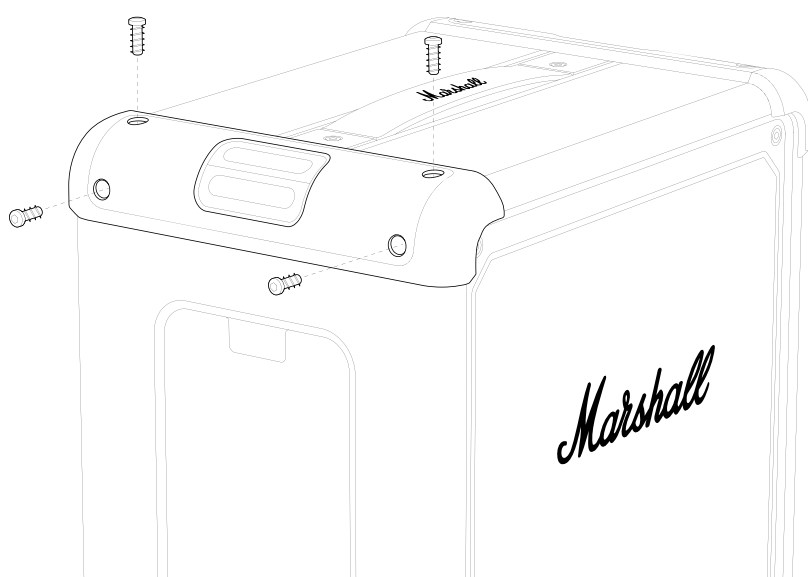

INSTRUCTIONS

ENGLISH


REPLACING THE CARRYING STRAP ANCHORS

Before starting the procedure, make sure that you are working in a well-lit, clean and clutter-free area. All cables should be disconnected and the speaker powered off. You will need a Hex screwdriver, size 3 mm (H3) and a flathead screwdriver to replace the carrying strap anchors.

Note! This instruction applies to all four anchors.

REMOVING THE CORNER CAP

- I. Use a H3 screwdriver to remove the 4 screws securing the cap.
- II. Gently pry on the corner cap using a flathead screwdriver to loosen it.
- III. Remove the corner cap.

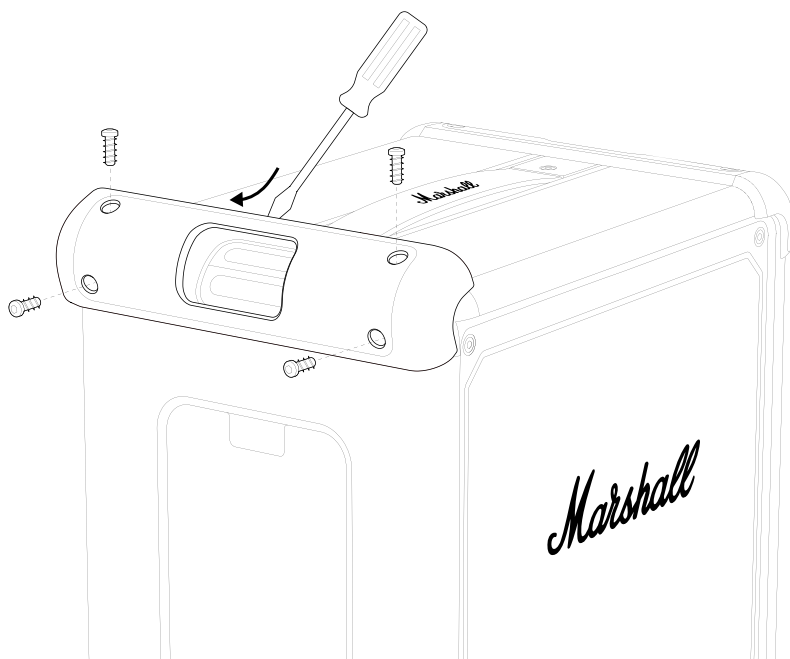


INSTRUCTIONS

ENGLISH

REMOVING THE CARRYING STRAP ANCHOR

- I. Use a H3 screwdriver to remove the 2 screws securing the anchor.
- II. Gently pry on the anchor using a flathead screwdriver to loosen it.
- III. Remove the old carrying strap anchor.

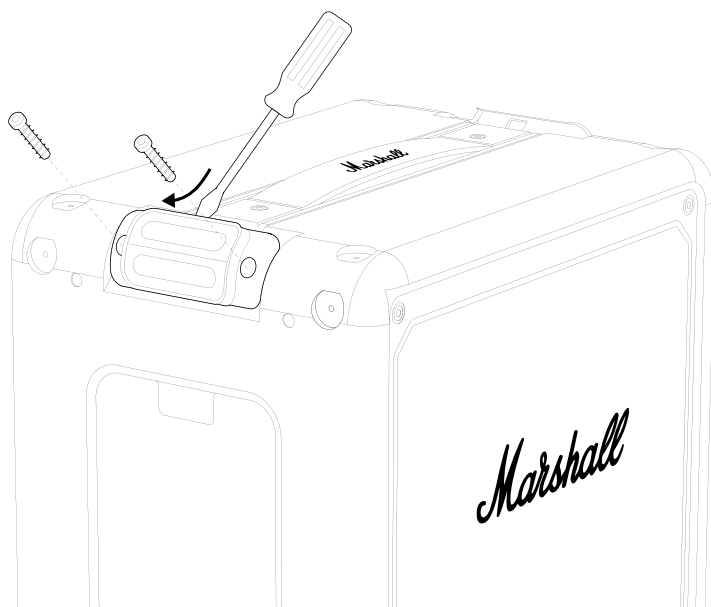


INSTRUCTIONS

ENGLISH

ATTACHING THE NEW CARRYING STRAP ANCHOR

- I. Position the new anchor on the speaker. Check that the pins on the anchor align with the holes on the speaker.
- II. Use a H3 screwdriver to fasten the 2 screws securing the anchor to the speaker.

Make sure to recycle old parts and packaging in a correct manner.

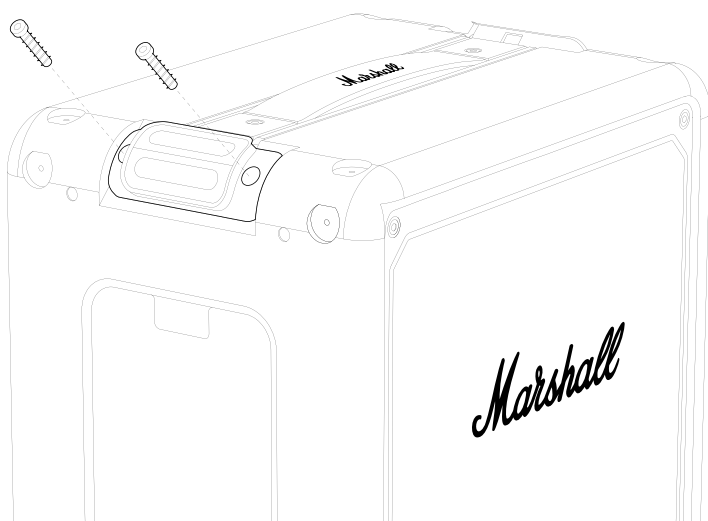


INSTRUCTIONS

ENGLISH

REATTACHING THE CORNER CAP

- I. Position the corner cap on the speaker. Check that the pins on the cap align with the holes on the speaker.
- II. Use a H3 screwdriver to fasten the 4 screws securing the cap to the speaker.

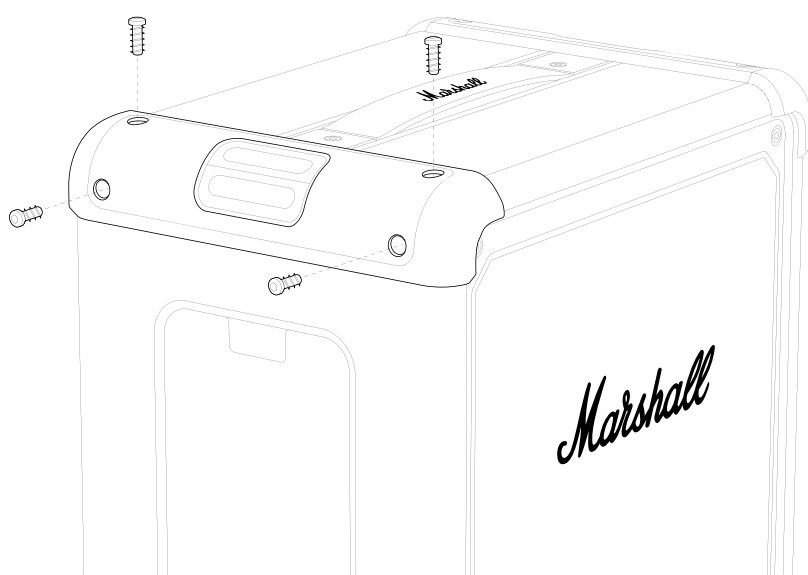

INSTRUCTIONS


ENGLISH

REPLACING THE CARRYING HANDLE

Before starting the procedure, make sure that you are working in a well-lit, clean and clutter-free area. All cables should be disconnected and the speaker powered off. You will need a Hex screwdriver, size 3 mm (H3) to replace the carrying handle.

REMOVING THE CORNER CAP

- I. Use a H3 screwdriver to remove the 4 screws securing the cap.
- II. Gently pry on the corner cap using a flathead screwdriver to loosen it.
- III. Remove corner cap.

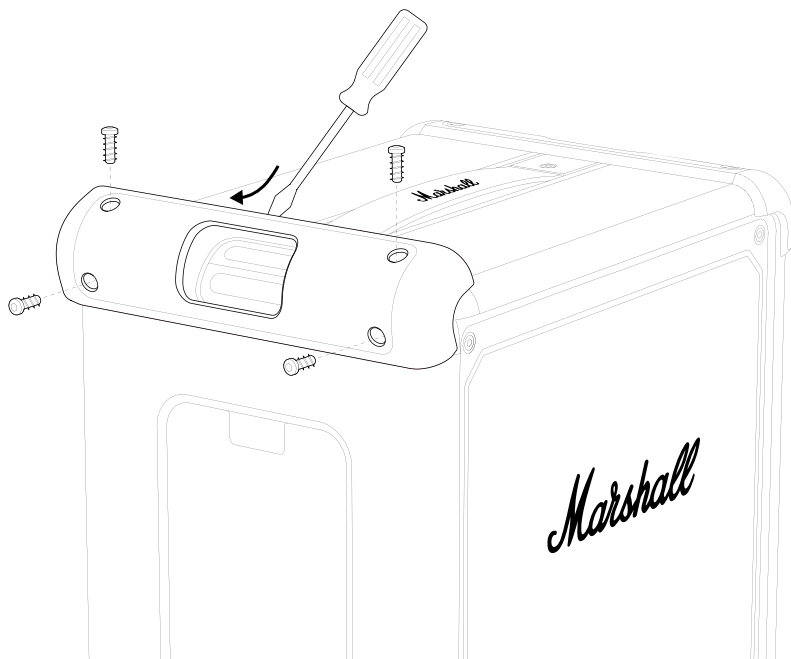

INSTRUCTIONS

ENGLISH


REMOVING THE CARRYING HANDLE

- I. Use a H3 screwdriver to remove the 2 screws securing the handle.
- II. Gently pry on the anchor using a flathead screwdriver to loosen it.
- III. Remove the old handle.

ATTACHING THE NEW CARRYING HANDLE

- I. Position the new handle on the speaker. Check that the pins of the handle align with the holes on the speaker.
- II. Use a H3 screwdriver to fasten the 2 screws securing the handle to the speaker.

Make sure to recycle old parts and packaging in a correct manner.

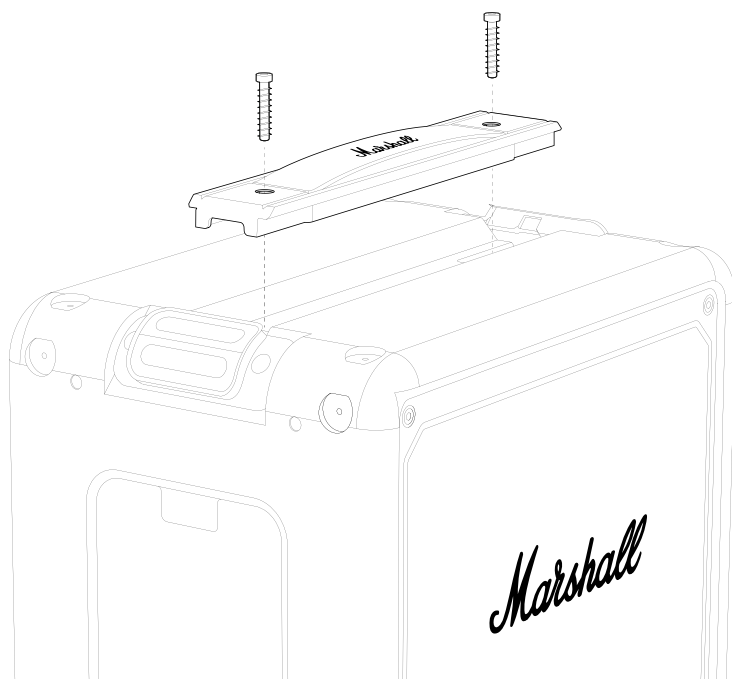


INSTRUCTIONS

ENGLISH

REATTACHING THE NEW CORNER CAP

- I. Position the corner cap on the speaker. Check that the pins on the cap align with the holes on the speaker.
- II. Use a H3 screwdriver to fasten the 4 screws securing the cap to the speaker.

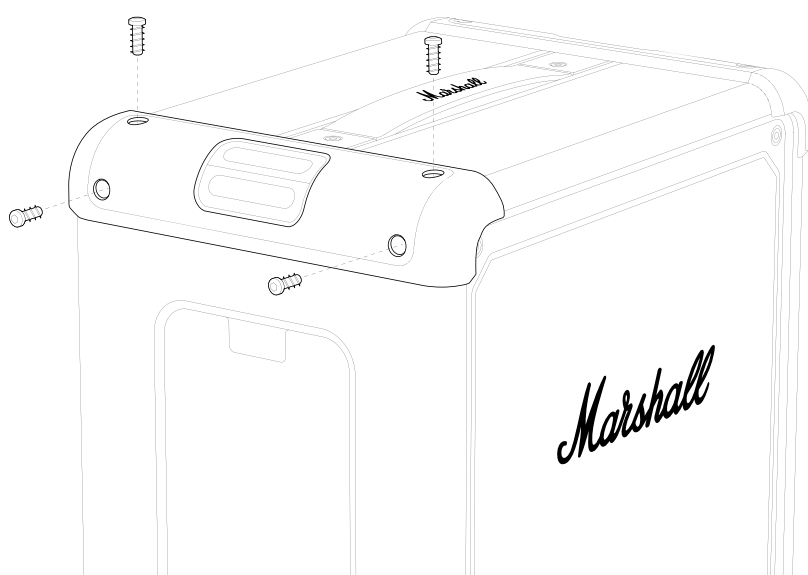

INSTRUCTIONS

ENGLISH

REPLACING THE BATTERY LID

Before starting the procedure, make sure that you are working in a well-lit, clean and clutter-free area. All cables should be disconnected and the speaker powered off.


REMOVING THE BATTERY LID

- I. Open the battery lid.
- II. Pull on the lower part of the battery lid to remove it from the speaker.

ATTACHING THE NEW BATTERY LID

- I. Position the new lid and align the tabs on the lid with the two holes on the speaker.
- II. Push on the bottom of the lid until it sits flat against the speaker.
- III. Close the battery lid.

Make sure to recycle old parts and packaging in a correct manner.

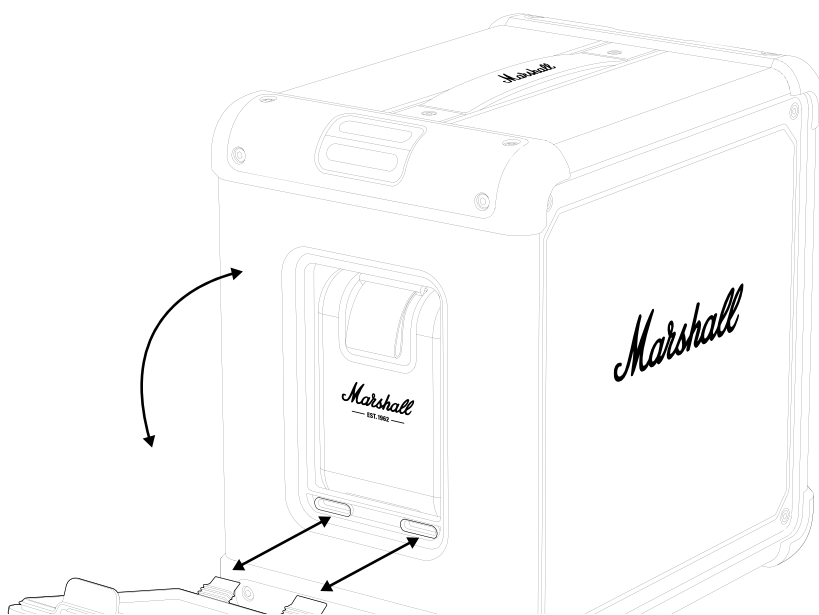

INSTRUCTIONS


ENGLISH

REPLACING THE FRONT GRILLE

Before starting the procedure, make sure that you are working in a well-lit, clean, and clutter-free area. All cables should be disconnected and the speaker powered off. You will need a Hex screwdriver, size 3 mm (H3) and a flathead screwdriver to replace the front grille.

REMOVING THE FRONT GRILLE

- I. Use a H3 screwdriver to remove the 6 screws holding the front grille in place.
- II. Then use a flathead screwdriver to gently pry open the grille starting from the top right corner as shown in the figure below.
- III. Carefully detach and remove the front grille.

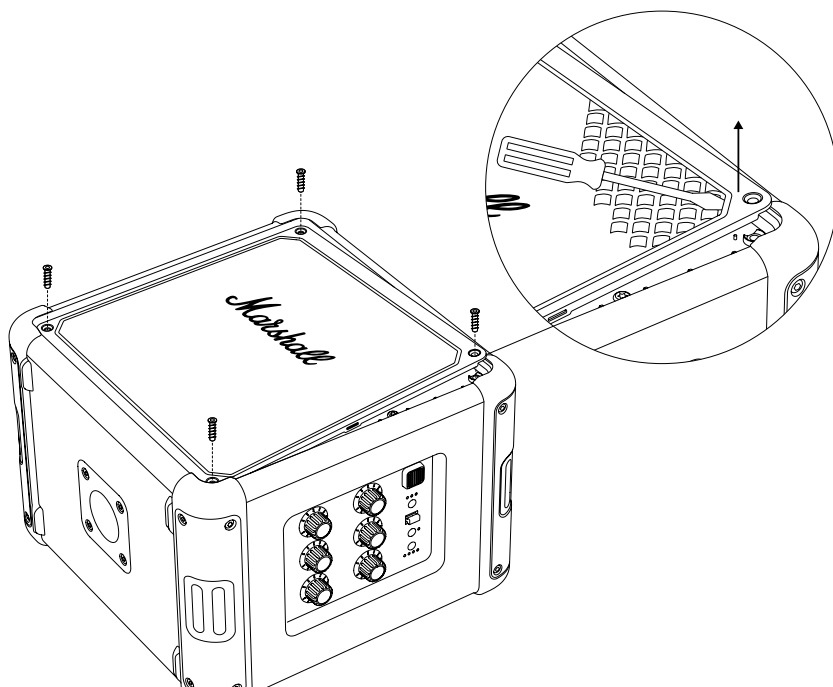


INSTRUCTIONS

ENGLISH

INSTALLING THE NEW FRONT GRILLE

- I. Position the new front grille on the speaker.
- II. Use a H3 screwdriver to fasten the 6 screws securing it to the speaker.

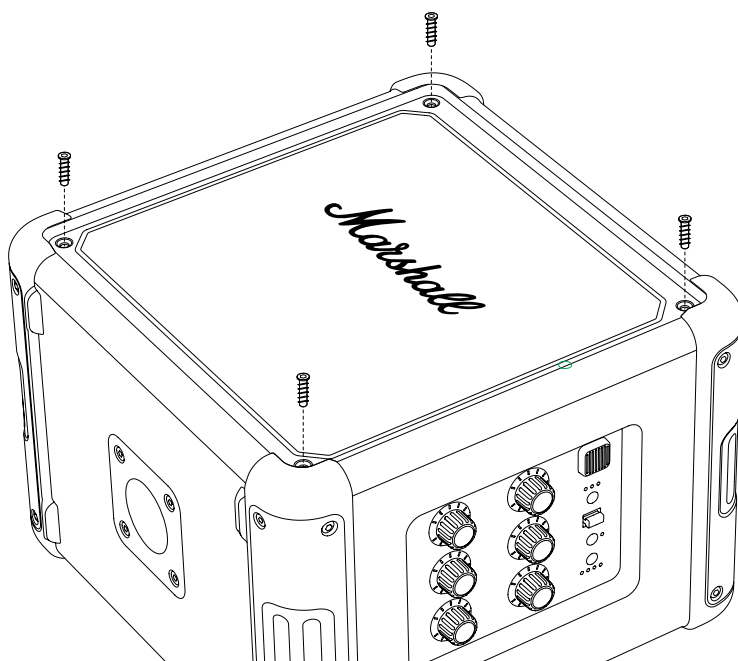

INSTRUCTIONS

ENGLISH

REPLACING THE SIDE PANEL KNOBS

Before starting the procedure, make sure that you are working in a well-lit, clean and clutter-free area.


REMOVING A SIDE PANEL KNOB

- I. Pull the knob straight out, away from the speaker.

ATTACHING THE NEW KNOB

- I. Orient the new knob so that the flat side of the D-shaft matches the notch in the knob.
- II. Place the new knob in position and push it in until it sits securely.

Make sure to recycle old knob in a correct manner.

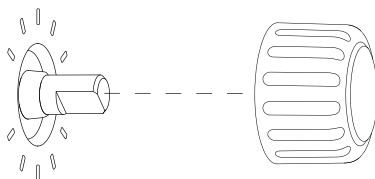

All intellectual property in the product and packaging (including the MARSHALL trade mark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission. All rights reserved. Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. R 0.1