



**HIVE**  
Installer Club

# Gravity

## Wiring support document



# HIVE

Installer Club

## IMPORTANT TO NOTE

- ⚡ **Electricity can kill, safe electrical isolation must be adhered to**
- ⚡ **All mandatory electrical checks must be carried out in line with current regulations and specific attention should be drawn to your companies Safe Working Practices**
- ⚡ **All service checks required under regulation 26.9 should be followed at all times when working on gas appliances**



- ⚡ Find brown wire on central heating zone valve
- ⚡ Linked in to the brown wire will be another wire. This will be 'calling' from the room thermostat
- ⚡ This is the room thermostat cable
- ⚡ There are other wires in the cable, one of which is normally the neutral
- ⚡ The other wire will be the 'common'.
- ⚡ Linked into the 'common' will be central heating on from the programmer
- ⚡ Remove the room thermostat cable and link the central heating on wire and the brown wire together
- ⚡ The wiring has now been installed for Hive in the wiring center
- ⚡ Place the Hive in GRAVITY mode if the system has gravity Hot Water primaries with no control valve and auxiliary switch
- ⚡ If the switch is set to GRAVITY, whenever the Heating output is switched ON the Hot Water output will also be switched ON regardless of the current Hot Water program

