

OSGLKUN18V1



Hive Leak Sensor

Quick Start Guide



©2018 Centrica Hive Limited (trading as Hive).
Registered in England (No. 5782908).
Registered office: Millstream, Maidenhead Road, Windsor,
Berkshire, SL4 5GD, UK.
All rights reserved.



Setting up your Hive Leak Sensor

1. If you're new to Hive, start by downloading the app. Once installed, tap **Create Account** on the login screen and follow the on-screen instructions.



If you're already a Hive customer, open your app, then go to **Install devices** which you can find in the Menu, then tap on **Hive Leak Sensor**.

2. Next, follow the instructions on the Hive app. We'll walk you through connecting the device to your Wi-Fi, and installing it onto your pipe. You can review our how-to-use videos along with hints and tips at hivehome.com/help.

Usage

Your Hive Leak Sensor should be attached to indoor pipework in a dry environment only.

Battery

When replacing the batteries in your Hive Leak Sensor please use 2 x AA alkaline batteries. Do not use rechargeable batteries as they may damage the device. Batteries can explode or leak if heated, disassembled, shorted, recharged, or exposed to fire or high temperature. Keep batteries away from children. If swallowed, consult a physician at once. Keep in original package until ready to use. Do not carry batteries loose in your pockets or purse.