



Farm Map

Fields and Crop Zones


1. Upon signing into [FarmENGAGE](#), you will see the "Map" page as your home page
2. You can easily see your Fields by looking through the hierarchy on the left or by moving the map

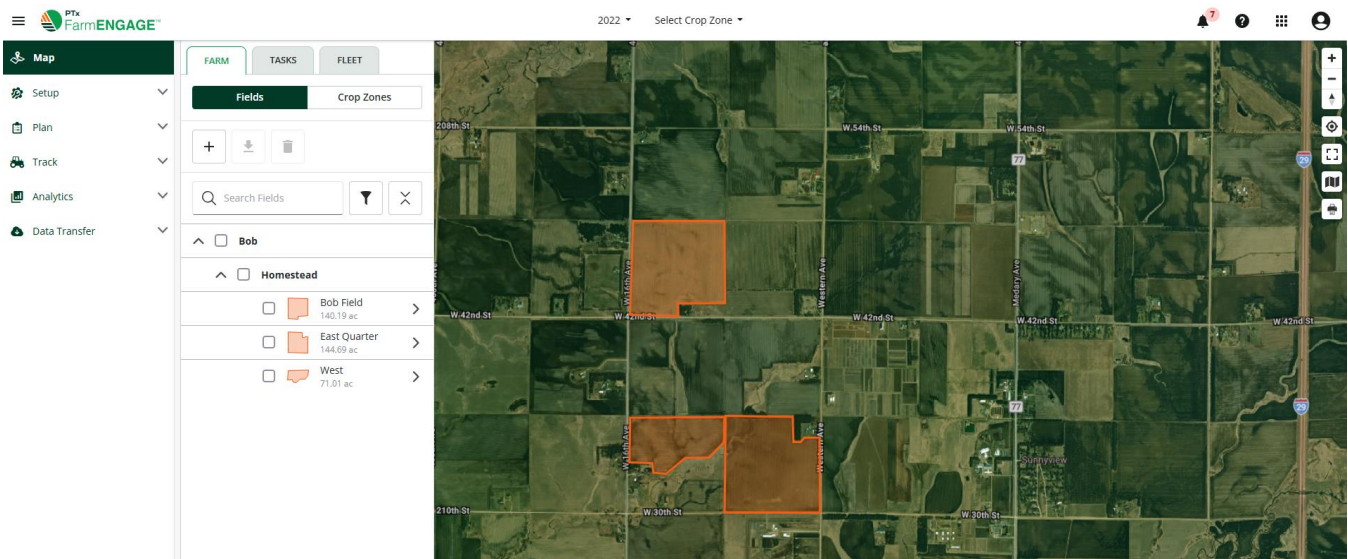


3. Select a field to view the details panel for the field.

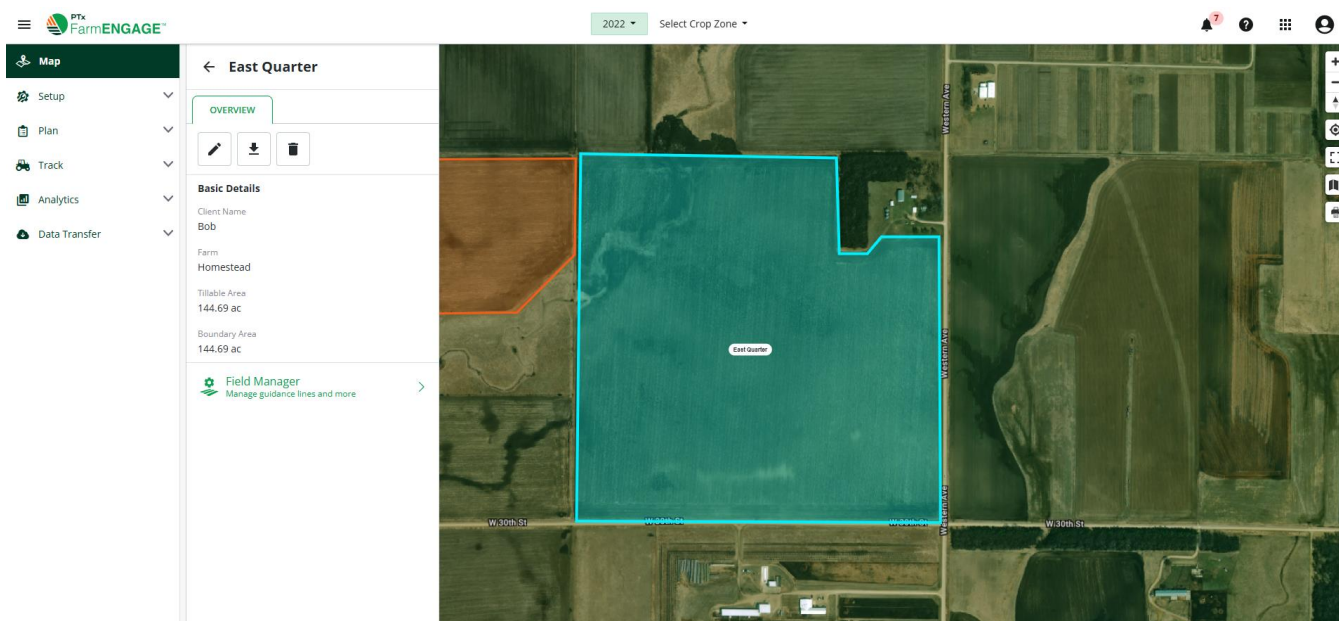

4. Select the checkboxes next to the fields to bulk download or delete fields.
5. You are able to search for fields or filter fields by client or farm.

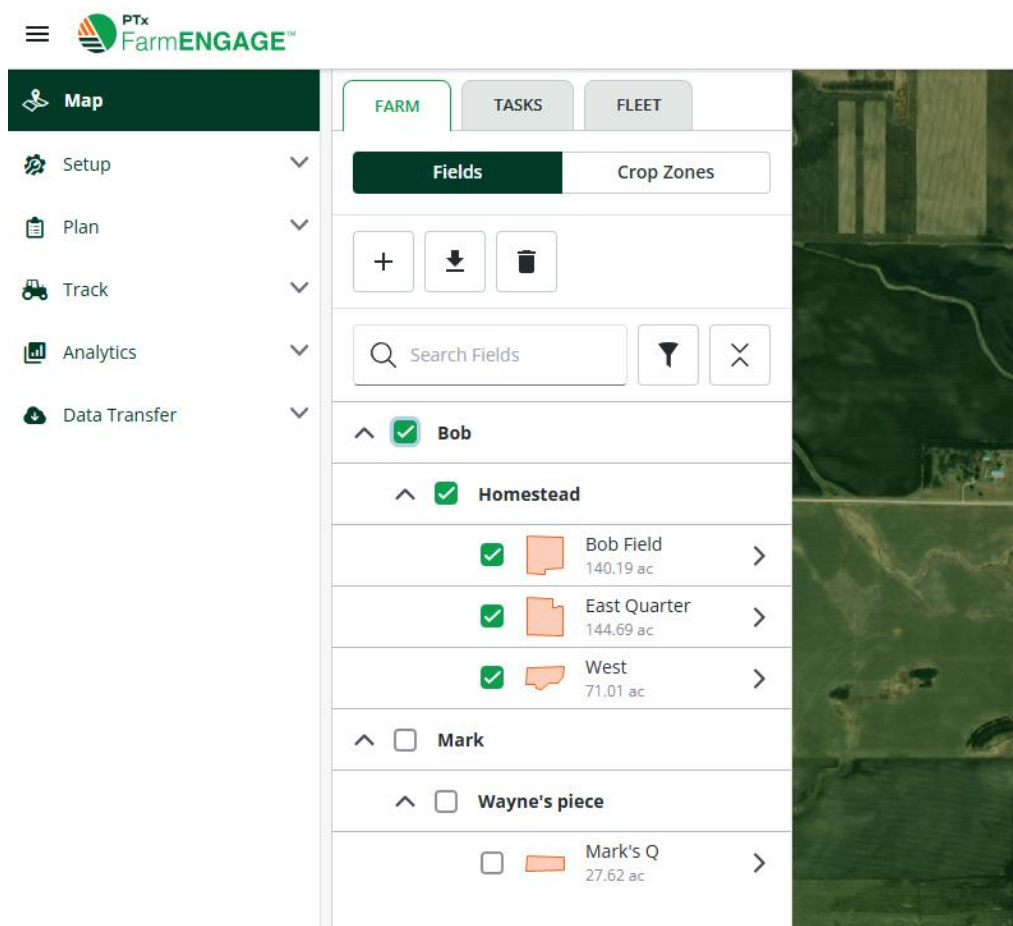


6. You can also view Crop Zones by clicking on the Crop Zones tab
7. You can click on the Crop Zone to view more information on the crop, farm, yield, and tillable area

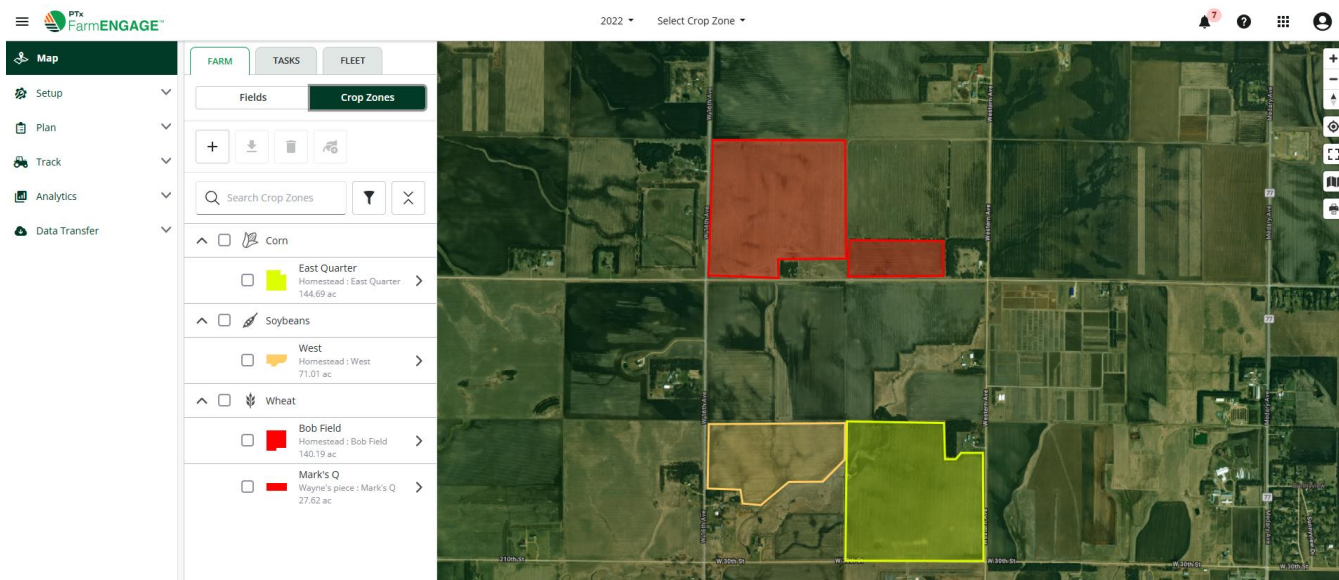

How to Add and Manage Tasks


1. Upon signing into FarmENGAGE, you will see the "Map" page as your home page
2. Click on the "Tasks" tab on the Map page
3. You are able to bulk delete, view reports, or export tasks by selecting the checkboxes on tasks in the list.
4. You can search tasks or filter by fields, crop zones, vehicle, implement, etc.
5. Select the task to view the details panel for the task.

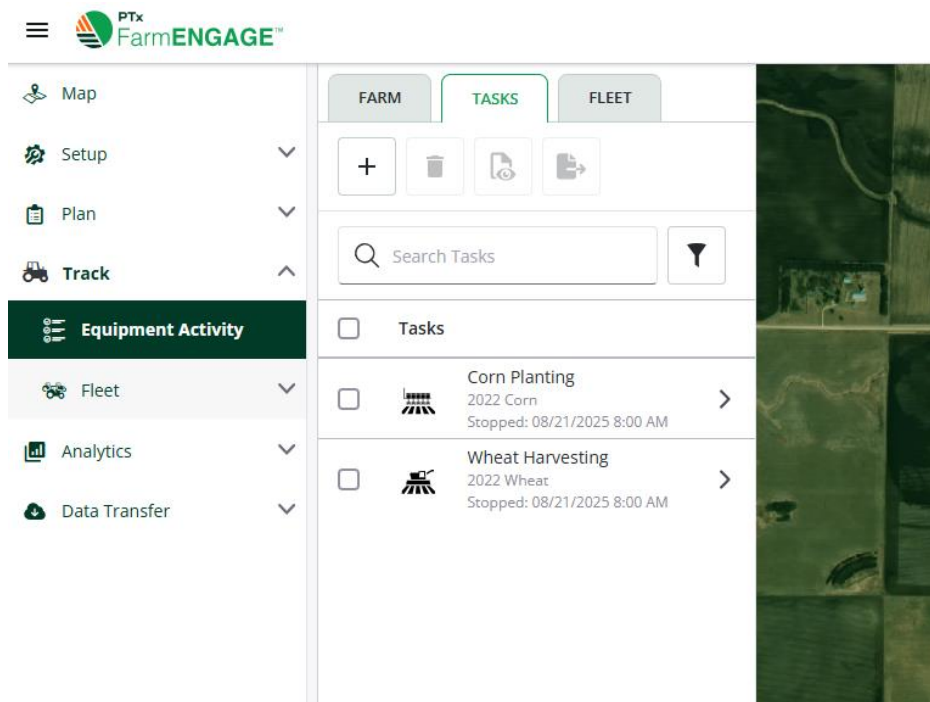

6. Tap the “+” symbol to add a task




7. Adding a task will navigate you to Equipment Activity
8. Chose the field to add the task
9. Add the operation to the task and any other information to effectively track the task details

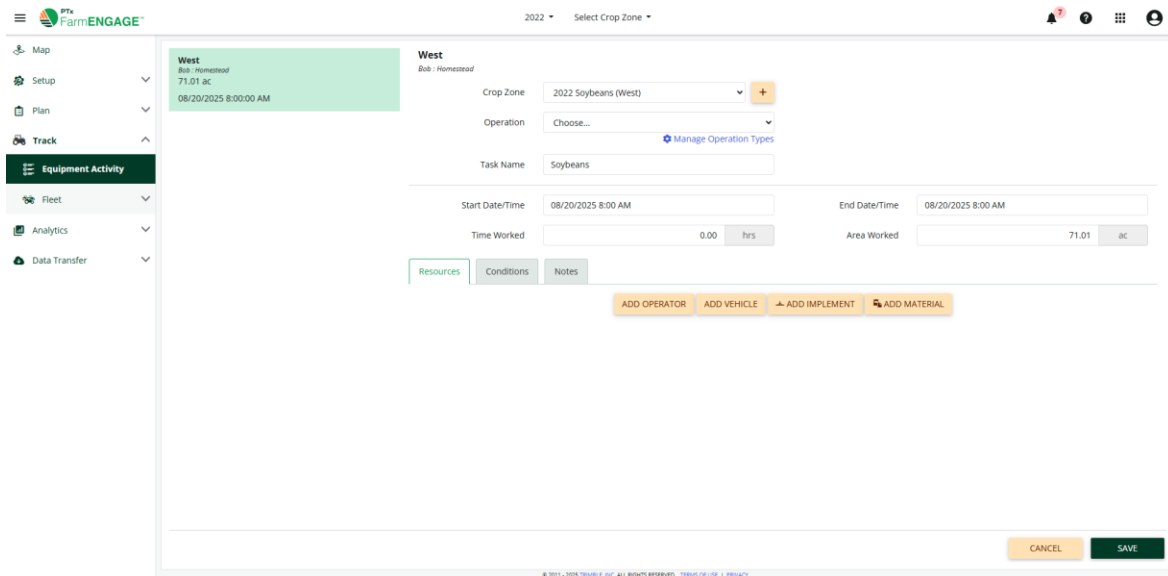

10. Tap save when complete


11. You can now see the task when you navigate back to the Map page

12. Select the task to edit or delete the task

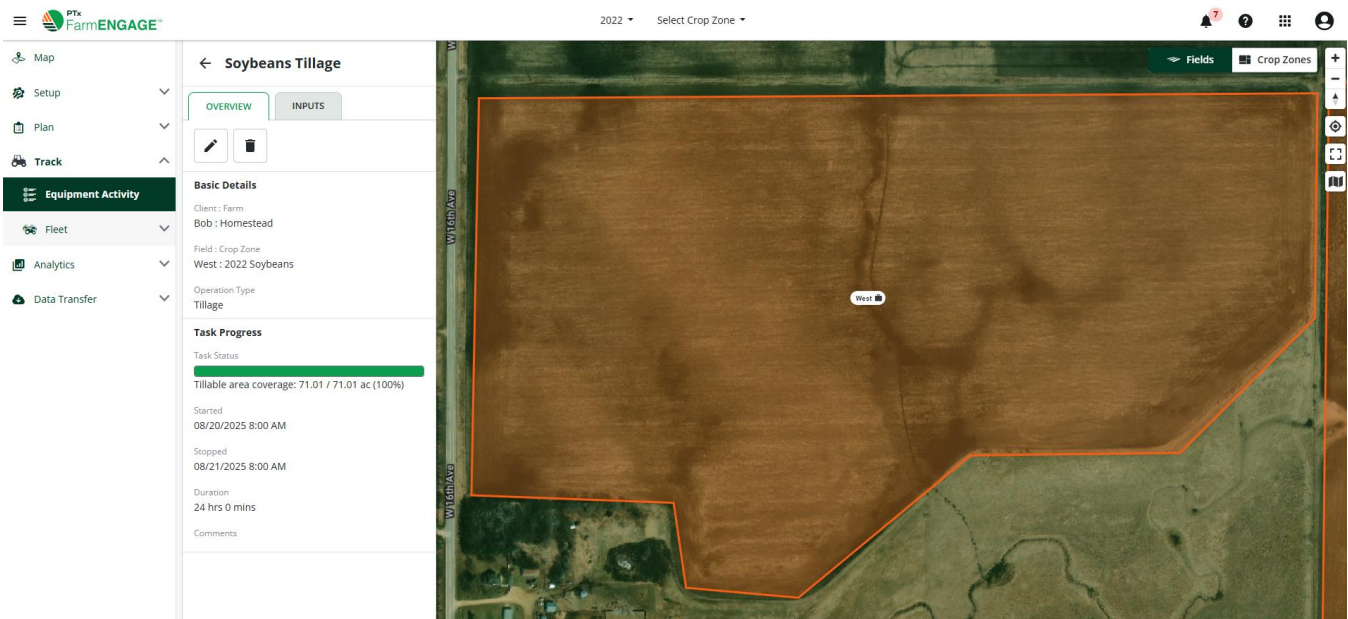


Fleet

1. Upon signing into FarmENGAGE, you will see the "Map" page as your home page
2. Click on the "Fleet" tab on the Map page
3. Here you can view your vehicles information and find them on the map
4. You can add or delete vehicles from the fleet tab by using the icons at the top of the page

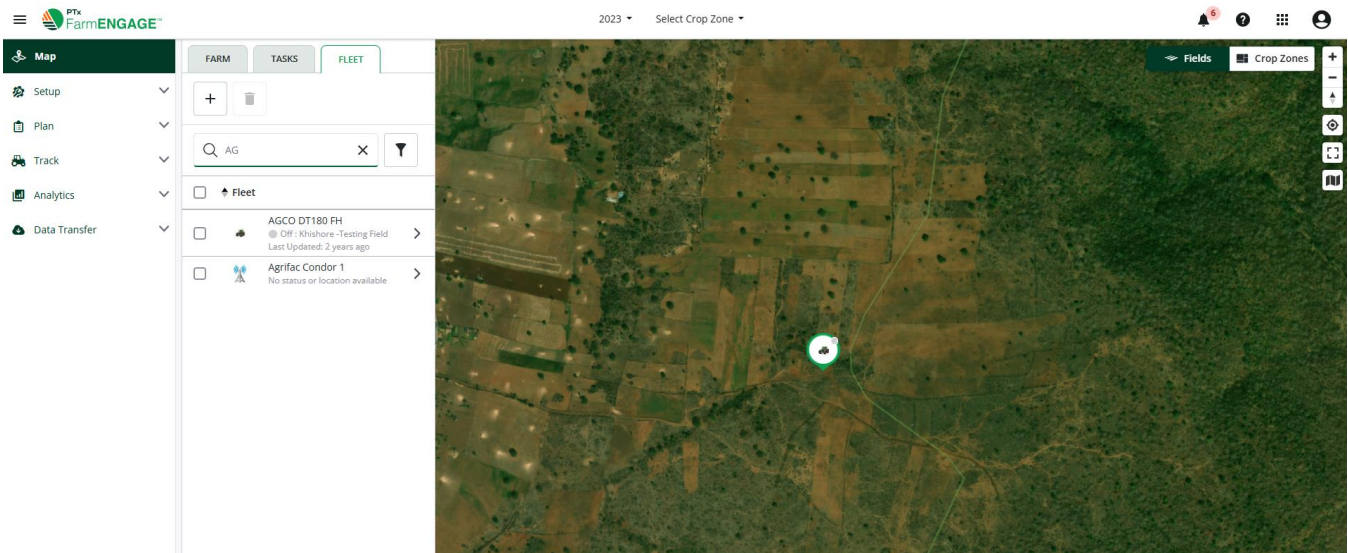

5. Select a vehicle to view the details panel, the map will automatically zoom in to the vehicle
6. You can edit information for the vehicle by using the icons at the top of the page
 - a. You can view the location history of the vehicle at the bottom of the details panel.

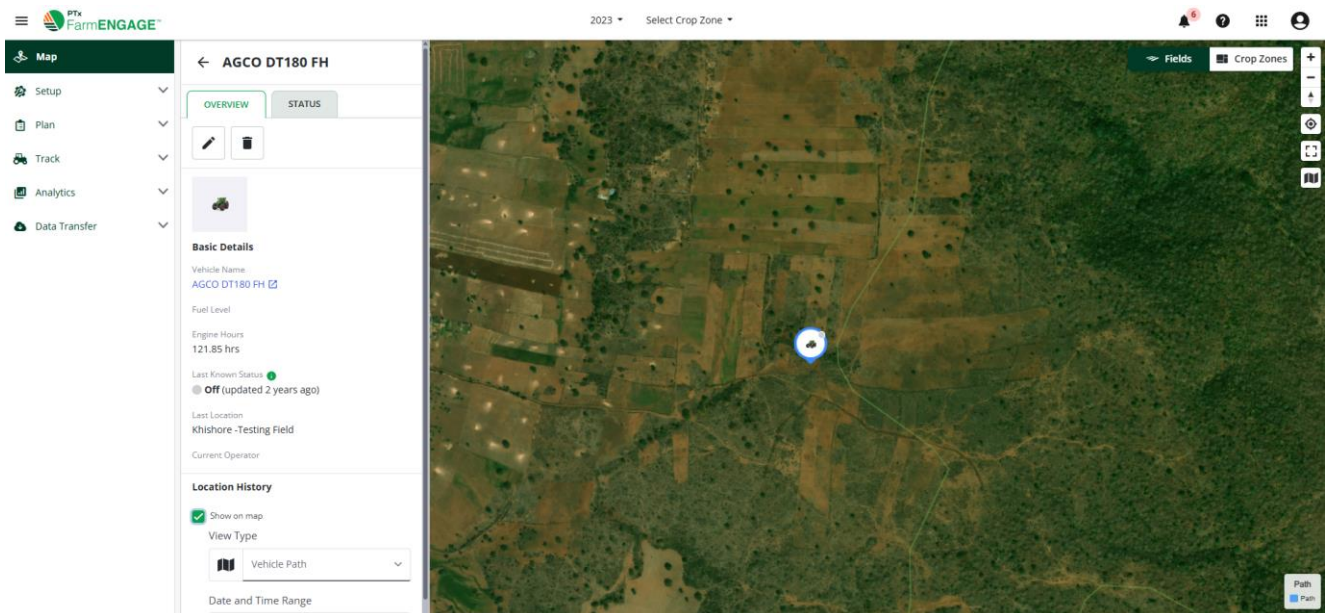

Note – You are able to access the legacy fleet pages when you navigate to Track -> fleet or click the hyperlink on the Vehicle Name.

PTx FarmENGAGE

2023 Select Crop Zone

Map Setup Plan Track Equipment Activity Fleet Vehicles Alerts Operators Utilization Analytics Data Transfer

AG

Vehicle List Date Last Reported - Relative Time Last Known Status Engine Hrs Last Location

Search Results

Vehicle	Date Last Reported - Relative Time	Last Known Status	Engine Hrs	Last Location
AGCO DT180 FH	2 years ago	Off	121.85	In Khishore -Testing Field
Agrifac Condor 1		no current status	0.00	Unknown

CLEAR SEARCH

MANAGE

Printing a Farm Map

1. Upon signing into FarmENGAGE, you will see the "Map" page as your home page
2. Click on the "Farm" tab on the Map page
3. On the Farm tab of the Map page click on the printer symbol on the right-hand side of the page
 - a. You can view Fields or Crop Zones to print
 - b. If you do not see the printer icon, make sure to zoom in closer to your fields so that no more cluster pins remain on the screen

PTx

2025 Select Crop Zone

Map FARM TASKS FLEET

Fields Crop Zones

+ -

Search Fields

Close Ranch

South

- Fence Row 13.25 ac
- Highway 50.49 ac
- North hay 6.84 ac
- RR Tracks 77.55 ac
- Wheat patch 28.41 ac

Unassigned

Unassigned

David 1

1

Map

Fields

North hay

RR Tracks

Fence Row

David 1

4. This will launch the Map Builder on another tab with the map view set to what the map looks like when you click the print button
5. Here you can edit the name of the map, print size, orientation, labels, and toggle off and on what to include on the map using the eye symbol
6. When done, click the print button in the top right corner
7. This will download a PDF of the map that you can print

Map Builder

Map Name *

Close Ranch

Print Size *

A4

Orientation *

☒ Landscape
 ☐ Portrait

☐ Show field area on map label

☐ Tillable area
 ☐ Boundary area

☒ Show client and farm name on map label

Fields (4)

Close Ranch (3)

South (3)

Fence Row

13.25 ac

North hay

6.84 ac

RR Tracks

77.55 ac

Unassigned (1)

Inaccionad / 1

Print