URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

Dril, Phillips head screwdriver, Hammer, Pencil

WARNINGS:

Do not throw away packing materials and carton until after assembly. Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

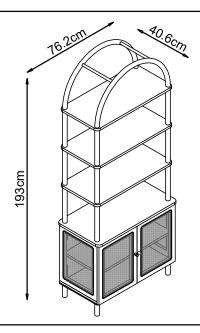


PARTS INCLUDED:

 


1) Bottom (29 x 14.3 x 1.1") x 1 or (73.6 x 36.3 x 2.7 cm)



 
4) Lower Shelf (29 x 14.4 x 0.7") x 1 or (73.7 x 36.5 x 1.8 cm)



 7) Back Panel (27.6 x 18.5 x 1.5") x 1 or (70 x 47.1 x 3.8 cm)



 2) Top Panel (30 x 16 x 1.5") x 1 or (76.2 x 40.6 x 3.8 cm)




5) Left Side Door (28.7 x 19.1 x 1.5") x 1 or (73 x 48.6 x 3.8 cm)




8) Lower Leg (4.7 x 1.3 x 1.3") x 4 or (12 x 3.2 x 3.2 cm)



 3) Upper Shelf (29 x 14.4 x 0.7") x 2 or (73.7 x 36.5 x 1.8 cm)



 6) Right Side Door (28.7 x 19.1 x 1.5") x 1 or (73 x 48.6 x 3.8 cm)




9) Upper Leg (13.2 x 1.3 x 1.3") x 12 or (33.4 x 3.2 x 3.2 cm)

URBAN OUTFITTERS


Assembly Instructions



 10) Arch (28.2 x 14.1 x 1.3") x 2 or (71.6 x 35.8 x 3.2 cm)



 11) Stretcher (12.6 x 0.7 x 0.7") x 2 or (31.9 x 1.8 x 1.8 cm)



12) Shelf (27.3 x 13.4 x 0.7") x 1 or (69.4 x 34 x 1.8 cm)



A) Bolt (D 0.47 / 0.24 x 1.38") x 22 or (D 12 x 35 mm)



B) Spring Washer (D 0.47 / 0.24 x 0.08") x 16 or (D 12 / 6 x 2 mm)



C) Flat Washer (D 0.63 / 0.24 x 0.08") x 17 or (D 16 / 6 x 2 mm)



D) Allen Key (D 0.16 x 2.32") x 1 or (D 4 x 59 mm)



E) Handle (D 0.6 x 1") x 2 or (D 16 x 25 mm)



F) Handle Screw (D 0.16 x 1") x 2 or (D 4 x 25 mm)



G) Shelf Peg (1.2 x 0.6 x 0.6") x 4 or (30 x 15 x 15 mm)

 


H) L Shaped Metal (D 2.76 x 0.79 x 0.08") x 1 or (70 x 20 x 2 mm)



I) Plastic Anchor (D 0.35 x 1.38") x 1 or (D 9 x 35 mm)





or (D 4 x 30 mm)



K) Bolt (D 0.47 / 0.24 x 0.59") x 1

or (D 12/6 x 15 mm)



L) Magnet (D 1.77 x 0.59 x 0.59") x 2

or (D 45 x 15 x 15mm)



M) Screw (D 0.14 x 0.59") x 4 or (D 3.5 x 15 mm)

URBAN OUTFITTERS


Assembly Instructions


STEP 1

Connect the Stretchers (11) to the Arches (10) as shown.

STEP 2


Attach the Upper Shelf (3) to the Arches (10), by screwing Upper Legs (9) through the Upper Shelf (3) into the Arches (10) as shown.

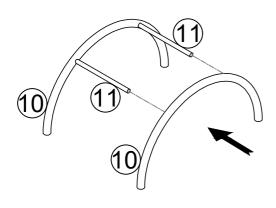

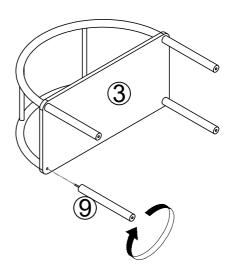

STEP 3

Repeat **STEP 2** with additional Upper Shelves (3), Legs (9) and Lower Shelf (4). Attach the L Shaped Metal (H) to the Lower Shelf (4), with Bolt (K), Spring Washer (B), Flat Washer (C), using Allen Key (D) as shown.

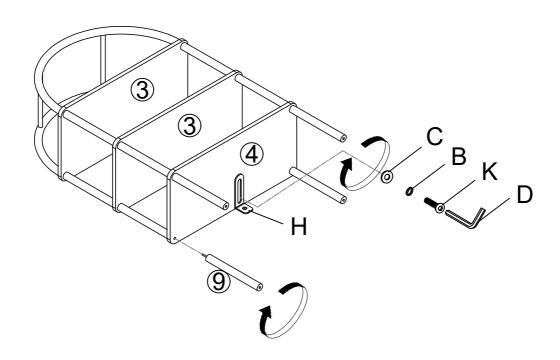


URBAN OUTFITTERS


Assembly Instructions

STEP 4

Attach the Magnets (L) to the Top Panel (2) with Screw (M) using a Phillips head screwdriver as shown. Align the Top Panel (2) so the magnet catch is on the opposite side of the shelves as the L bracket (H) attached to the Lower Shelf (4) Attach the Top Panel (2) to the Upper Legs (9) with Bolts (A), Spring Washers (B), Flat Washers (C), using Allen Key (D).

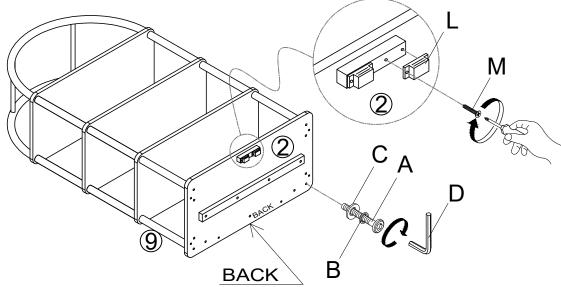


STEP 5
Attach the Back Panel (7) to the Top Panel (2) with Bolts (A), Spring Washers (B), Flat Washers (C), using Allen Key (D) as shown. Then, attach the Left Side Door (5) and the Right Side Door (6) to the Top Panel (2) and the Back Panel (7) with Bolts (A), Spring Washers (B), Flat Washers (C), using Allen Key (D) as shown.

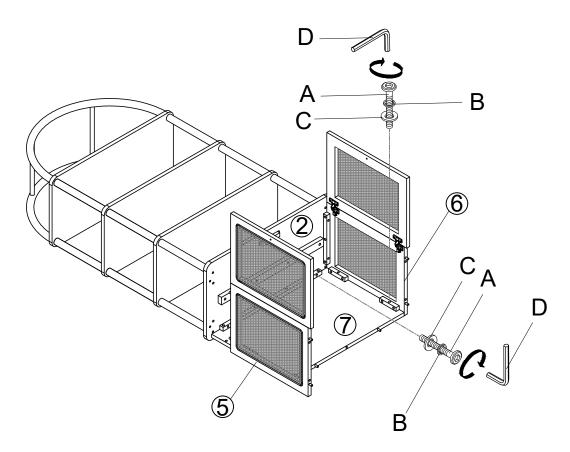


Assembly Instructions

STEP 6

Attach the Bottom (1) with Bolts (A), using Allen Key (D). Then, screw four Lower Legs (8) to the Bottom (1) as shown.

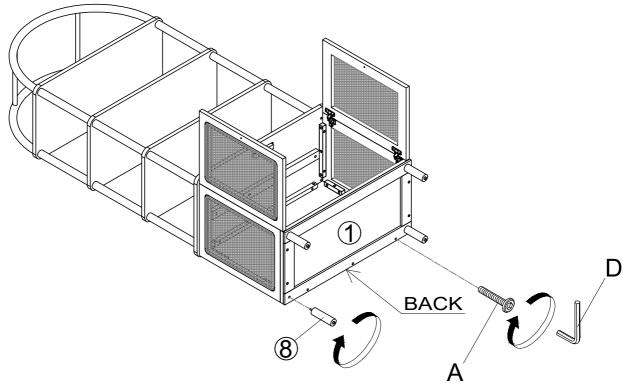

STEP 7
With help, flip the Cabinet upright. Insert four Shelf Pegs (G) into the Cabinet. Insert the Shelf (12) as shown.
Attach the Handles (E) to the Doors (5), (6), with the Screws (F) using a Phillips head screwdriver as shown.

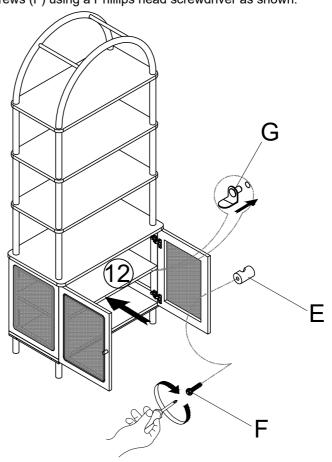

URBAN OUTFITTERS

 
Assembly Instructions

STEP 8

With help, place the furniture on the wall in a preferred location. Adjust the levelers on the bottom of the Lower Legs (8) to accommodate uneven floors.


Wood or Stud Installation:

Insert Screw (J) through the Washer (C) and L Bracket (H) into the wall and tighten with a Phillips head screwdriver or drill.




Drywall Installation:

Ensure the furniture is level and mark the location of the mounting hole in the L shaped metal bracket (H) on the wall. With help, remove the furniture from the wall. Attach the drywall anchor (I) to the wall at the marked location using a drill and hammer.

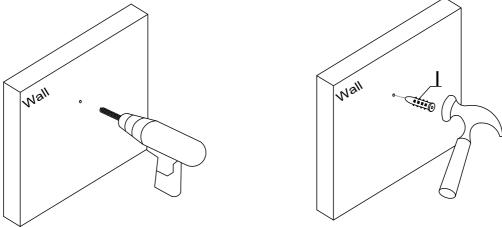

STEP 9

Place the furniture back over the Plastic Anchor (I) and insert Screw (J) with Flat Washer (C) as shown. Tighten with a drill or screwdriver to complete the installation.

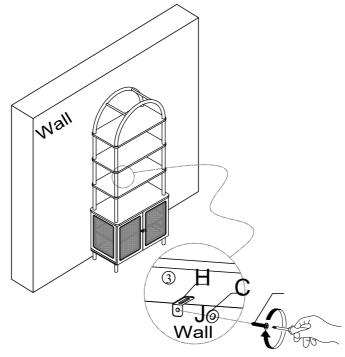

The included hardware is intended for attachment to drywall or wooden wall surfaces, contact your local hardware store to find the correct anchor for alternative wall-types such as stone or brick.