

# Maisie Console

## Assembly Instructions

**URBAN OUTFITTERS**


NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:


Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills with a clean white cloth, do not rub.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

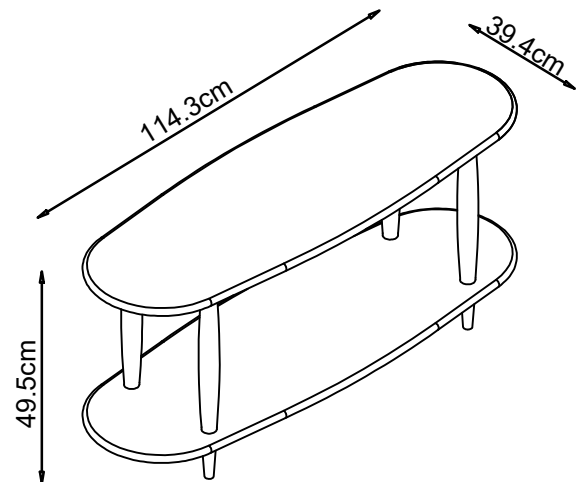


### PARTS INCLUDED:

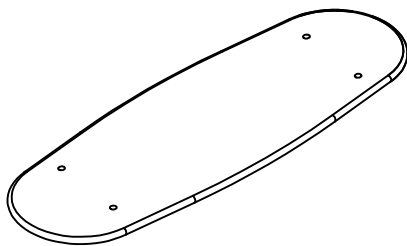

1) Bottom Panel  
(45 x 15.5 x 0.7") x 1  
or  
(114.3 x 39.4 x 1.8 cm)

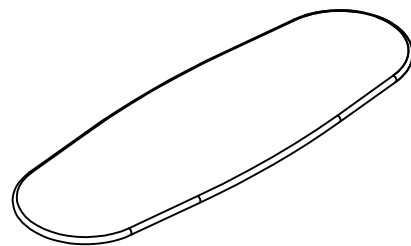

2) Top Panel  
(45 x 15.5 x 0.7") x 1  
or  
(114.3 x 39.4 x 1.8 cm)

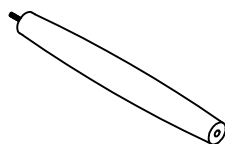

3) Leg  
(14.5 x 1.7 x 1.7") x 4  
or  
(36.9 x 4.4 x 4.4 cm)



4) Leg  
(5.3 x 1.3 x 1.3") x 4  
or  
(13.4 x 3.2 x 3.2 cm)


# Maisie Console

## Assembly Instructions

**URBAN OUTFITTERS**


### STEP 1

Screw the Legs (3) into the Top Panel (2) as shown.

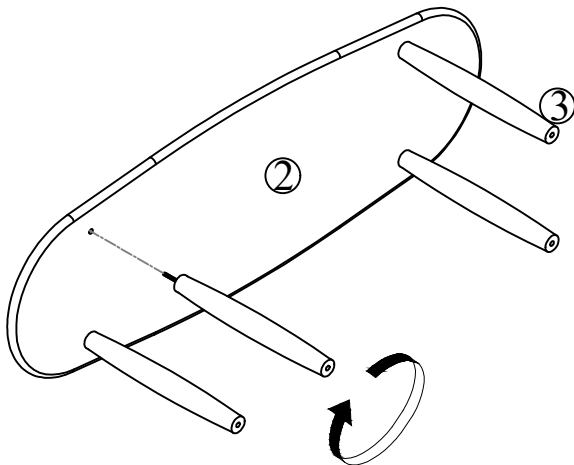

### STEP 2

Align the Bottom Panel (1) to the Legs (3) as shown then, insert the Legs (4) through Bottom Panel (1) and screw them into the attached legs (3) as shown.

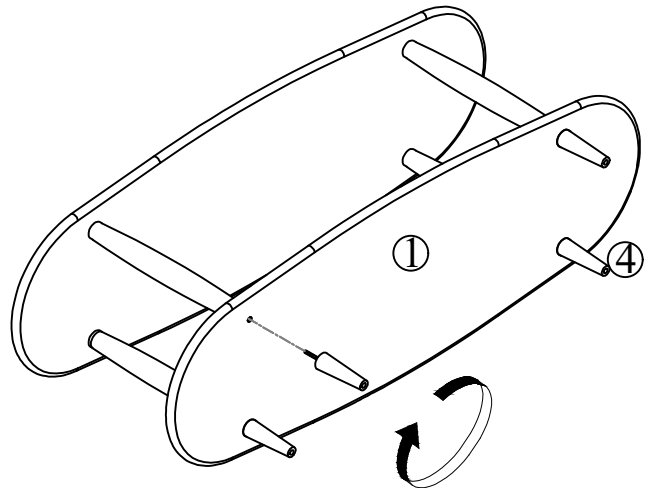

### STEP 3

With help, flip the furniture upright to finish the installation.

