

# MINI RUFFLE LAMP

URBAN OUTFITTERS

## Assembly Instructions

---

### WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use a MAX 2W LED Type G40 / C7 bulb.**

**Do not use bulb that exceeds recommended wattage.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

 
Blot spills with a clean, white cloth; do not rub.

Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.


Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

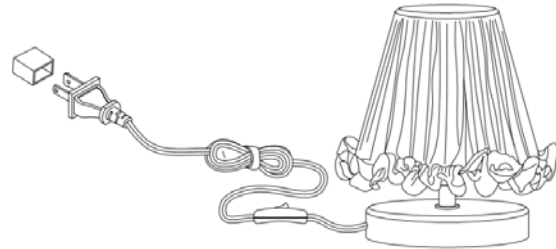


### PARTS INCLUDED:

 ---

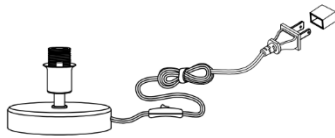

 (A) Lamp Body

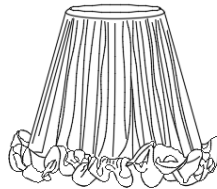

(B) Lamp Shade



(C) Socket Ring



(D) Tool

# MINI RUFFLE LAMP

URBAN OUTFITTERS

## Assembly Instructions

- STEP 1 As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.  
DO NOT PLUG LAMP INTO WALL UNTIL AFTER ASSEMBLY!
- STEP 2 Place the Lamp Shade (B) on the Lamp Body (A) and secure it by screwing the Socket Ring (C) clockwise onto the Lamp Body (A) with the Tool (D).
- STEP 3 Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.
- STEP 4 Plug the lamp into an outlet, turn on switch, and enjoy your lamp.

**Use a MAX 2W LED Type G40 / C7 bulb. DO NOT USE A BULB THAT EXCEEDS THE SPECIFIED WATTAGE.**

