

# Cherry Lamp

## Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use an E12 4W LED light bulb, do not exceed recommended wattage**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

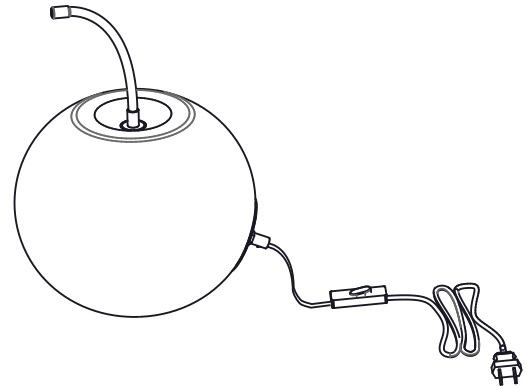

### PARTS INCLUDED:

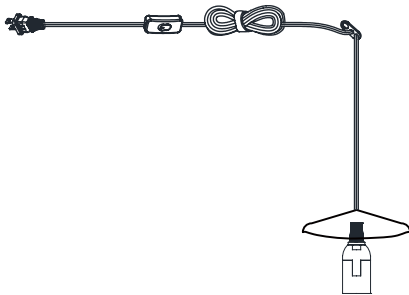


A) Socket / Chord

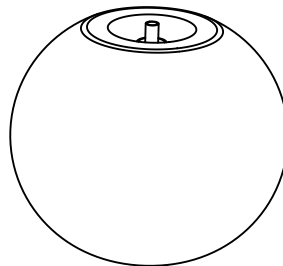

B) Shade



C) Bulb - E12, 4 Watt  
[NOT INCLUDED]

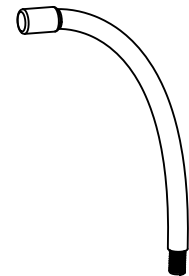

D) Stem


# Cherry Lamp

## Assembly Instructions

URBAN OUTFITTERS

### STEP 1

Screw the stem (D) onto the shade (B). Screw an E12 4W LED bulb (C) or equivalent (not included) into the Socket (A). Then, plug in the lamp to complete assembly.

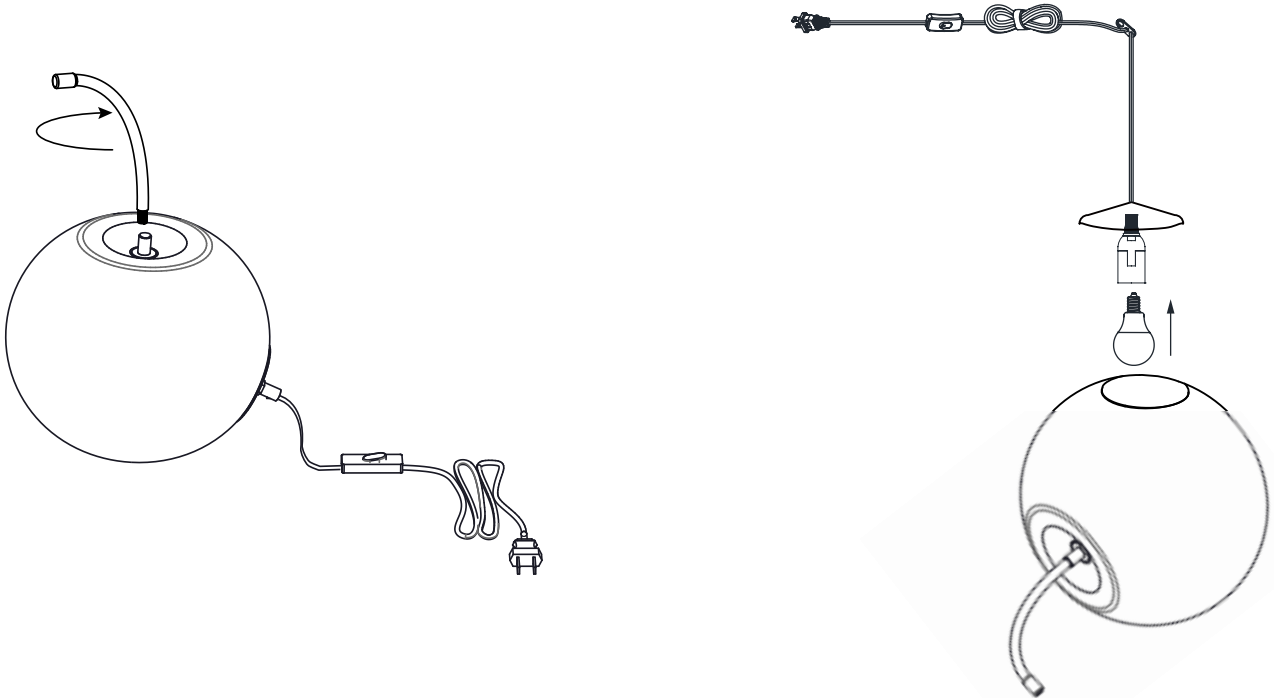

### STEP 2 (optional)

The plastic tab on the chord can be used to hang the lamp as shown below. Contact your local hardware store to purchase the correct hardware for your ceiling, and follow the hardware's mounting instructions to ensure safe installation.

