

AKINA DINING TABLE

Assembly Instructions

URBAN OUTFITTERS

TOOLS REQUIRED BUT NOT INCLUDED:
(Not Applicable)

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTION:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents. Adjust levelers so that the furniture sits flat on uneven floors.

Do not rub blot spills. Clean with a dry white cloth.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

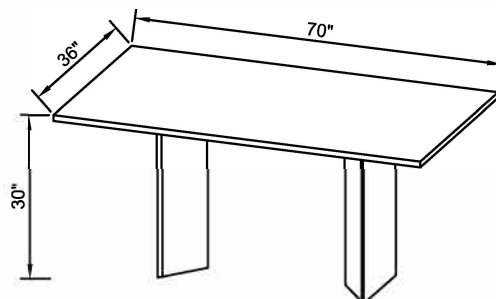

PARTS INCLUDED

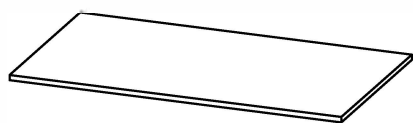

(1) TOP x1



(2) LEG x3



(3) ALLEN CSK BOLT
[M6 X 30MM] x8



(4) ALLEN KEY
[4MM] x1


AKINA DINING TABLE

Assembly Instructions

URBAN OUTFITTERS

STEP 1

With help lay the Top (1) upside down over onto a clean smooth surface. Align Legs (2) as shown and insert Allen bolts (3) (match corresponding part labels) then, tighten with supplied Allen key (4).

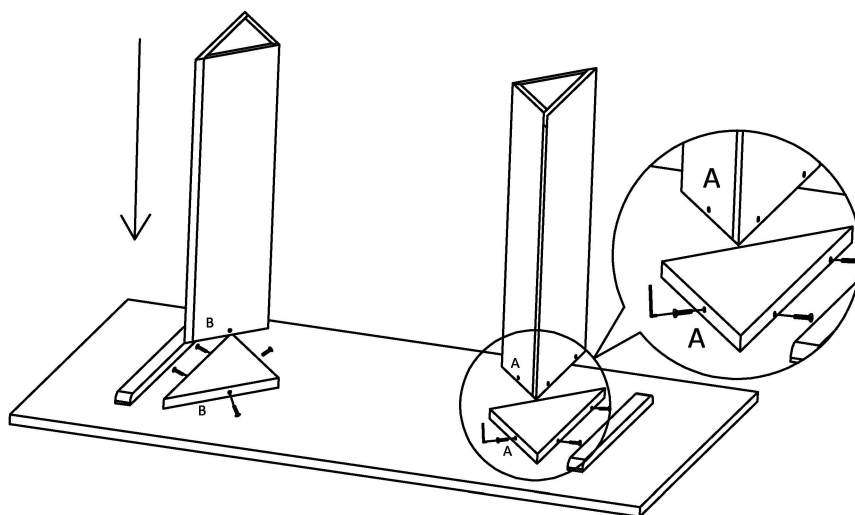

STEP 2

With help, flip the table upright and adjust the levelers as needed to accommodate uneven flooring.

