

Caspar Bench

Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

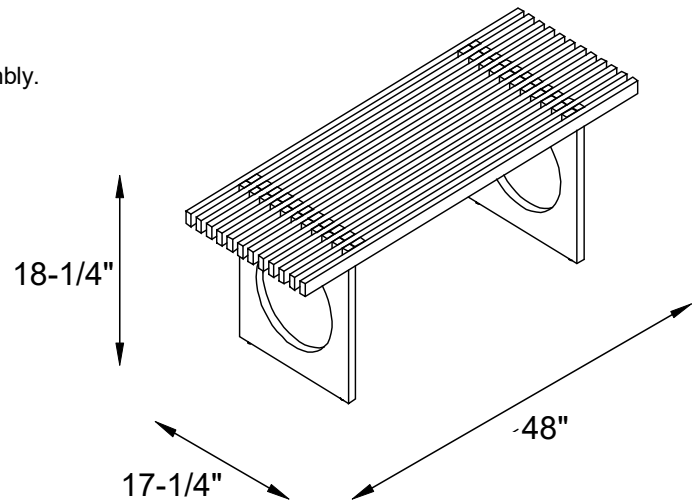

PARTS INCLUDED:

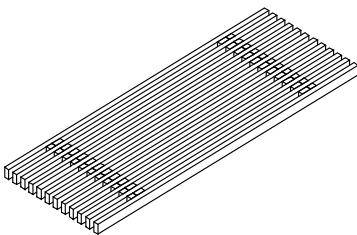

 
(A) Top
x1



(B) Legs
x1



 
(C) Hex key
x1



(D) Bolt
[1/4" x 1-1/4"] x8



 (E) Spring washer
[1/4"] x12



(F) Flat washer
[1/4"] x12

STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the legs (B) to the Top (A) and press firmly into place as shown. Insert the flat washer (F), spring washer (E) and bolt (D) as shown. Tighten with supplied hex key (C).

