

# GOOSE LAMP

URBAN OUTFITTERS

## Assembly Instructions

---

NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

**Use a MAX 25W Type G bulb.**

### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.

 
Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.


Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

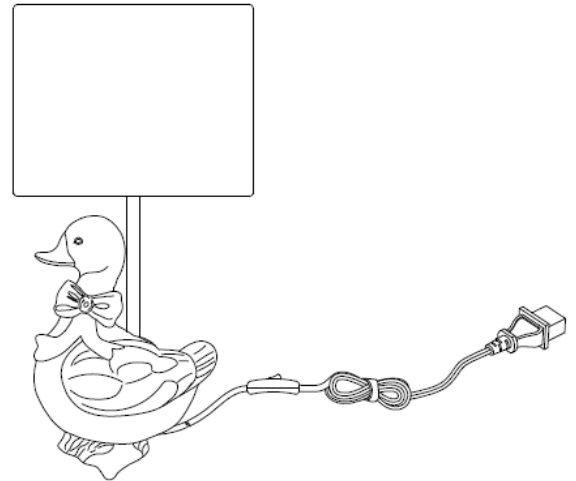


### PARTS INCLUDED:

 ---

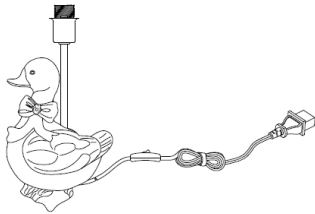

 (A) Lamp Body

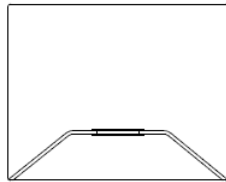

(B) Lamp Shade



(C) Socket Ring

# GOOSE LAMP

## Assembly Instructions

URBAN OUTFITTERS

### STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

### STEP 2

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

### STEP 3

Place the Lamp Shade (B) on the Lamp Body (A). Secure the shade by screwing the Socket Ring (C) onto the Lamp Body (A) clockwise until tight.

### STEP 7

Plug into outlet, turn on switch, and enjoy your new lamp.

**Use a MAX 25W Type G bulb. Do not use bulb that exceeds recommended wattage.**

