

HARPER FLOOR LAMP

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use (2) two MAX 40W Type A incandescent bulbs.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

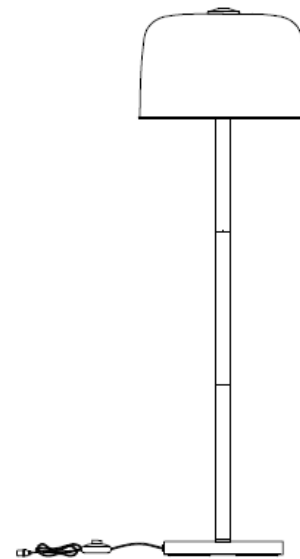

PARTS INCLUDED:



(A) Finial



(B) (D) Plastic Washer
[D20xT1.0mm] x2



(C) Shade



(E) Shade Stem



(F) Socket



(G) Upper Pole



(H) Middle Pole



(I) Lower Pole



(J) Base

HARPER FLOOR LAMP

Assembly Instructions

URBAN OUTFITTERS

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface.

STEP 2

Screw the Lower Pole (I) onto the Base (J) and pull the excess cord from the Base (J).

STEP 4

Screw the Middle Pole (H) to the Lower Pole (I) then, screw the Upper Pole (G) to the Middle Pole (H).

STEP 5

Screw the Socket (F) to the Upper Pole (G) then, screw the Shade Stem (E) into assembled Socket (F).

STEP 6

Place the Plastic Washer (D) on the Shade Stem (E) as shown.

STEP 7

Place the Shade (C) onto the Shade Stem (E) then place the Plastic Washer (B) on top of the Shade (C).

Secure the Shade (C) by screwing the Finial (A) on the Shade Stem (E).

STEP 8

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 9

Plug into outlet, turn on switch, and enjoy your new lamp.

Use (2) two MAX 40W Type A incandescent bulbs. Do not use bulb that exceeds recommended wattage.

