

HIGHLAND COW LAMP

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use a MAX 25W Type G40 bulb.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.

 
Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

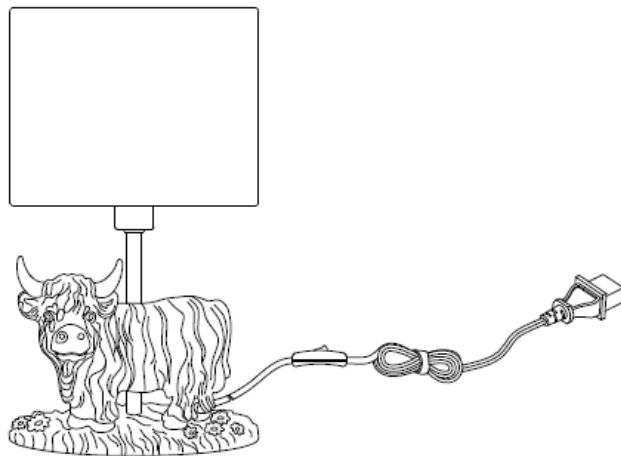

PARTS INCLUDED:

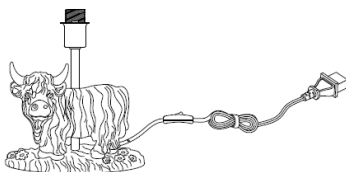 

 (A) Lamp Body

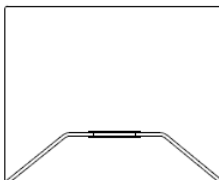

(B) Lamp Shade



(C) Socket Ring

HIGHLAND COW LAMP

Assembly Instructions

URBAN OUTFITTERS

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2

Place the lamp shade (B) on the lamp body (A). Secure the shade by screwing the socket ring (C) onto the lamp Body (A) clockwise until tight.

STEP 3

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 4

Plug into outlet, turn on switch, and enjoy your new lamp.

Use a MAX 25W Type G40 bulb. Do not use bulb that exceeds recommended wattage.

