GUMBALL FLOOR LAMP

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use a 40W (MAX) Type G incandescent bulb or a 6W LED bulb.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.

Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.



PARTS INCLUDED:

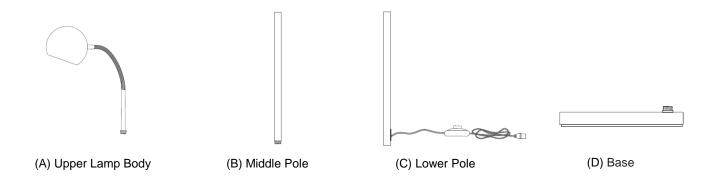

Assembly Instructions

STEP 1

As you unpack and prepare for assembly, place the contents on a carpeted or padded flat surface area.

STEP 2

Screw the Lower pole (C) onto the Base (D).

STEP 3

Screw the Middle Pole (B) to the Lower pole (C).

STEP 4

Screw the Upper Lamp Body (A) to the Middle Pole (B).

STEP 5

Insert the specified light bulb into the socket. DO NOT EXCEED THE SPECIFIED WATTAGE.

STEP 6

Plug into outlet, turn on switch, and enjoy your new lamp.

Use a 40W (MAX) Type G incandescent bulb or a 6W LED bulb. Do not use bulb that exceeds recommended wattage.

