

CHERRY BOW HOOK

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:

 
Drill, Phillips head screwdriver driver, Hammer, Pencil, Level

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

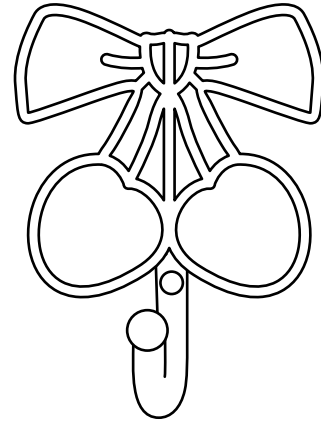

PARTS INCLUDED:

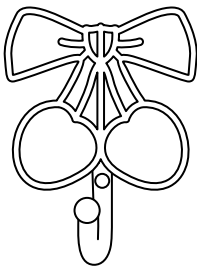 

(A) Hook x 1

[2.75" x 1.40" x 4.30"]
or
[72 x 35 x 110 mm]



(B) Plastic Anchor x 1

[D0.35" x 1.38"] x1
or
[D9 x 35 mm] x1



(C) Screw x 1

[D0.30" x 1.38"] x1
or
[D8 x 35 mm] x1

CHERRY BOW HOOK

 
Assembly Instructions

URBAN OUTFITTERS

STEP 1

Wood or Stud installation:

Insert the screw (C) through the hook (A) into the wall and fasten it with a Phillips head screwdriver or drill.

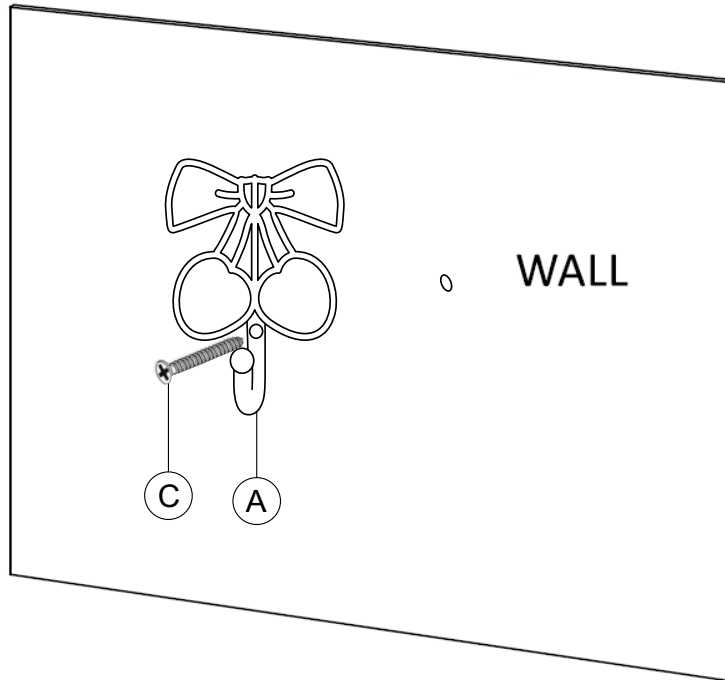

Drywall installation:

Mark the location of the screw hole in the hook (A) on the wall. Insert anchor (B) into the wall at the marked locations using a drill and a hammer. Insert screw (C) through the hook (A) into the anchor, then tighten with a Phillips head screwdriver or drill.

