


Isobel Sectional

URBAN OUTFITTERS

Assembly Instructions

TOOLS REQUIRED BUT NOT INCLUDED:
NA

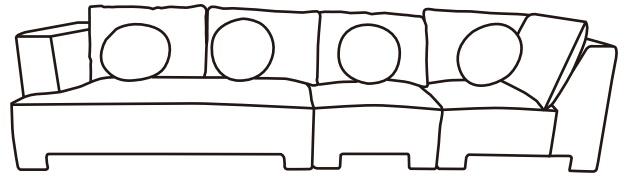


OR

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place overheat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

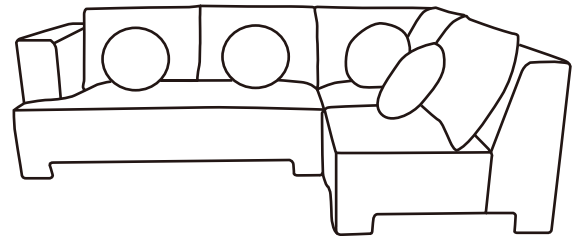


PARTS INCLUDED

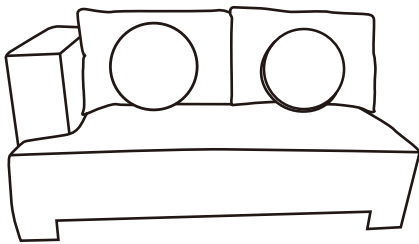

A) Loveseat x 1

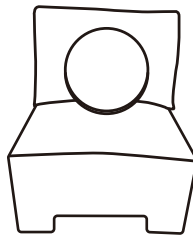

B) Armless x 1

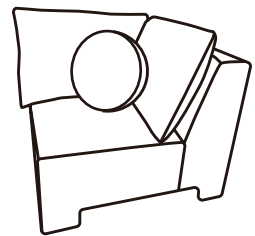


C) Corner x 1

Assembly Instructions

STEP 1

Rotate the clips attached to the bottom of the sectional pieces as shown. Align the clips with the studs attached to adjacent pieces and push the sectional pieces together to connect. Sectional pieces can be connected in either of the orientations shown below.

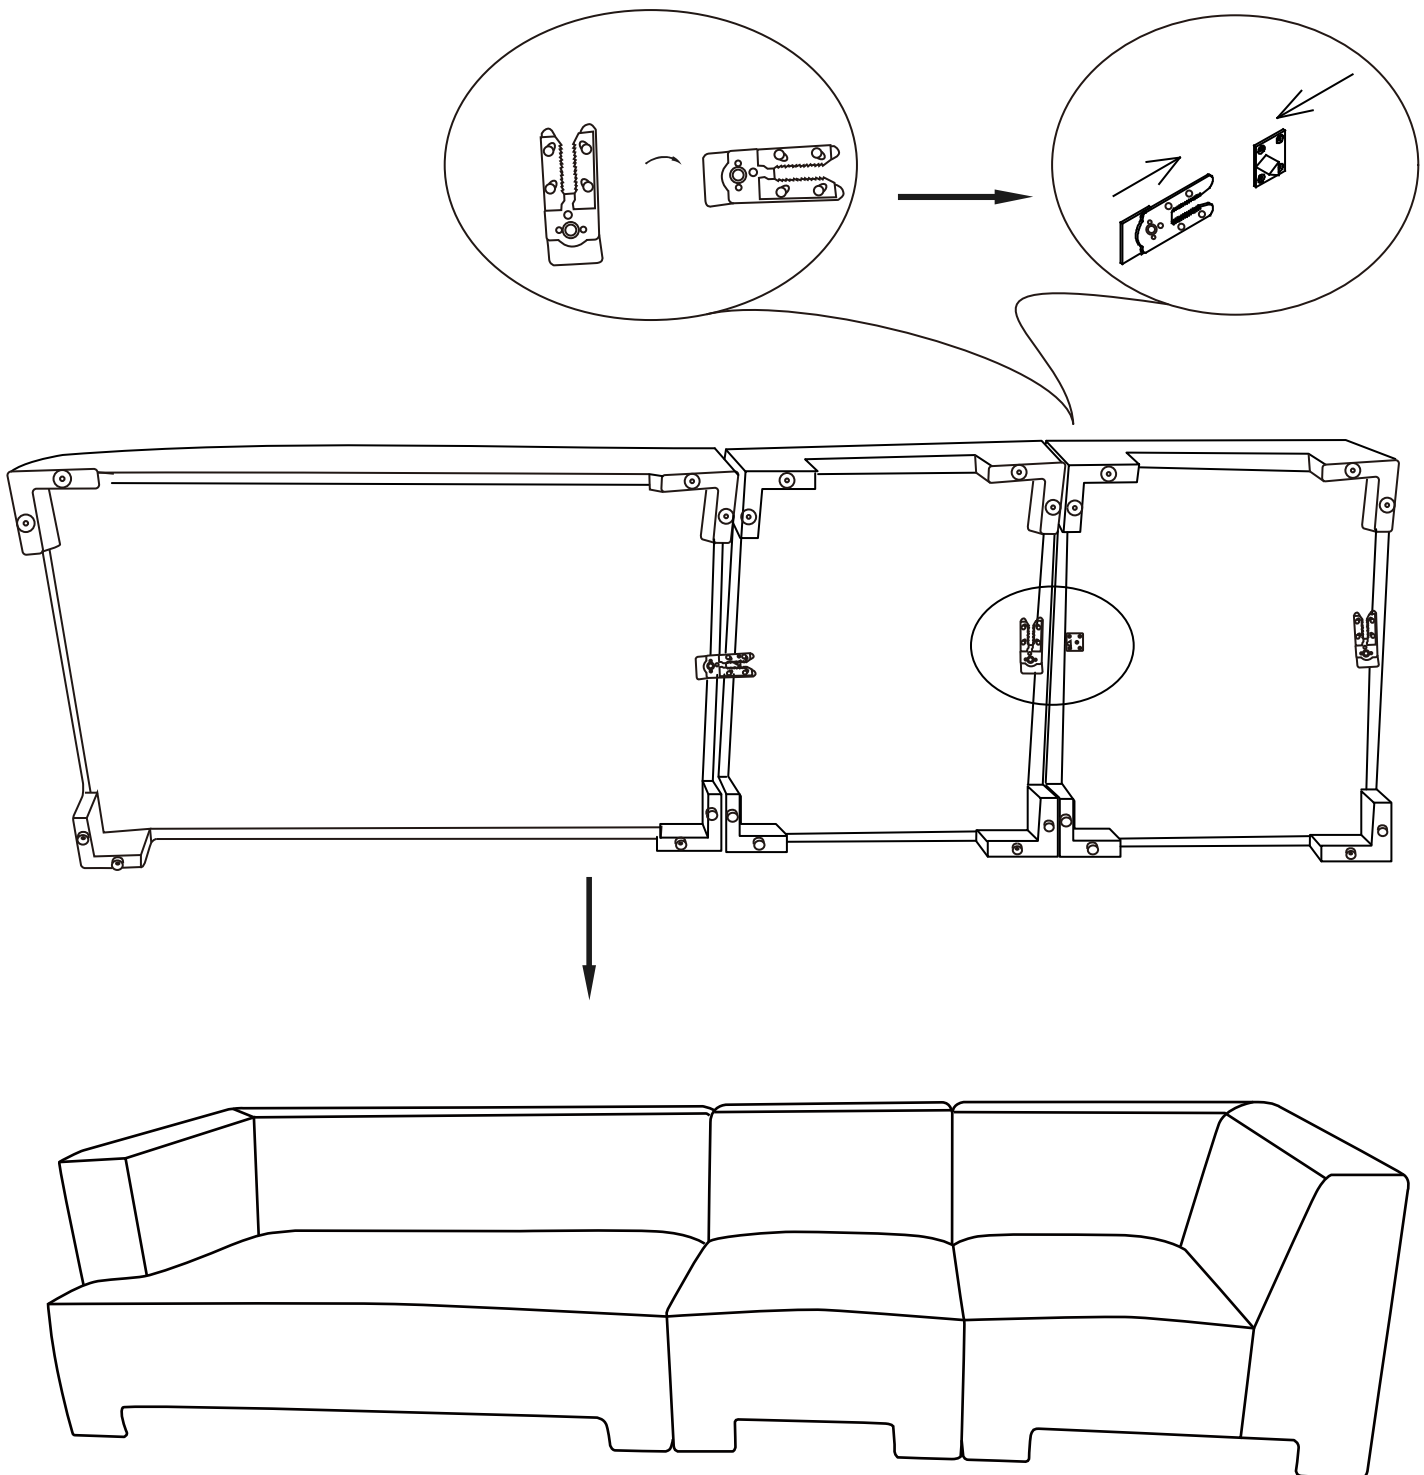


Isobel Sectional

Assembly Instructions

URBAN OUTFITTERS

OR

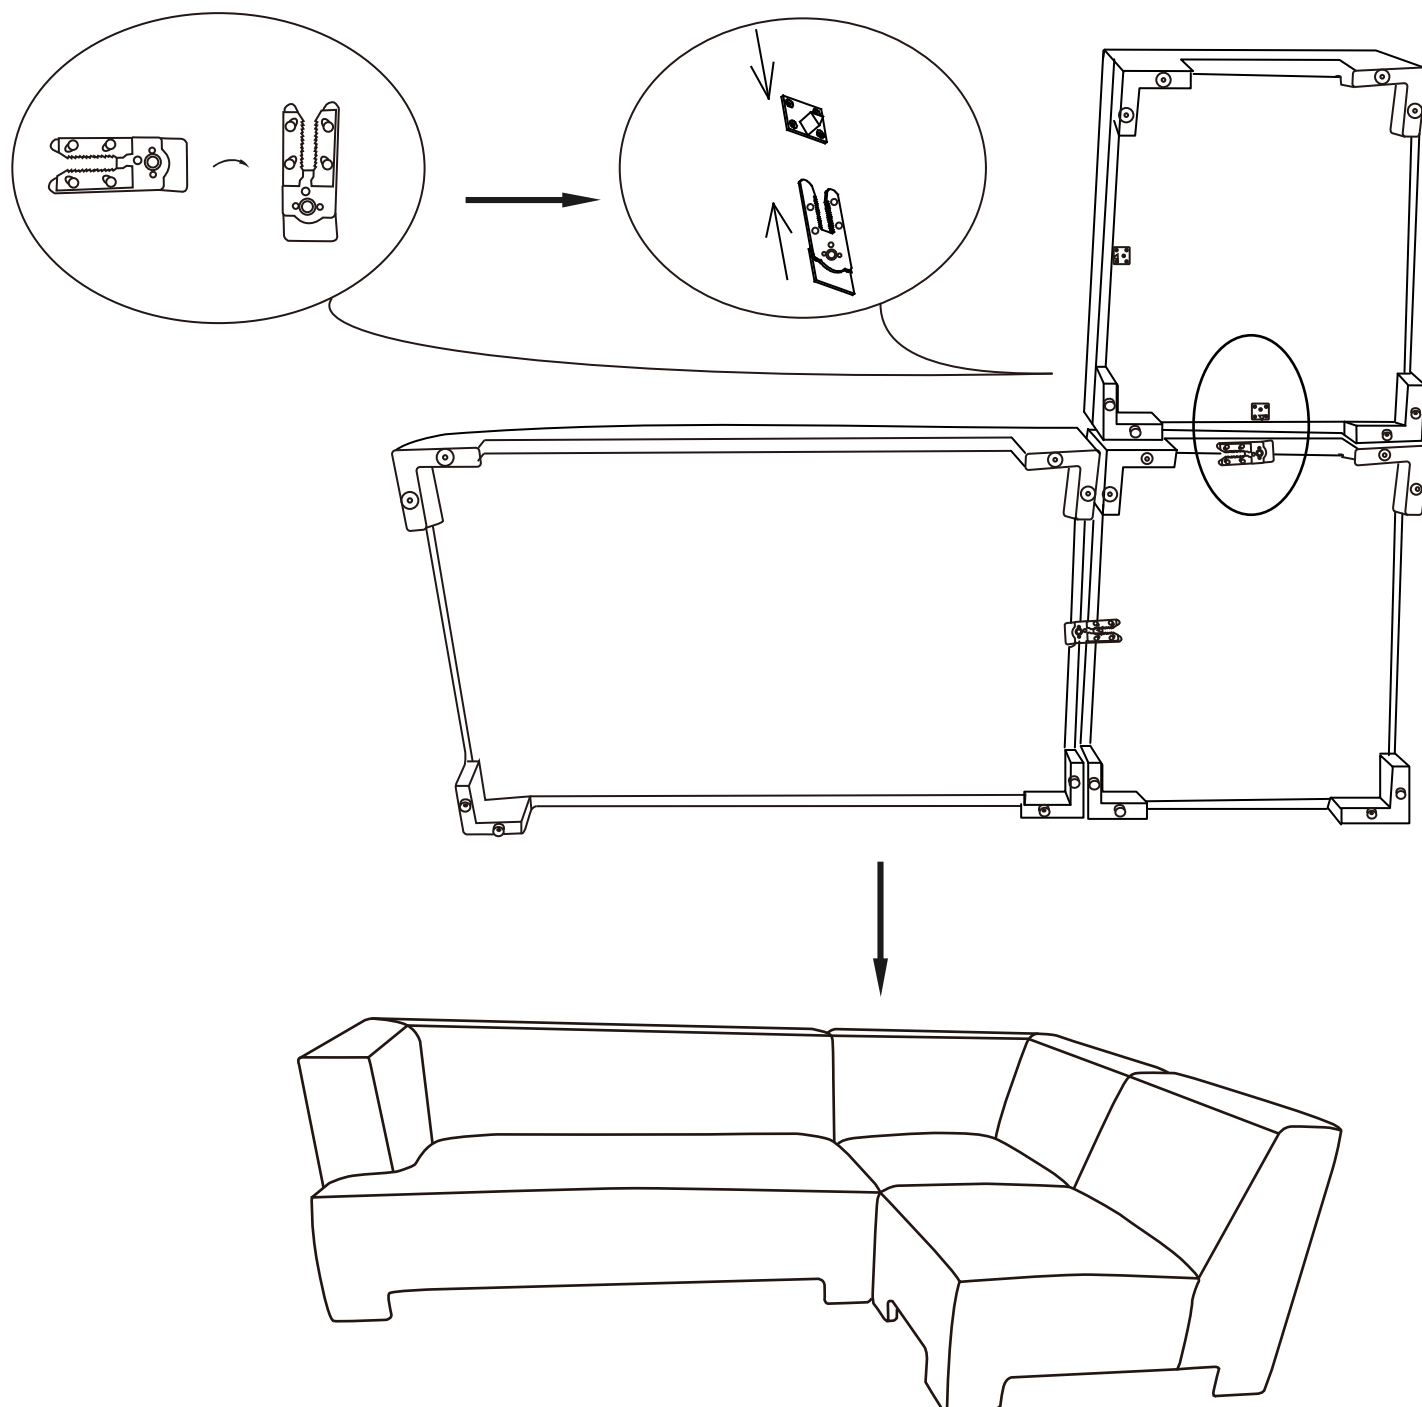


Isobel Sectional

URBAN OUTFITTERS

Assembly Instructions

STEP 3

Place the cushions back onto the couch to complete assembly.

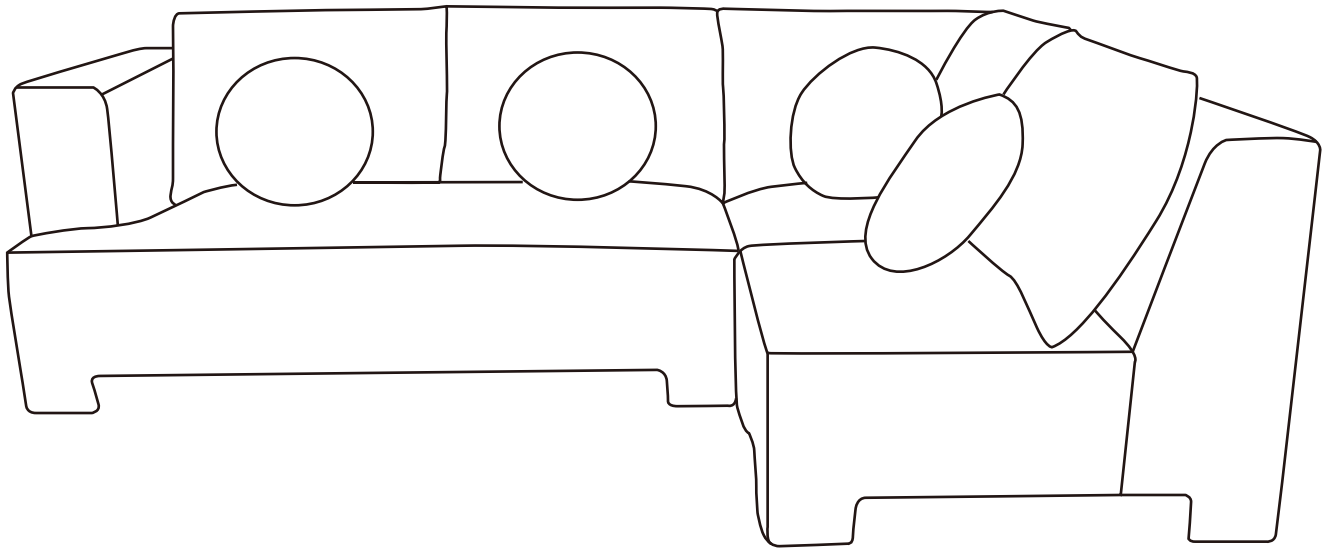

OR

