

Task Lamp

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not discard packing materials and the carton until the assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

Use a 35W (MAX) Type E12 or 9W SB LED bulb.

Do not use a bulb that exceeds the recommended wattage.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Blot spills with a clean, white cloth; do not rub.

Do not use harsh chemicals.

Before cleaning any part, test a small spot in a hidden area.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

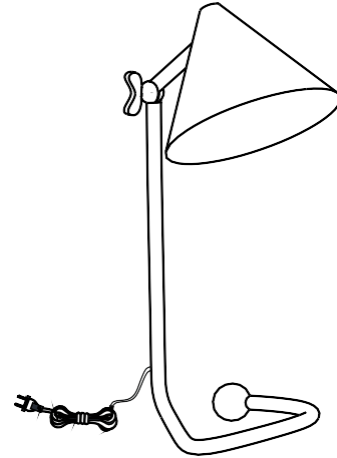

ADJUSTMENTS:

Turn the wingnut clockwise to loosen and adjust the position of the lamp – do not fully loosen the nut. Turn counterclockwise to fix the position of the lamp – do not overtighten the nut.

