

Casper Coffee Table

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.

Do not place over heat or air conditioning vents.


Adjust levelers so that the furniture sits flat on uneven floors.

Blot spills with a clean white cloth, do not rub.


Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.


You may need to re-tighten all bolts after initial use.

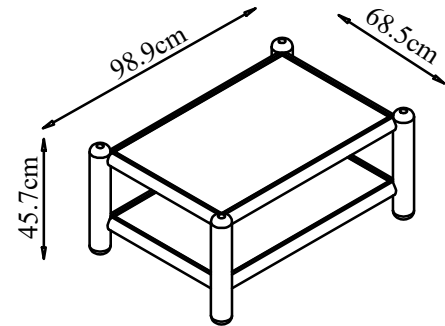

PARTS INCLUDED:

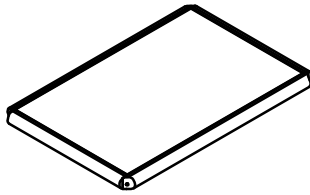

 1) Shelves
(36 x 24 x 2") x 2
or
(91.4 x 61 x 5cm)



2) Legs
(18 x 3 x 3") x 4
or
(45.7 x 7.5 x 7.5cm)



A) Bolt
(D 0.47 / 0.24 x 2.8") x 8
or
(D 12 / 6 x 70 mm)



B) Spring Washer
(D 0.47 / 0.24 x 0.08") x 8
or
(D 12 / 6 x 2 mm)



C) Flat Washer
(D 0.63 / 0.24 x 0.08") x 8
or
(D 16 / 6 x 2 mm)



D) Allen Key
(D 0.16 x 2.32") x 1
or
(D 4 x 59 mm)


Casper Coffee Table

URBAN OUTFITTERS

Assembly Instructions


STEP 1

Attach three legs (2) to one shelf (1), using bolts (A), spring washer (B), flat washer (C) and Allen key (D) as shown.

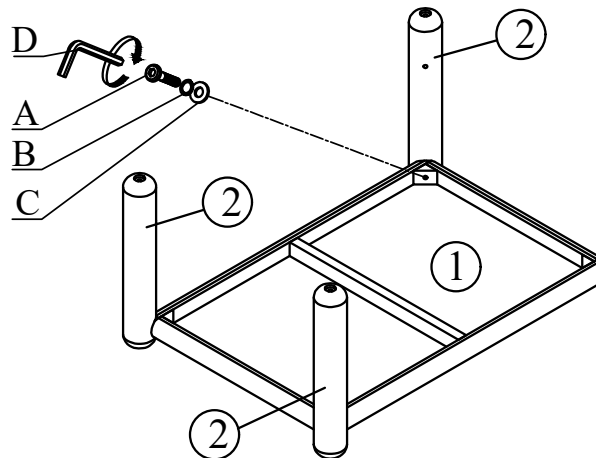

STEP 2

Attach the second shelf (1) to three legs (2), using bolts (A), spring washer (B), flat washer (C) and Allen key (D) as shown. Then, attach the last leg to both shelves (1).

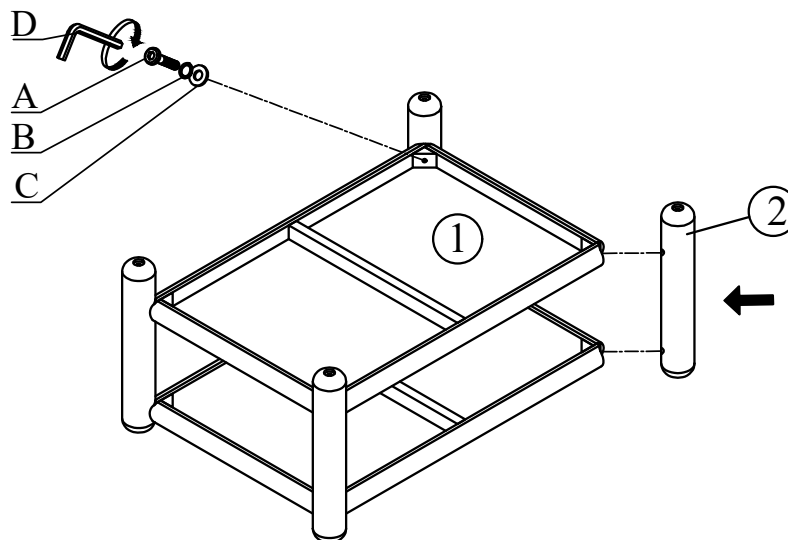

STEP 3

With help, flip the furniture upright to finish assembly.

