

Isobel Dining Table

Assembly Instructions

URBAN OUTFITTERS


NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

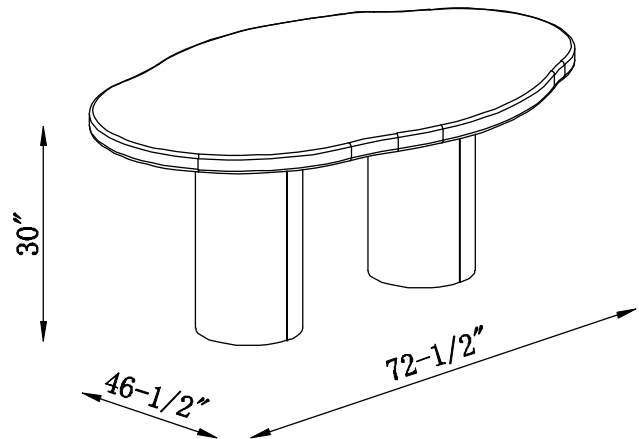

PARTS INCLUDED:

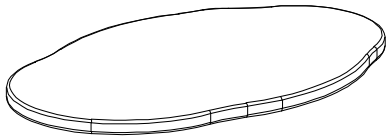


(A) Table top
x1

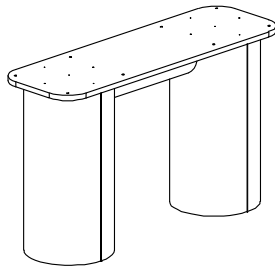

(B) Leg
x1



 (C) Hex key
x1



(D) Bolt
[1/4" x 1-5/9"] x8



(E) Spring washer
[1/4"] x8



(F) Flat washer
[1/4"] x8


Isobel Dining Table

Assembly Instructions

URBAN OUTFITTERS

STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the leg (B) to the table top (A) as shown. Insert the flat washer (F), spring washer (E) and bolt (D). Tighten with supplied hex key (C). Do not over tighten. Then, with help, flip the table upright making sure you do not lean it on its Legs.

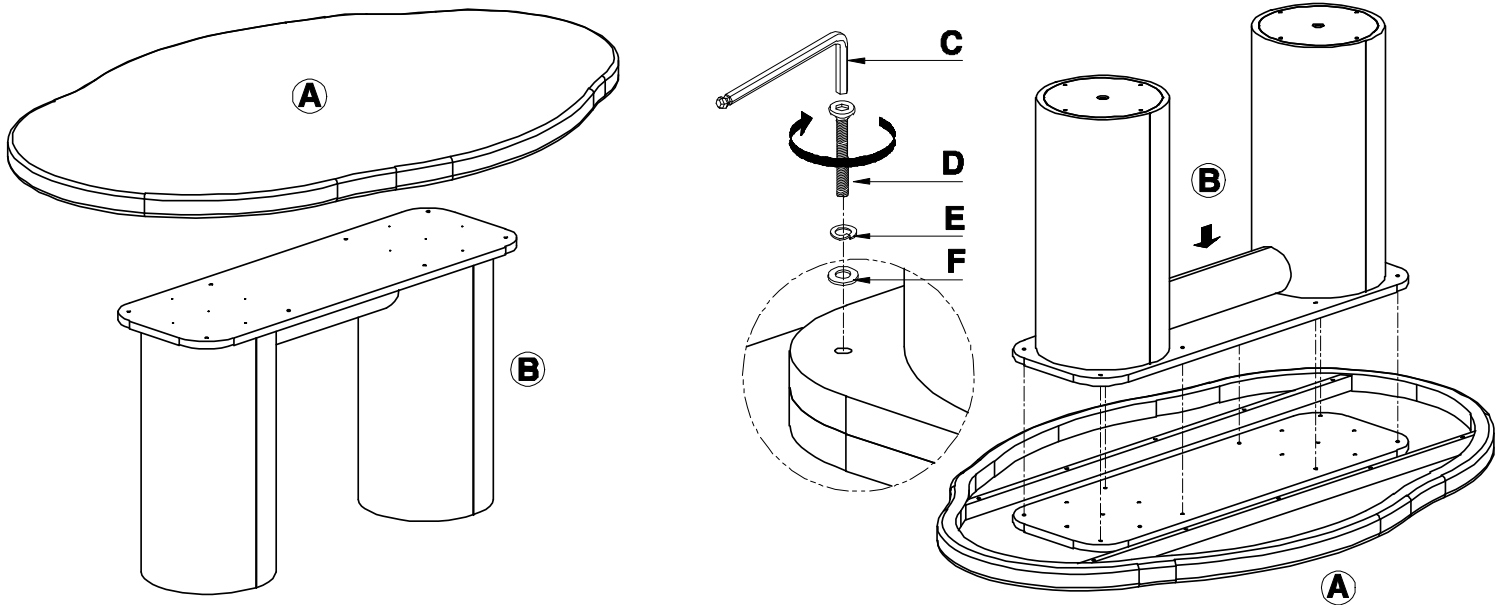

STEP 2

Adjust the levelers as shown below to accommodate uneven floors.

