Cindy Paper Lantern

URBAN OUTFITTERS

Assembly Instructions

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not throw away packing materials and carton until after assembly.

Ensure all parts are present prior to assembly.

Contact customer service immediately if parts are missing.

Assemble all parts on a clean smooth surface.

Use E26 9W bulbs, do not exceed recommended wattage.

Paper shade is delicate, do not over stretch!

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Do not place over heat or air conditioning vents.

Blot spills with a clean white cloth, do not rub.

Do not use harsh chemicals.

Before cleaning any part test a small spot in a hidden area.

You may need to re-tighten all bolts after initial use.

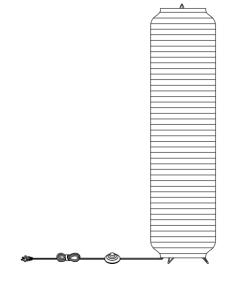

PARTS INCLUDED:







B) Shade



C) E26 9W Bulbs [NOT INCLUDED]



Assembly Set (x1)



F) Flat Washer [D30 x D10.5mm]



F) Butterfly Nut x1



G) Plug Cover

URBAN OUTFITTERS

Assembly Instructions

STEP 1

Screw together metal tube assembly set (D). Then, screw two E26 9 Watt bulbs (C) into the metal tube assembly set.

STEP 2

Insert the metal tube assembly set (D) through the hole in the bracket at the top of Shade (B). Screw the top finial (A) onto the top of the metal tube assembly set.

STEP 3

Insert the metal tube assembly set (D) through the hole in the bracket at the bottom of Shade (B). Insert flat washer (E) and screw the butterfly nut (F) onto the end of the metal tube assembly set. Remove plug cover (G) and insert the plug into an outlet.

WARNING: PAPER SHADE IS DELICATE, DO NOT OVER-STRETCH

