

ISOBEL DINING TABLE

URBAN OUTFITTERS

Assembly Instructions


TOOLS INCLUDED:




Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or Air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

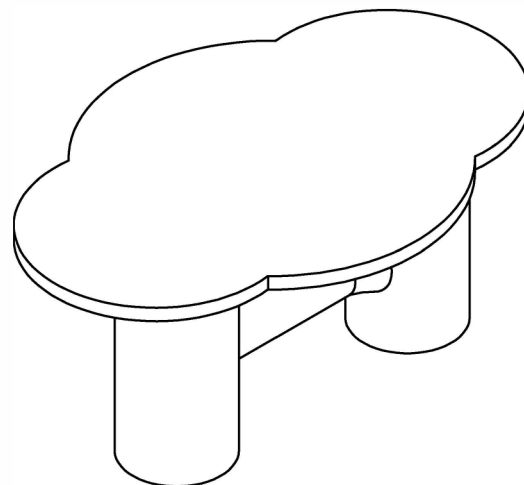

PARTS INCLUDED

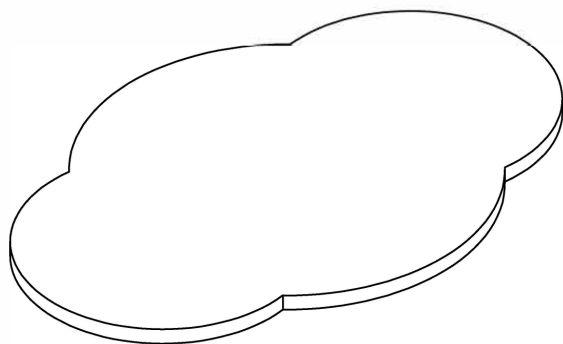

(A) Top Panel
1x

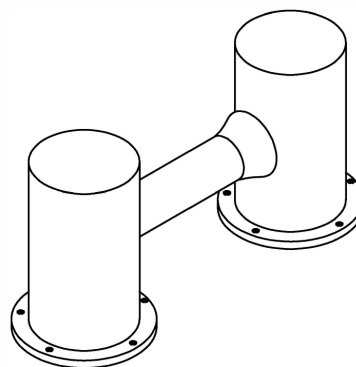

(B) Leg Assembly
1x



(C) Flat Washer
6mm
12x



(D) Bolt
6m x 25mm
12x

Overall Dimensions of the table:

Width = 1838mm/73.3in

Depth= 1177mm/46.3in


Height= 775mm/30.5in

ISOBEL DINING TABLE

URBAN OUTFITTERS

Assembly Instructions

STEP 1. Lay the Top Panel (A) over onto a clean smooth surface. Align Leg Assembly (B) as shown.

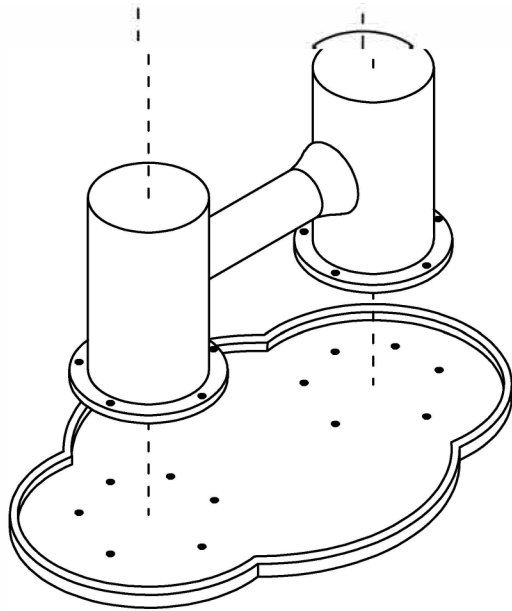

STEP 2. Insert Bolts (D) and Flat Washer (C) as shown. Tighten with supplied Hex Key.

